


AUTOMOTIVE ACCESSORY MANUFACTURERS "fine acrylic products"  
21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND  
P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND  
PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836  
Email [info@airplex.com](mailto:info@airplex.com) [www.airplex.com](http://www.airplex.com)




## FORD RANGER PX 2015+ P/N BG556D

### BONNET GUARD FITTING INSTRUCTIONS: PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 3 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 3 plastic fasteners.
4. Fit Bonnet Guard in position, and fasten securely with supplied screw. Note sequence as per diagram as below.

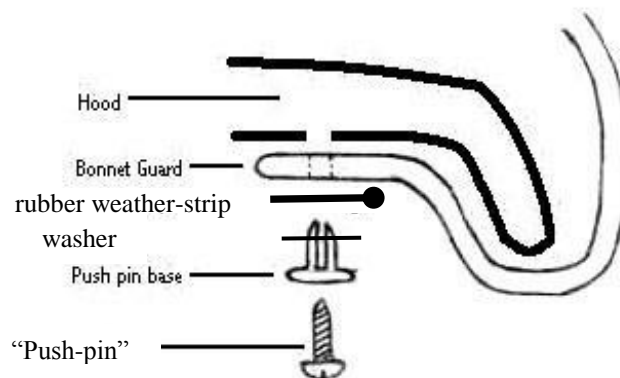

5. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

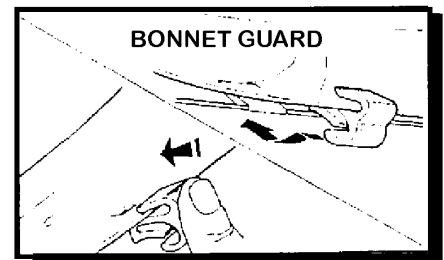

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD