

AUTOMOTIVE ACCESSORY MANUFACTURERS "fine acrylic products"
21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND
P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND
PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836
Email info@airplex.co.nz, www.airplex.co.nz




BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

HONDA CRV 2007 ON

(p/n BG476D)

1. Open the Bonnet and put the Bonnet Guard in place ensuring that it is centrally located.
2. Insert the plastic grommet through the supplied stainless washer and through the Bonnet Guard.
3. Firmly fasten using screws provided.
4. Stick the anti-abrasive tape on edge of Bonnet where plastic fastening clip secures the Bonnet Guard near the fenders.
5. Snap plastic clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.
6. It is the drivers responsibility to regularly check that the Bonnet Guard never touches the Bonnet. Replacement parts are readily available from the Distributor.
The Bonnet Guard should not come into contact with the Bonnet paintwork at any time.

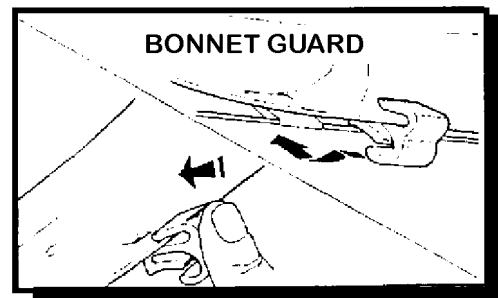

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorisation by or association with any automobile manufacturer is implied.

CAUTION: FOR VEHICLES WITH BONNET TURBO INTAKES, PLEASE CHECK SUITABILITY OF THIS PRODUCT WITH YOUR SERVICE TECHNICIAN.