


# HYUNDAI SANTA-FE

(p/n BG459D) FIT432


## BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 4 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Remove 4 plastic fasteners.
4. Fit Bonnet Guard in position, and fasten securely with supplied screw.  
Note sequence as per diagram as below.

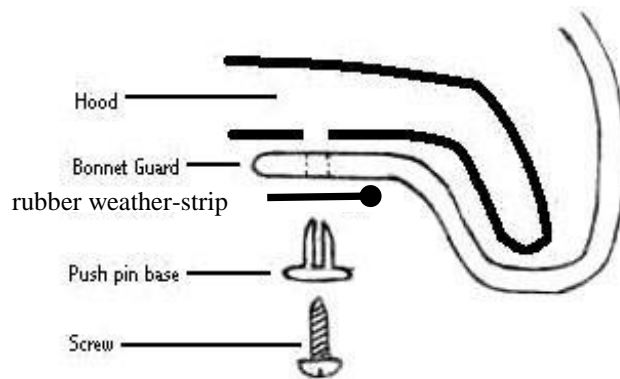

5. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

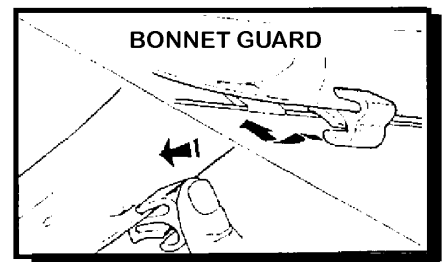

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

