


## BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.


### KIA SPORTAGE 2016+ P/N BG568DW

1. Clean and open bonnet.

2. Fit the Bonnet Guard in position, with the holes in the Bonnet Guard lining up with the holes in the bonnet & fasten securely with supplied plastic "push pins".

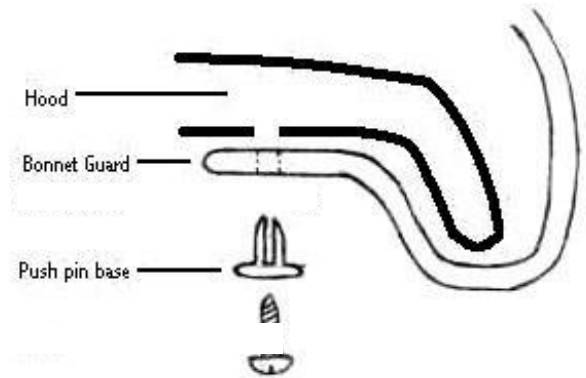

3. Fit the plastic "W" clips to the holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

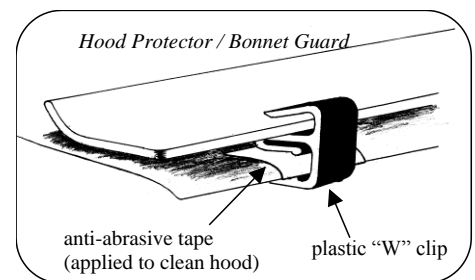

**CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.  
NEVER PRESS ON THE HOOD PROTECTOR.**

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorisation by or association with any automobile manufacturer is implied.