

**BONNET GUARD FITTING INSTRUCTIONS:**  
PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

FIT263


**LANDROVER DISCOVERY 3**  
**P/N BG462D**

1. Clean vehicle bonnet.
2. Open the bonnet and place the Bonnet Guard on the bonnet.
3. Note the 3 pre-drilled holes in the Bonnet Guard that correspond with the holes in the bonnet.
4. Remove the Bonnet Guard and insert the 3x white plastic "grommets" into the bonnet holes.
5. Place Bonnet Guard on the bonnet and fasten Bonnet Guard to bonnet with the supplied screws and washers.

**Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet.** If so, insert the bonnet guard between the bonnet and the weather-strip

6. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first
7. Snap plastic clip into hole position on Bonnet Guard (as shown below), over the anti-abrasive tape.

The Bonnet Guard should not come into contact with the hood paintwork at any time.

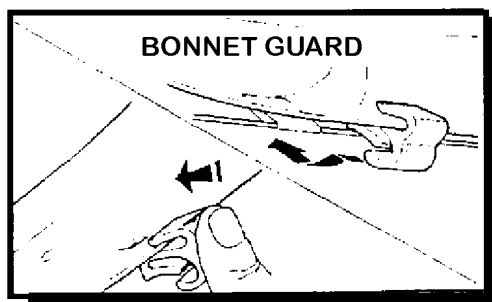

**Bonnet adjustment:**

After fitment of Bug Guard, it is important to check if there is sufficient room between the hood and the grille. Close hood slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the hood stops to allow more room.

***CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.***  
***ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.***  
***NEVER PRESS ON THE HOOD PROTECTOR.***

**CAUTION:** FOR VEHICLES WITH *BONNET TURBO INTAKES*, PLEASE CHECK SUITABILITY OF THIS PRODUCT WITH YOUR SERVICE TECHNICIAN.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.