

Airplex INDUSTRIES LIMITED


FIT407
AUTOMOTIVE ACCESSORY MANUFACTURERS "fine acrylic products"
21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND
P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND
PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836
Email info@airplex.co.nz, www.airplex.co.nz



BONNET GUARD FITTING INSTRUCTIONS: PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.


FREELANDER (P/N BG399DW) ** NO DRILL FIT **

1. Clean & open the hood.
2. Position the hood protector such that holes in hood protector align with holes on the underside of the hood.
3. Use the supplied self-tapping screws & washers to fasten the hood protector to bonnet.
4. Stick the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
5. Snap plastic clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.
6. Fit "Bumpon™" to each fender: These protective adhesive domes **MUST be fitted to the hood in such positions as not to allow** possible damage to the hood by rubbing.
THE BONNET GUARD MUST NOT TOUCH THE HOOD WHEN IN USE.
7. To apply the Bumpons™, the hood must be dry and clean of dirt, grease, polish, or water. When the Bumpon™ positions have been decided, clean these areas with the Alcohol Prep Pads supplied, and apply the Bumpons™ to the hood.

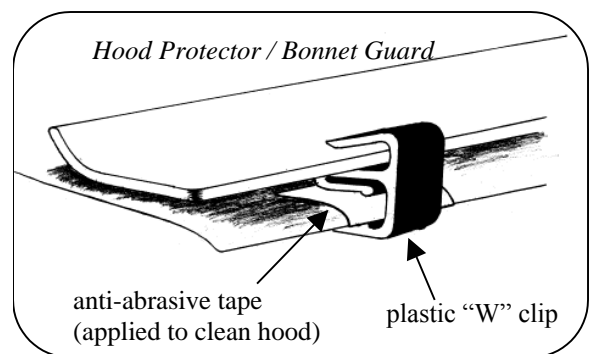

It is the driver's responsibility to regularly check that the Bumpons™ are in place and that the Bonnet Guard never touches the hood. Replacement parts are readily available from the Distributor.

The Bonnet Guard should not come into contact with the hood paintwork at any time.

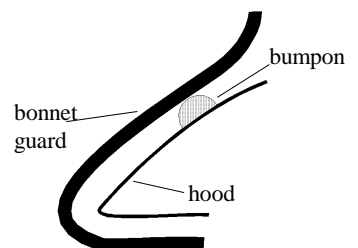

Hood adjustment: After fitment of Bug Guard, it is important to check if there is sufficient room between the hood and the grille. Close hood slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the hood stops to allow more room.

CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.
NEVER PRESS ON THE HOOD PROTECTOR.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.

CAUTION: FOR VEHICLES WITH BONNET TURBO INTAKES, PLEASE CHECK SUITABILITY OF THIS PRODUCT WITH YOUR SERVICE TECHNICIAN.