



ⓐ Fitting Instructions:	SIDE BAR
ⓓ Montageanleitung:	SCHWELLERROHR
Ⓝ Montagevoorschrift:	SIDE BAR
ⓕ Instructions de montage:	MARCHE-PIEDS
ⓔ Instrucciones de montaje:	JUEGO DE TUBOS LATERALES
Ⓛ Schema di montaggio:	PEDANE LATERALI
Ⓢ Manual:	SIDOFOTSTEG

Citroen Berlingo 2008 → Peugeot Partner 2008 →



Type Nr.: CB/17/Ausf.: A
Best.-Nr.: CIT 1231




30 Min.



All rights reserved to modify the text

Type Nr.: CB/17/Ausf.: A

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
Herramientas necesarias / Utensile necessarie / Verktug somskrävs

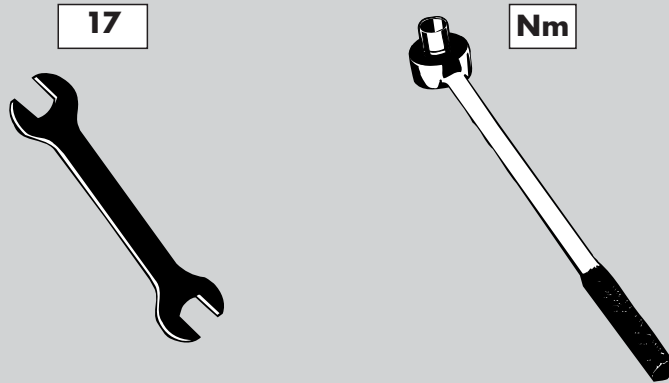

COBRA
TECHNOLOGY & LIFESTYLE

Ⓞ Fitting Instructions: SIDE BAR
 Ⓞ Montageanleitung: SCHWELLERROHR
 Ⓞ Montagevoorschrift: SIDE BAR
 Ⓞ Instructions de montage: MARGE-PIEDS
 Ⓞ Instrucciones de montaje: JUEGO DE TUBOS LATERALES
 Ⓞ Schema di montaggio: PEDANE LATERALI
 Ⓞ Manual: SIDOFOTSTEG

Citroen Berlingo 2008→
Peugeot Partner 2008→

Type Nr.: CB/17/Ausf.: A
Best.-Nr.: CT 1231

30 Min.











TMV

All rights reserved to modify the text

ISSUE 1

16.06.2008

Parts list / Teileliste / Onderdelenlijst / Liste de pièces
Lista de accesorios / Lista di pezzi / Artikel lista

1	 Schwellerrohr	2 x	6	 M 10 x 25	2 x
2	 Front	2 x	7	 ø 10,2	10 x
3	 Rear	2 x	8	 ø 10,4	2 x
4	 M 10	4 x	9	 M 10	4 x
5	 M 10	2 x	10	 M 10 x 25	4 x

