



L200 Series 6 - 2019 On

NLG Black Head Lamp Trim Set

Fitting Instructions

Part Number: L200-19HLC/BLACK#






Take the first head lamp trim out of the box and peel back a small tab on each section of the adhesive tape on the rear of the trim as shown in the image below.



Offer the head lamp trim into position on the bonnet of the vehicle leaving the tabs exposed.

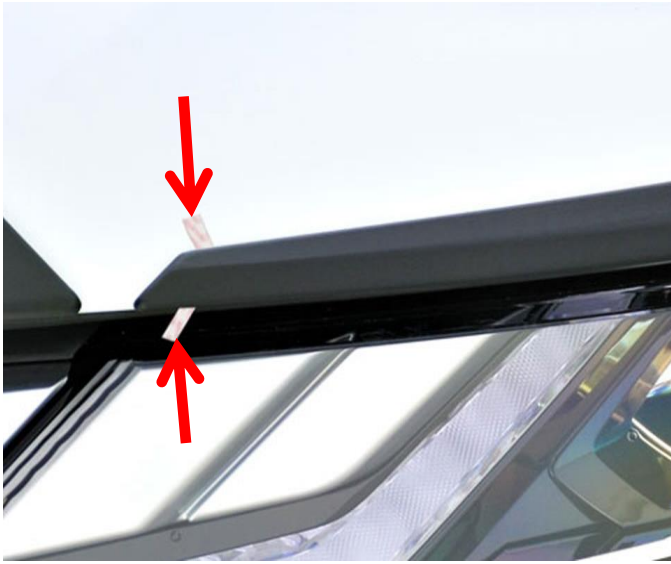

Once happy with the positioning of the head lamp trim pull each of the tabs to fully expose the adhesive tape on the rear of the trim. Press firmly around the edge of the head lamp trim to ensure the adhesive has made contact with the bonnet.



If the ambient temperature of the working area is below 10°C it is recommended that application of heat is used to promote adhesion. A heat gun (shown in “Tools Required” section) is sufficient to provide enough heat to allow the adhesive tape to set.

Repeat process for second trim.