

# Mountain Top® Roll

Installation manual








VIDEO GUIDE



DOWNLOAD PDF


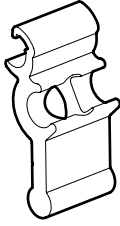
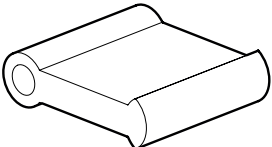
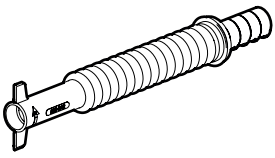


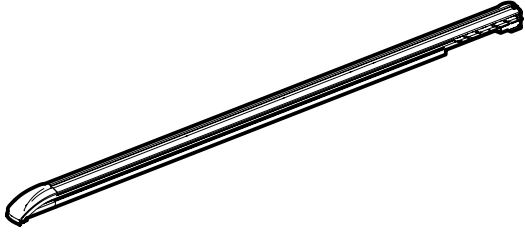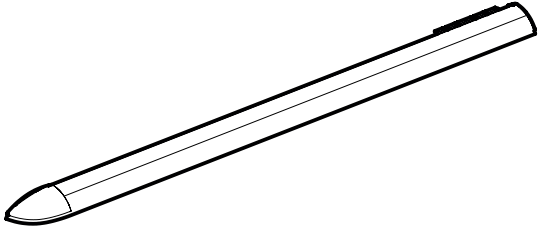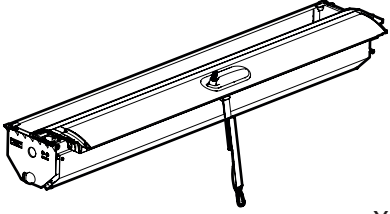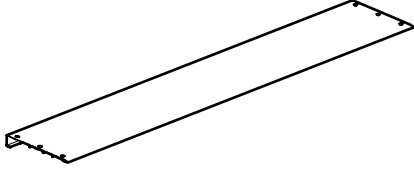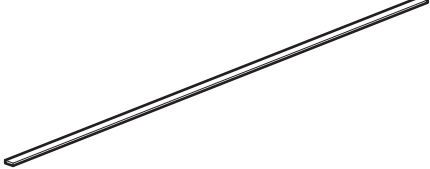

Parts

<p><b>A</b></p>  <p>x 1</p>	<p><b>B</b></p>  <p>x 1</p>	
<p><b>C</b></p>  <p>x 1</p>	<p><b>D</b></p>  <p>x 1</p>	<p><b>E</b></p>  <p>x 1</p>




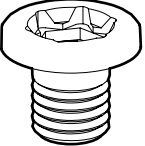
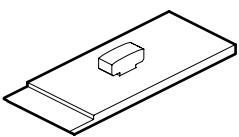
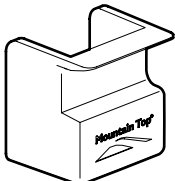

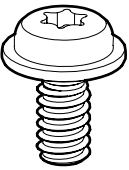



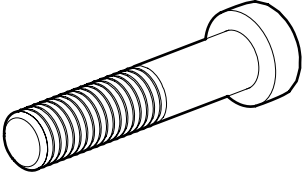
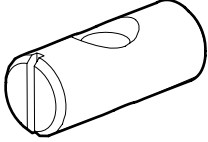

Kit



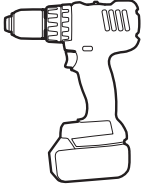
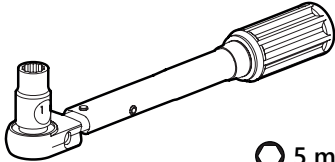









<p><b>F</b></p>  <p>x 6</p>	<p><b>G</b></p>  <p>x 6</p>	<p><b>H</b></p>  <p>x 6</p>
<p><b>I</b></p>  <p>x 2</p>	<p><b>J</b></p>  <p>x 1</p>	<p><b>K</b></p>  <p>x 1</p>





Kit



<p><b>L</b></p>  <p>x 12</p>	<p><b>M</b></p>  <p>x 6</p>	<p><b>N</b></p>  <p>x 6</p>	<p><b>O</b></p>  <p>x 6</p>
<p><b>P</b></p>  <p>x 2</p>	<p><b>Q</b></p>  <p>x 2</p>	<p><b>R</b></p>  <p>x 1</p>	<p><b>S</b></p>  <p>x 4</p>

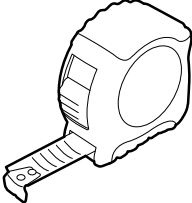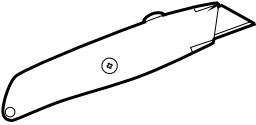
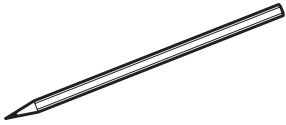
 Kit		
<b>T</b>  x 6	<b>U</b>  x 6	<b>V</b>  x 6




 Tools and materials needed		
 10 mm  Ø 24 mm	1 - 25 Nm  ○ 5 mm ★ T15	  Rust protection Rostschutzmittel Anti-rouille Anti roest
	 H <sub>2</sub> O	
	 LOCTITE 243	  SILICONE OIL


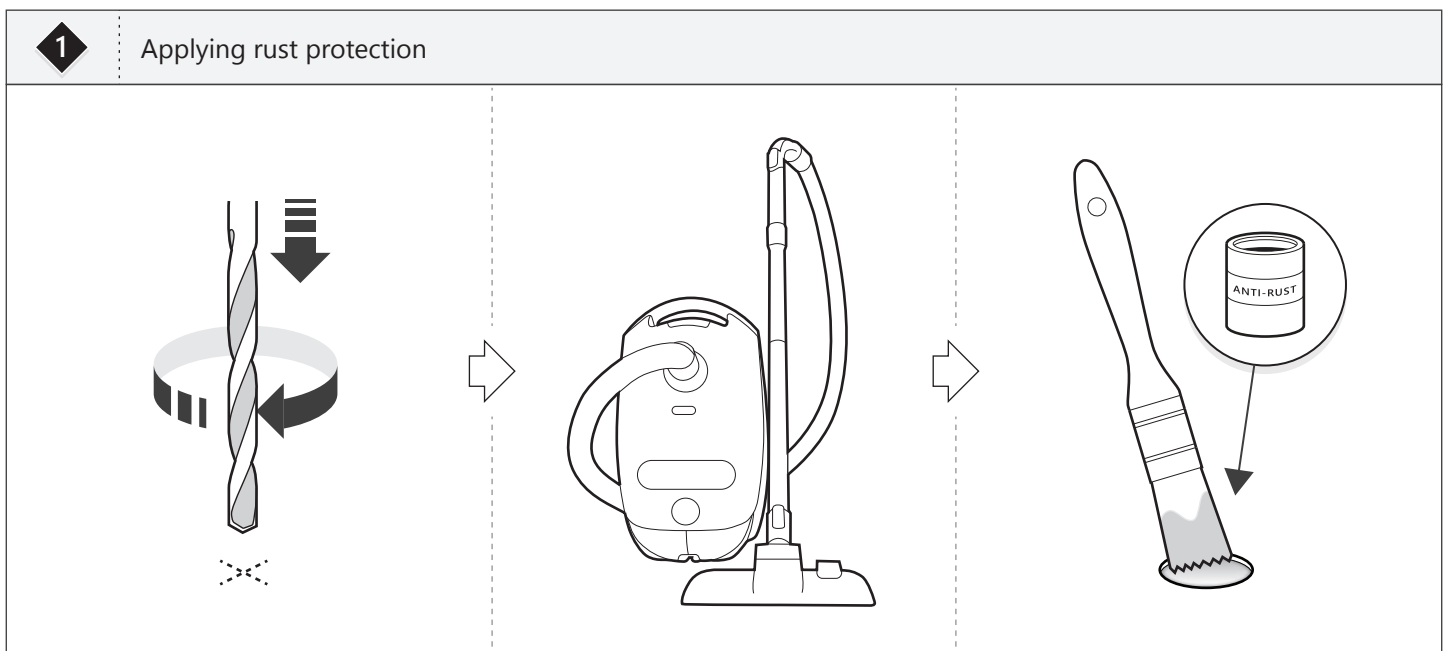


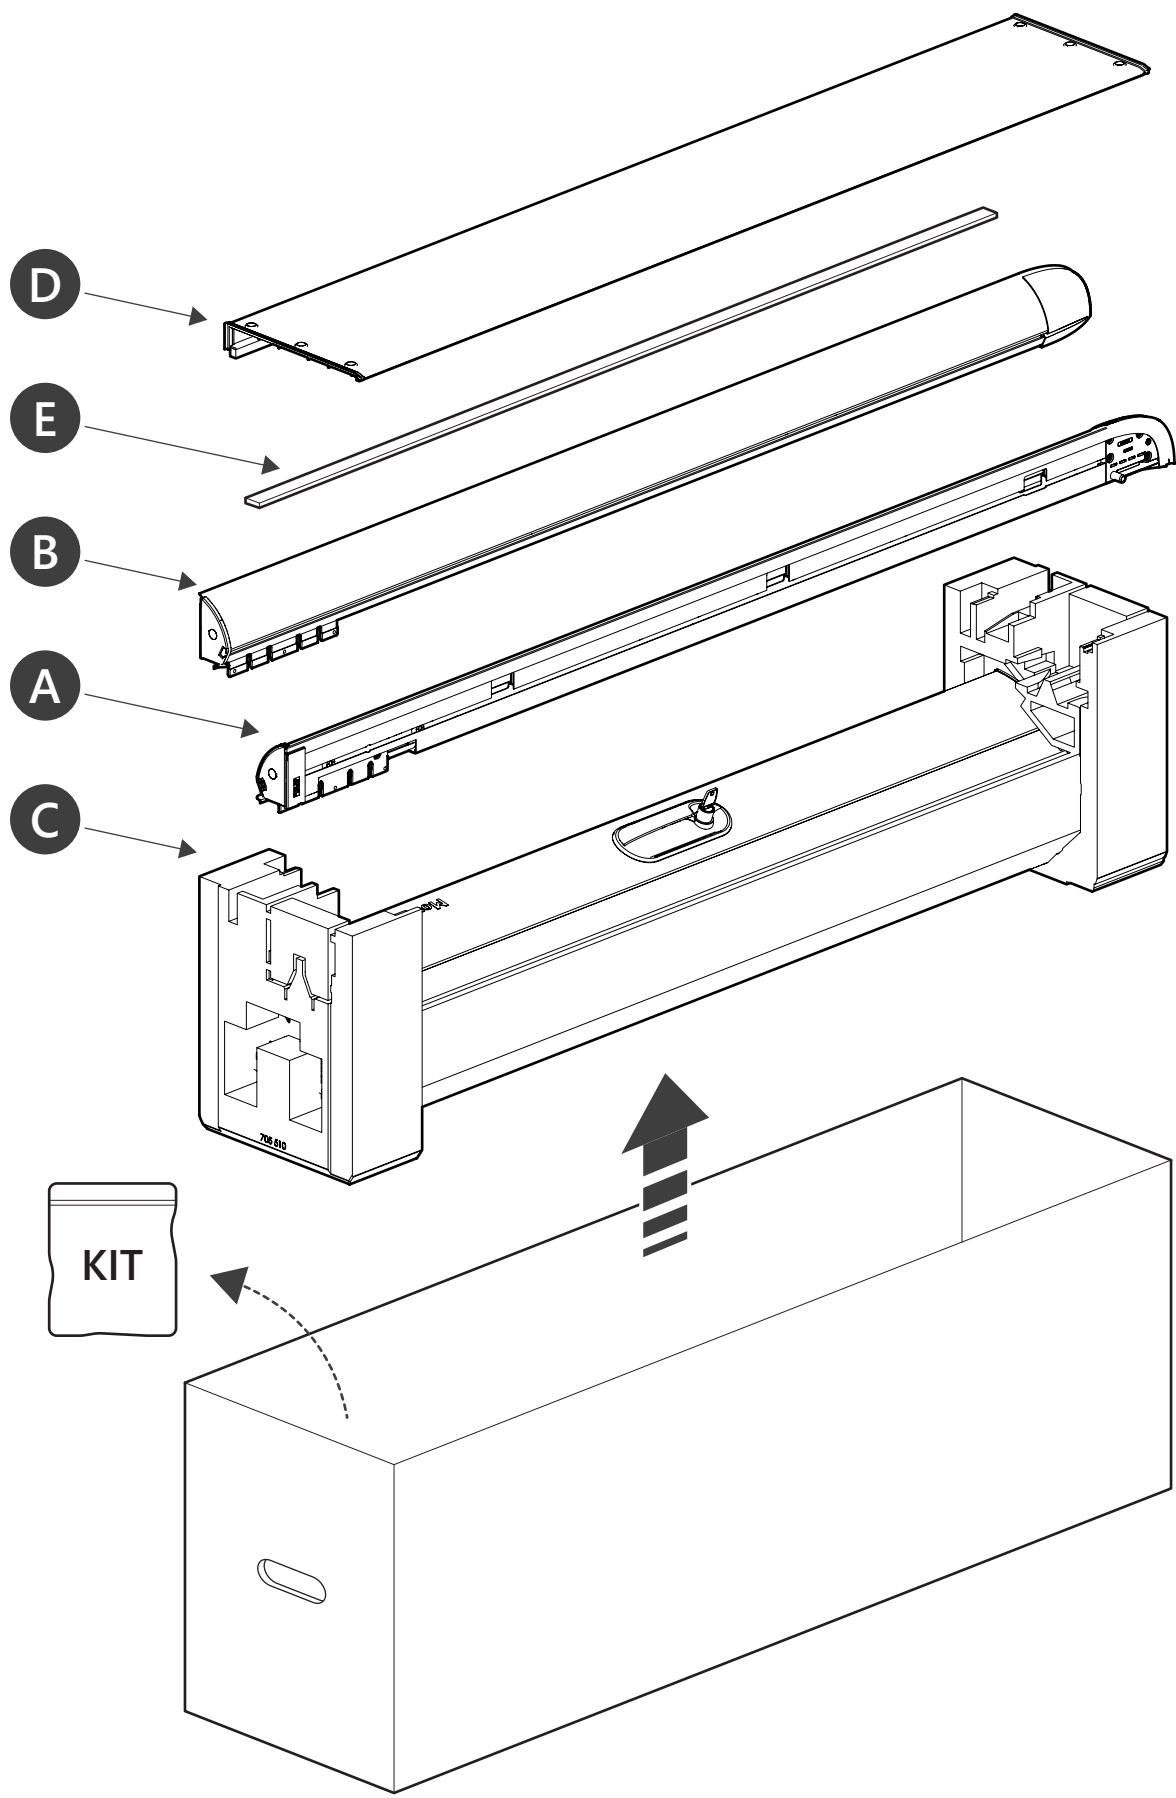

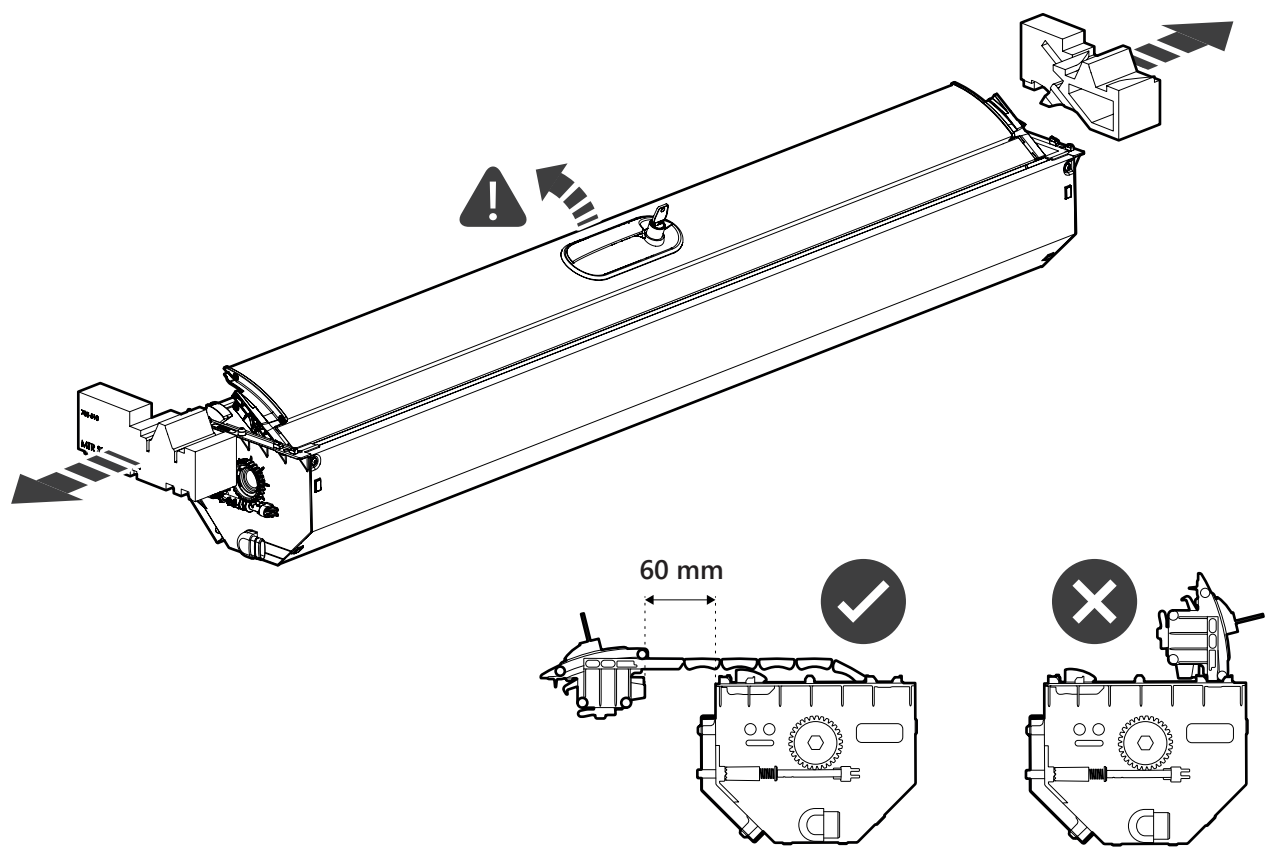
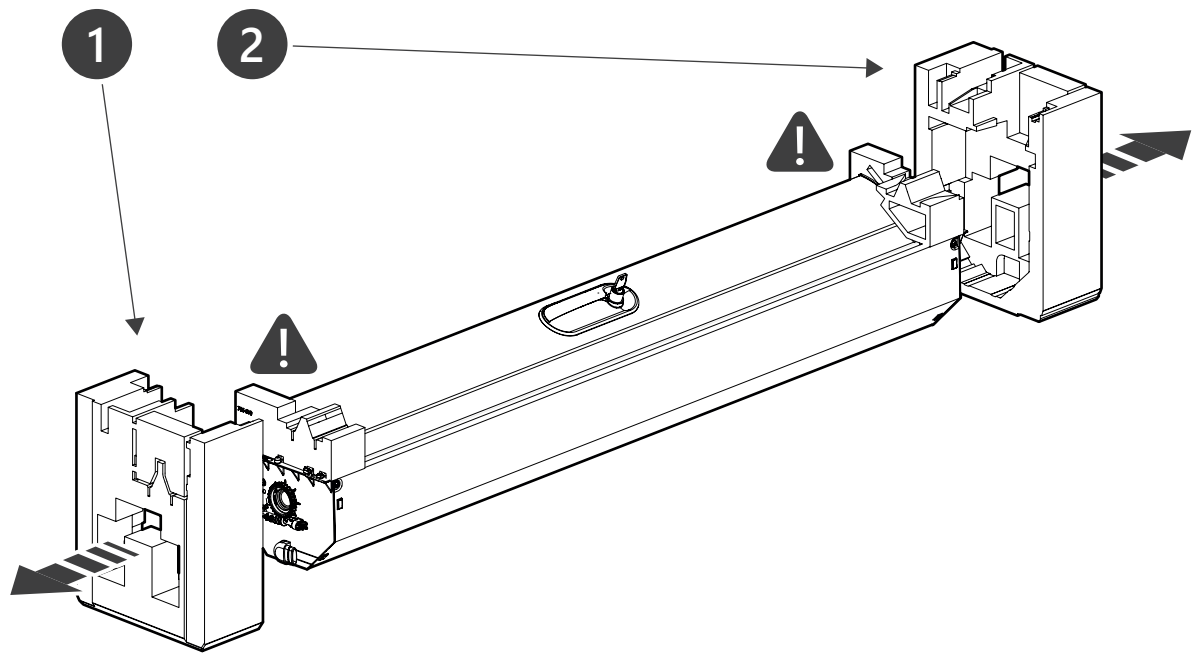


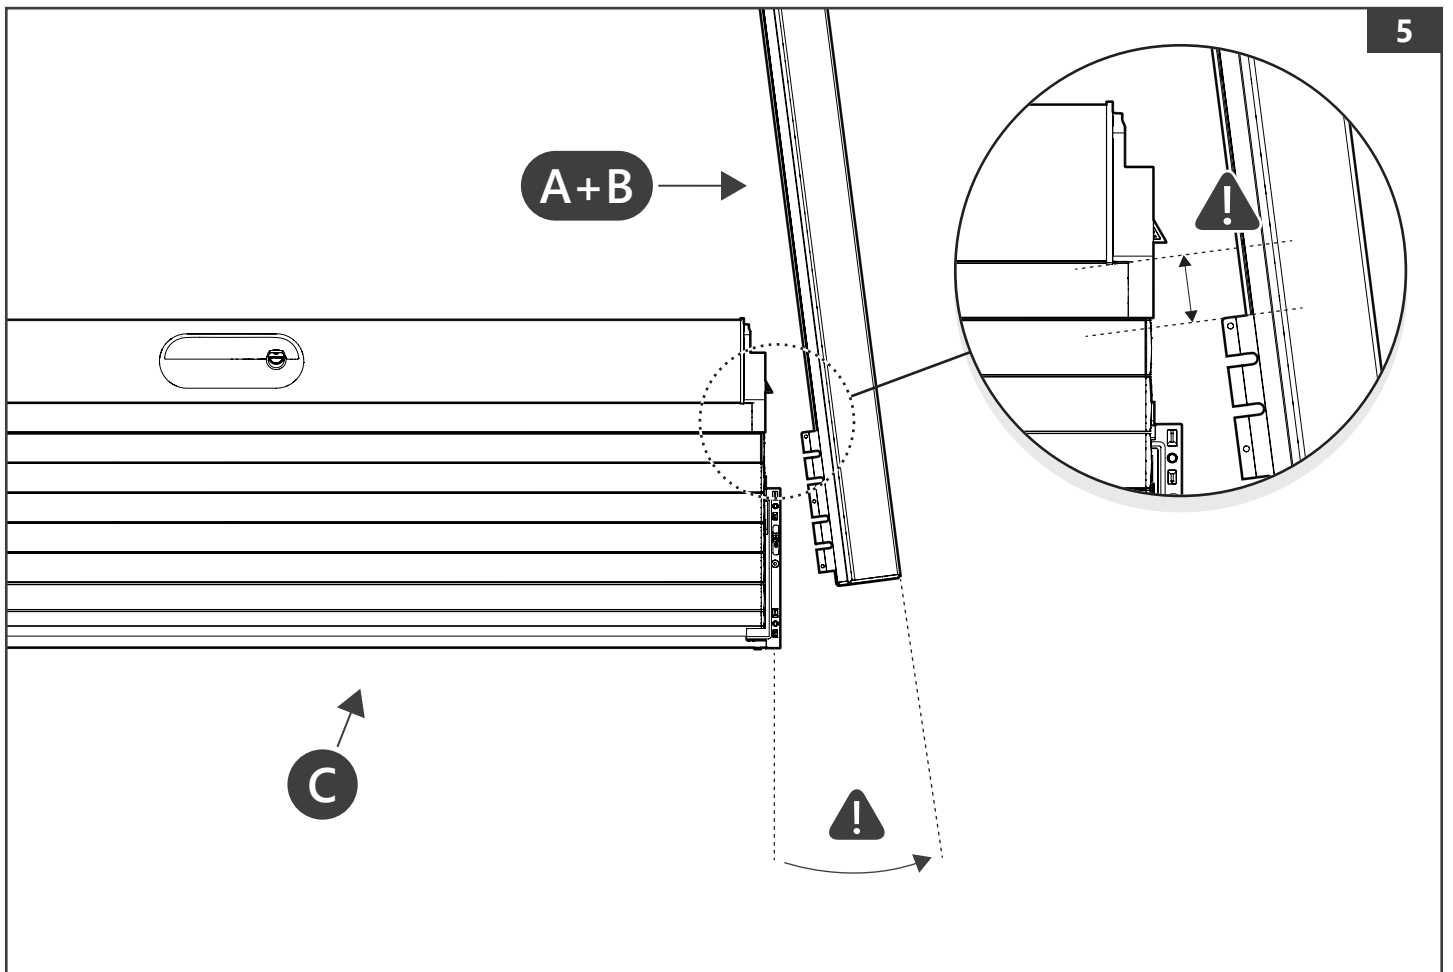
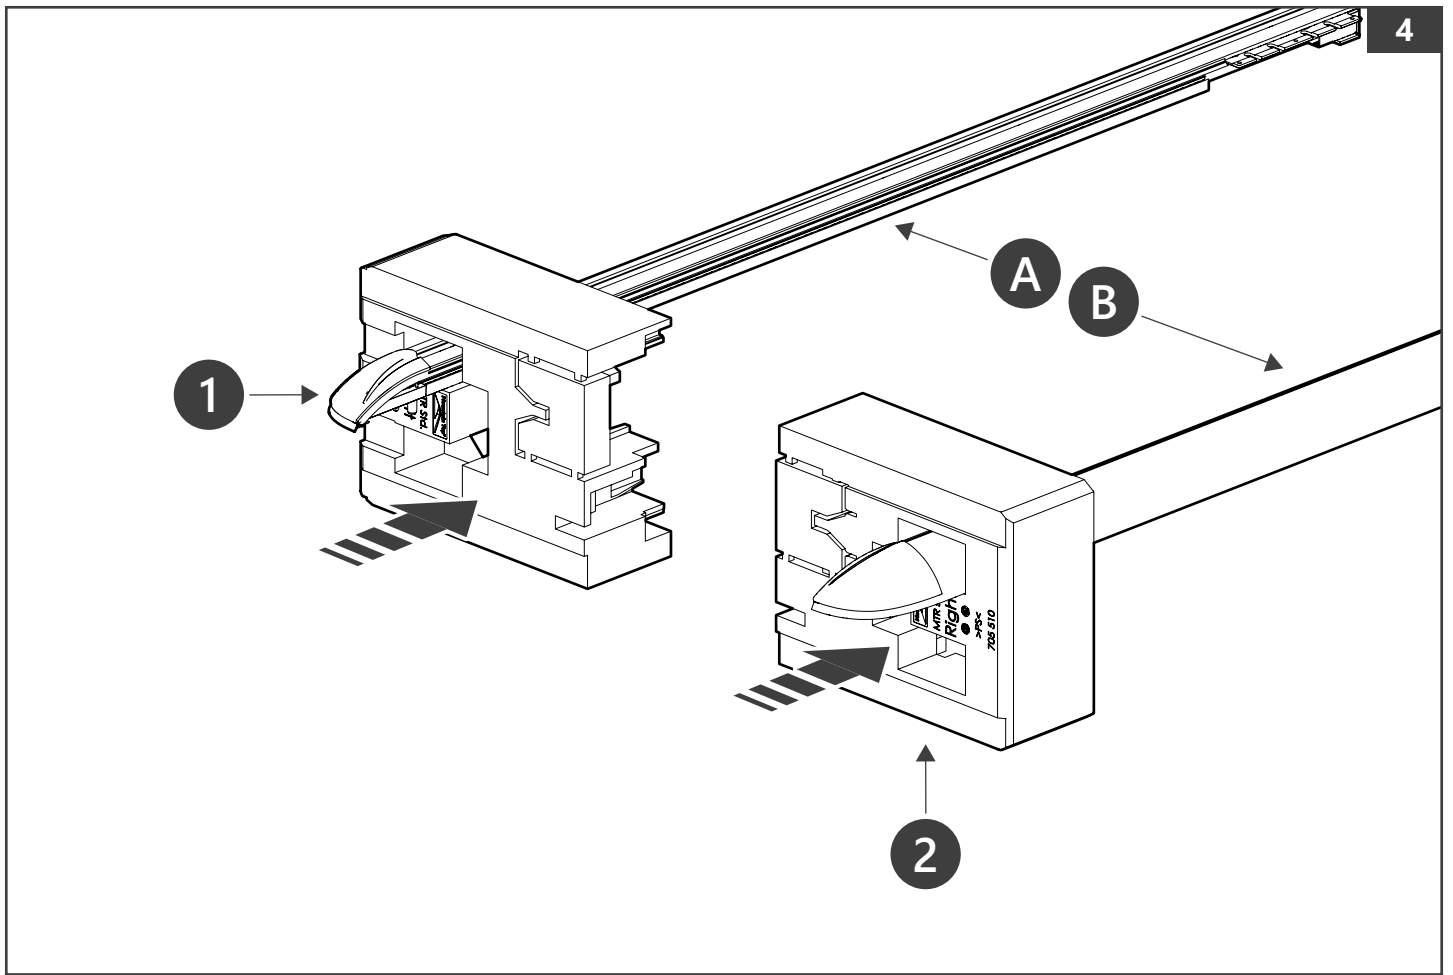


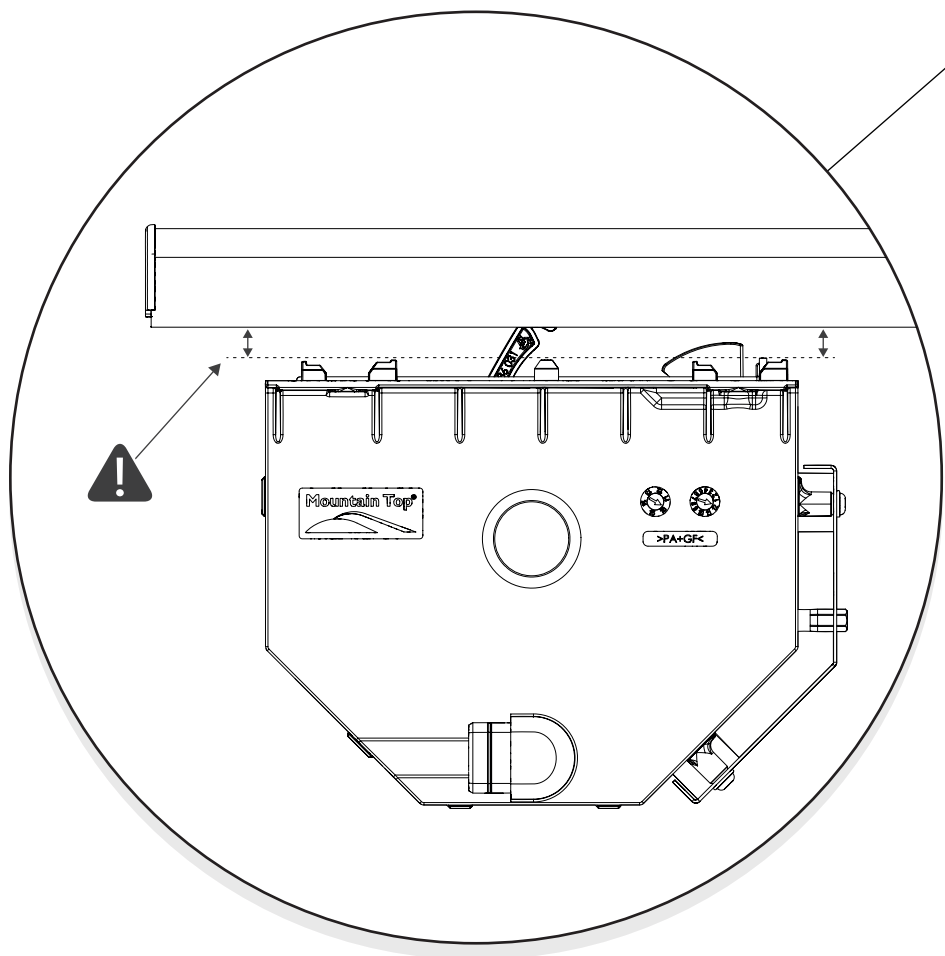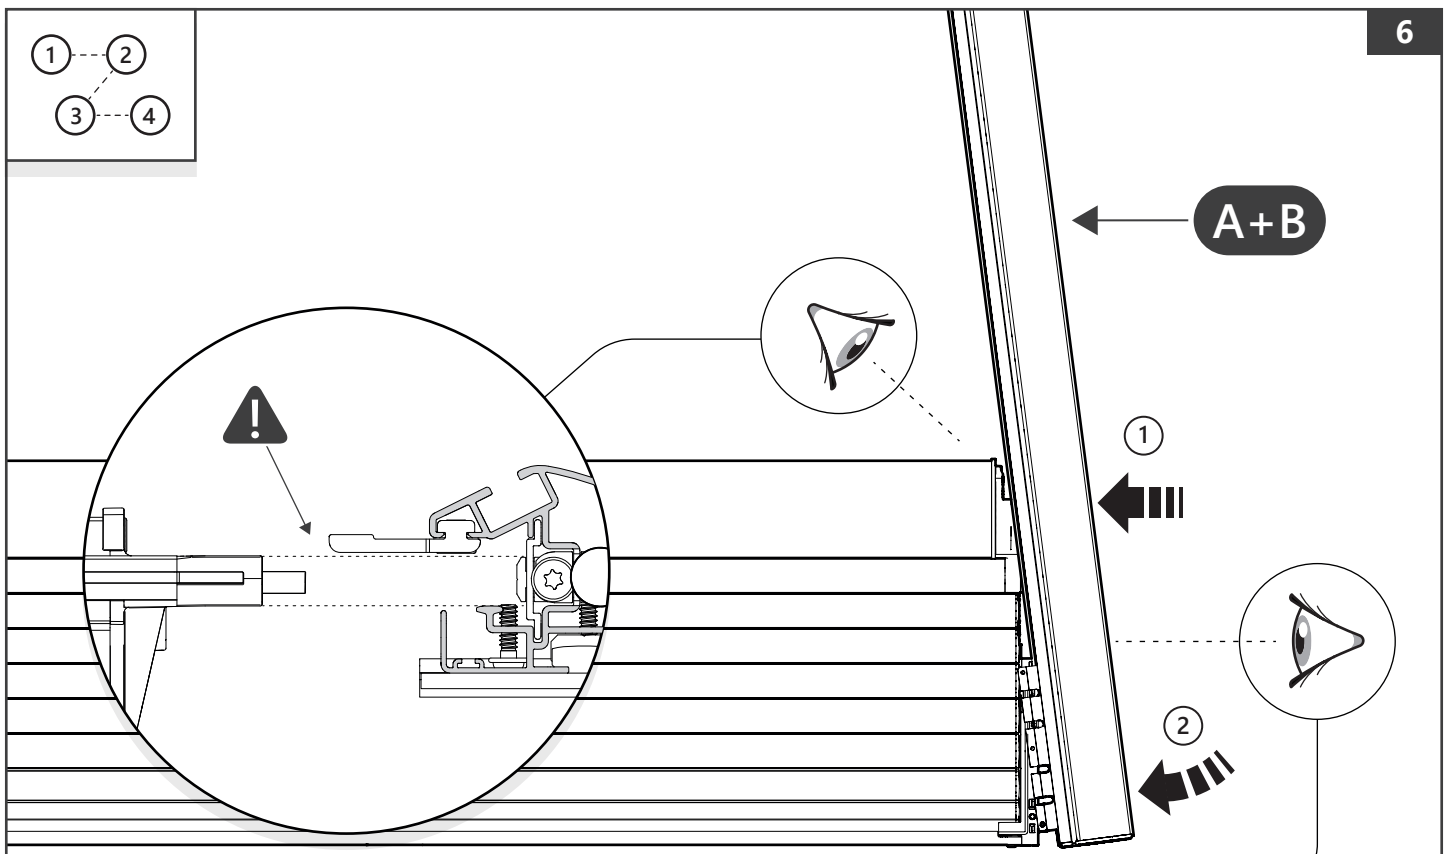



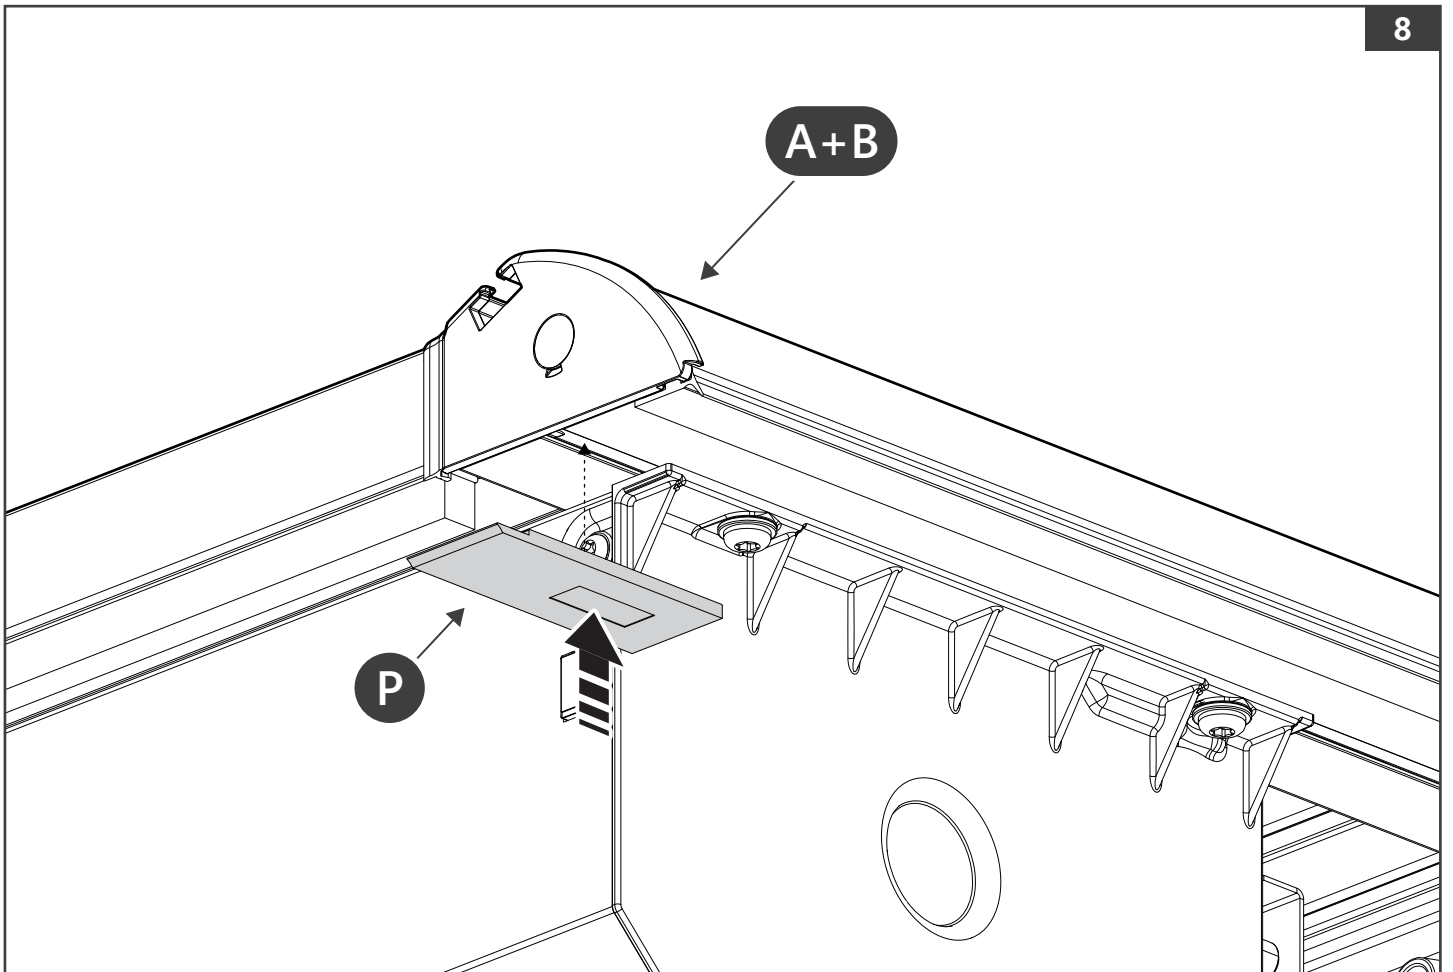
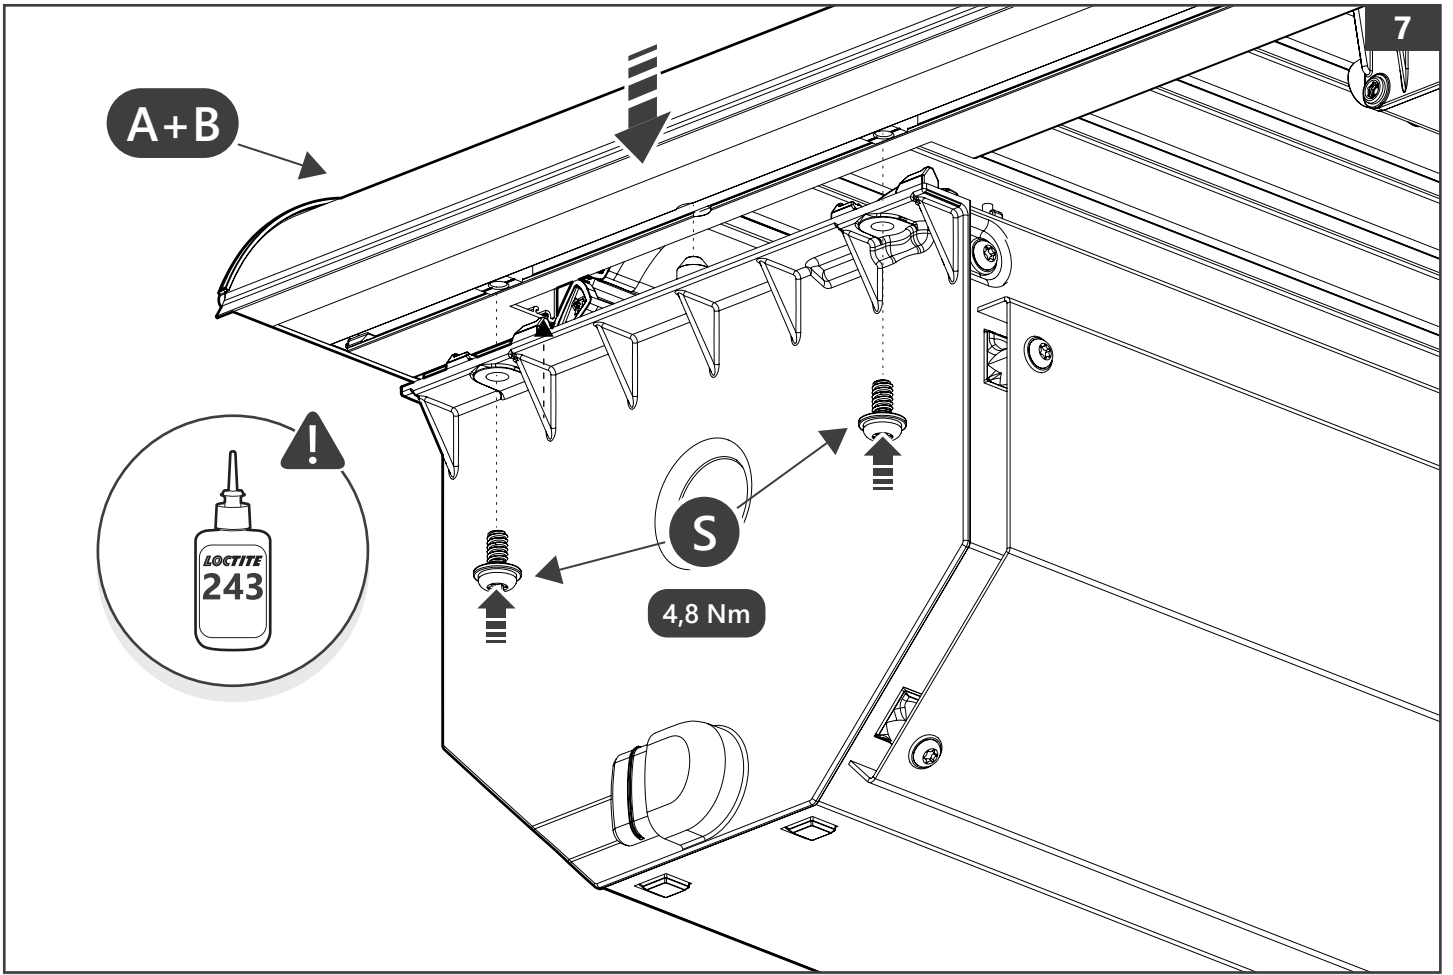






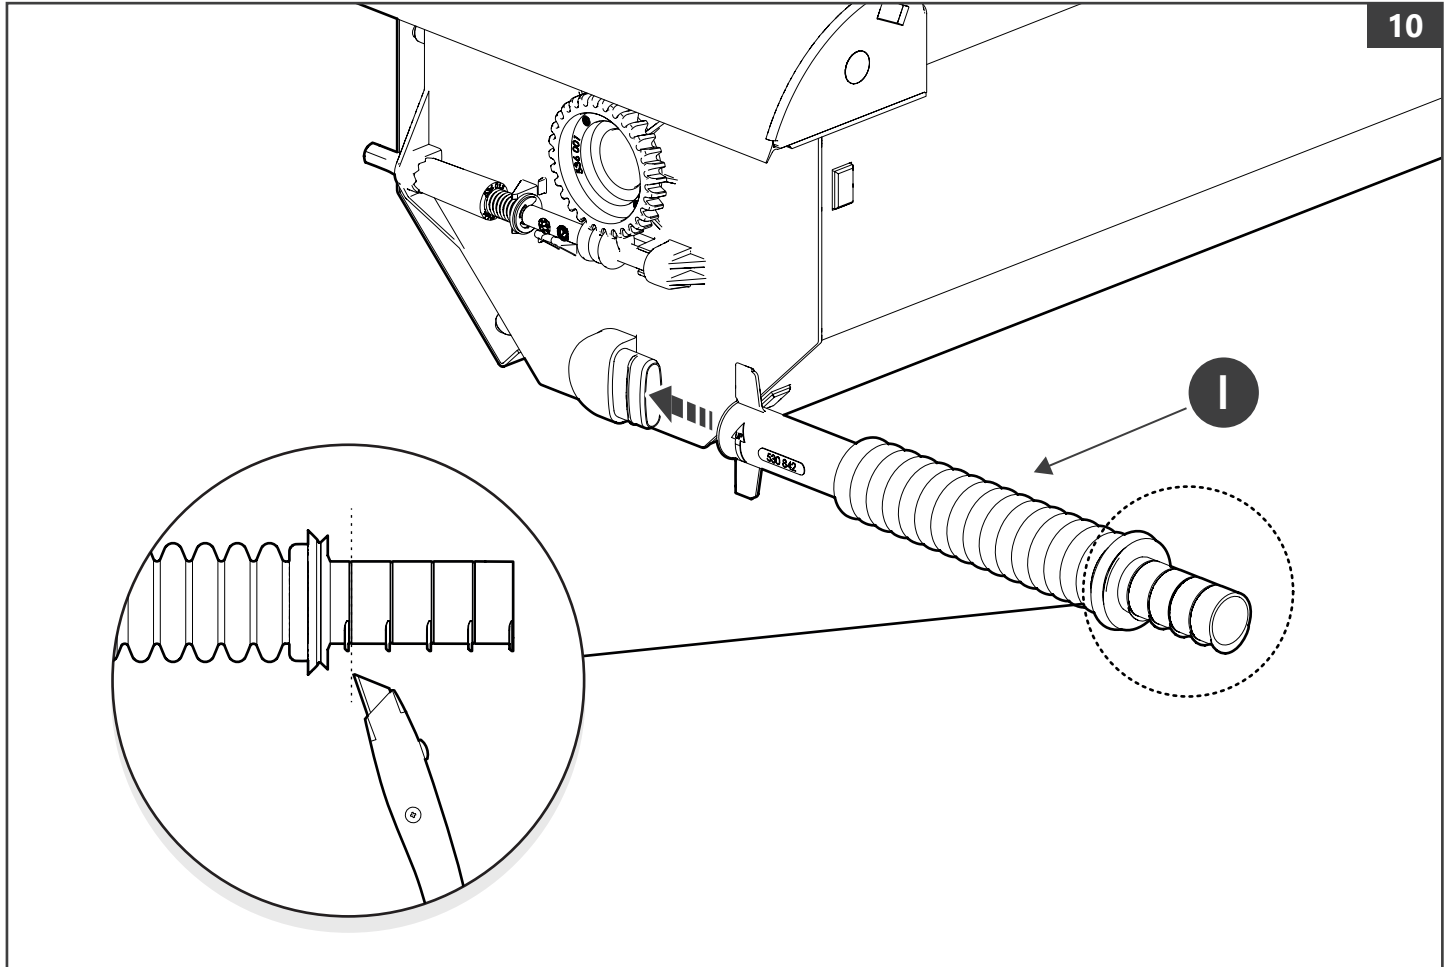
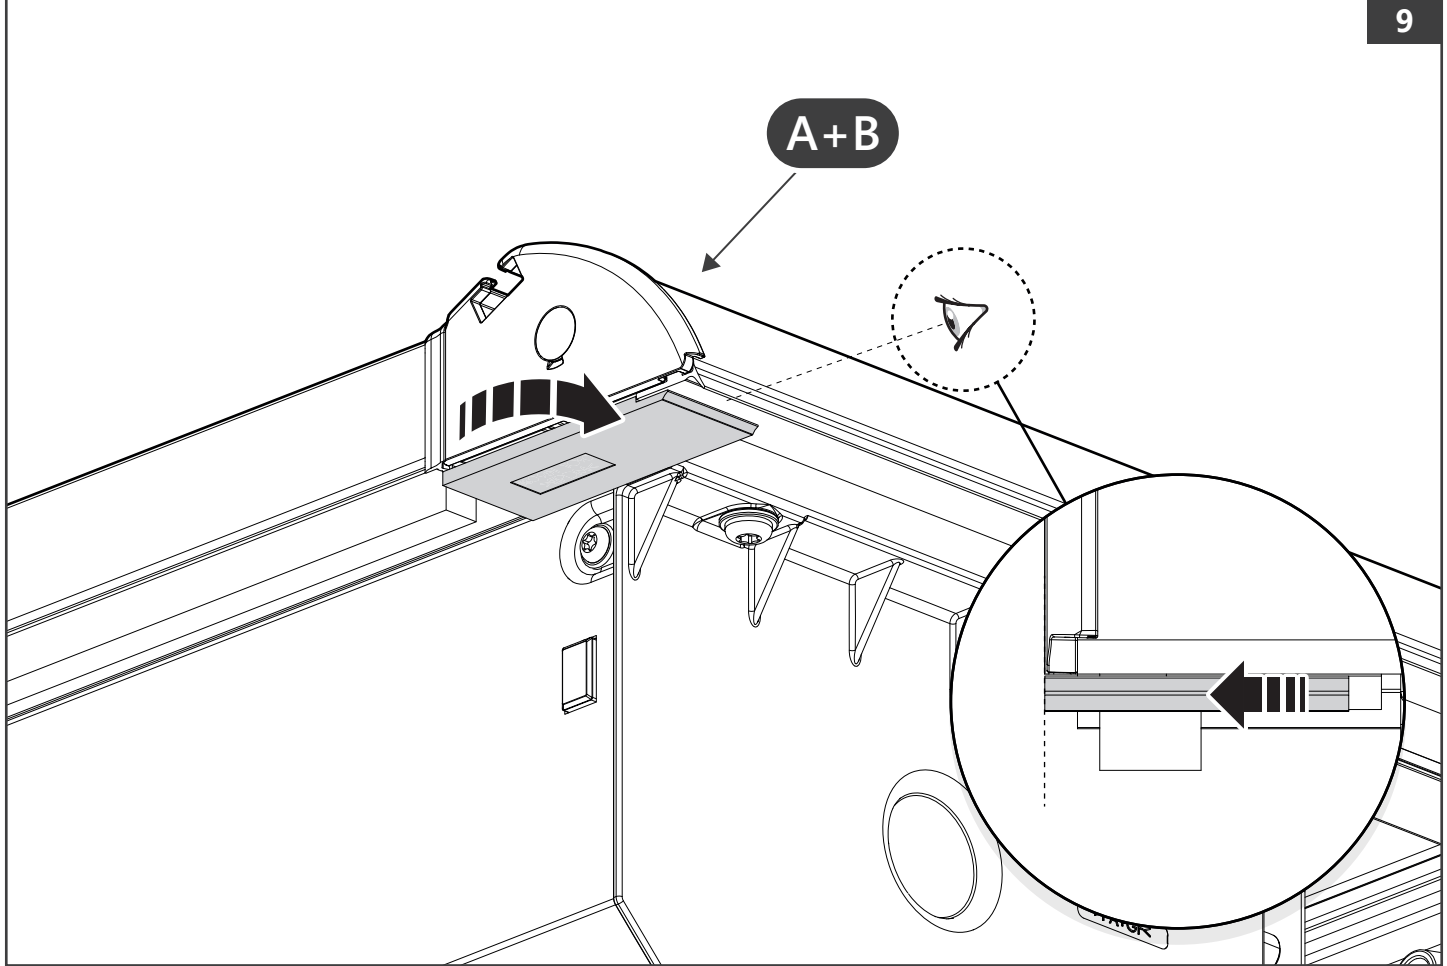


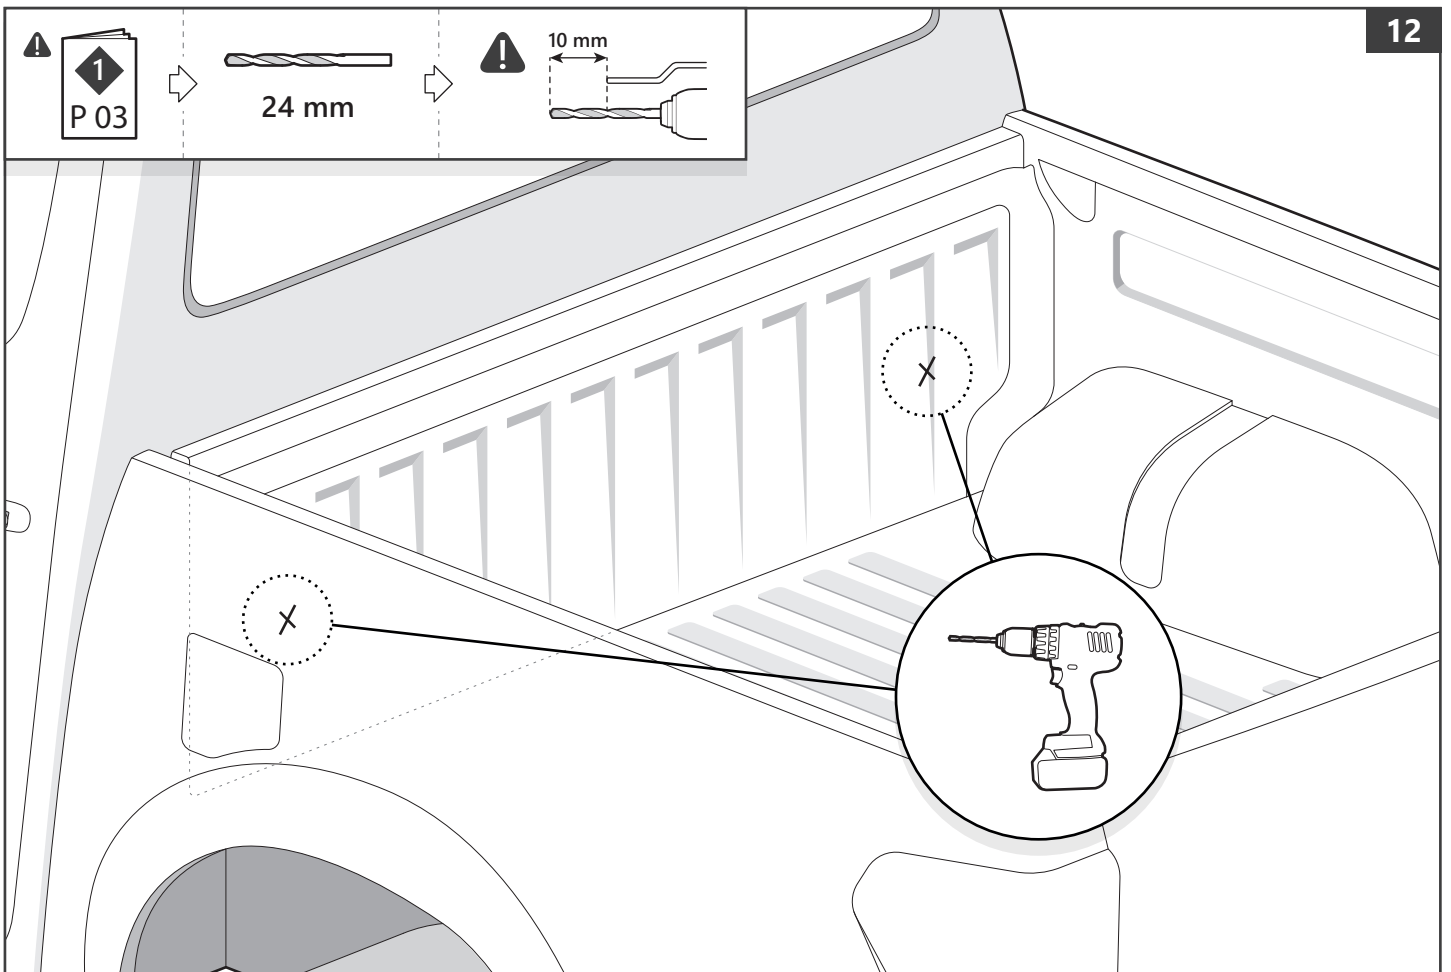
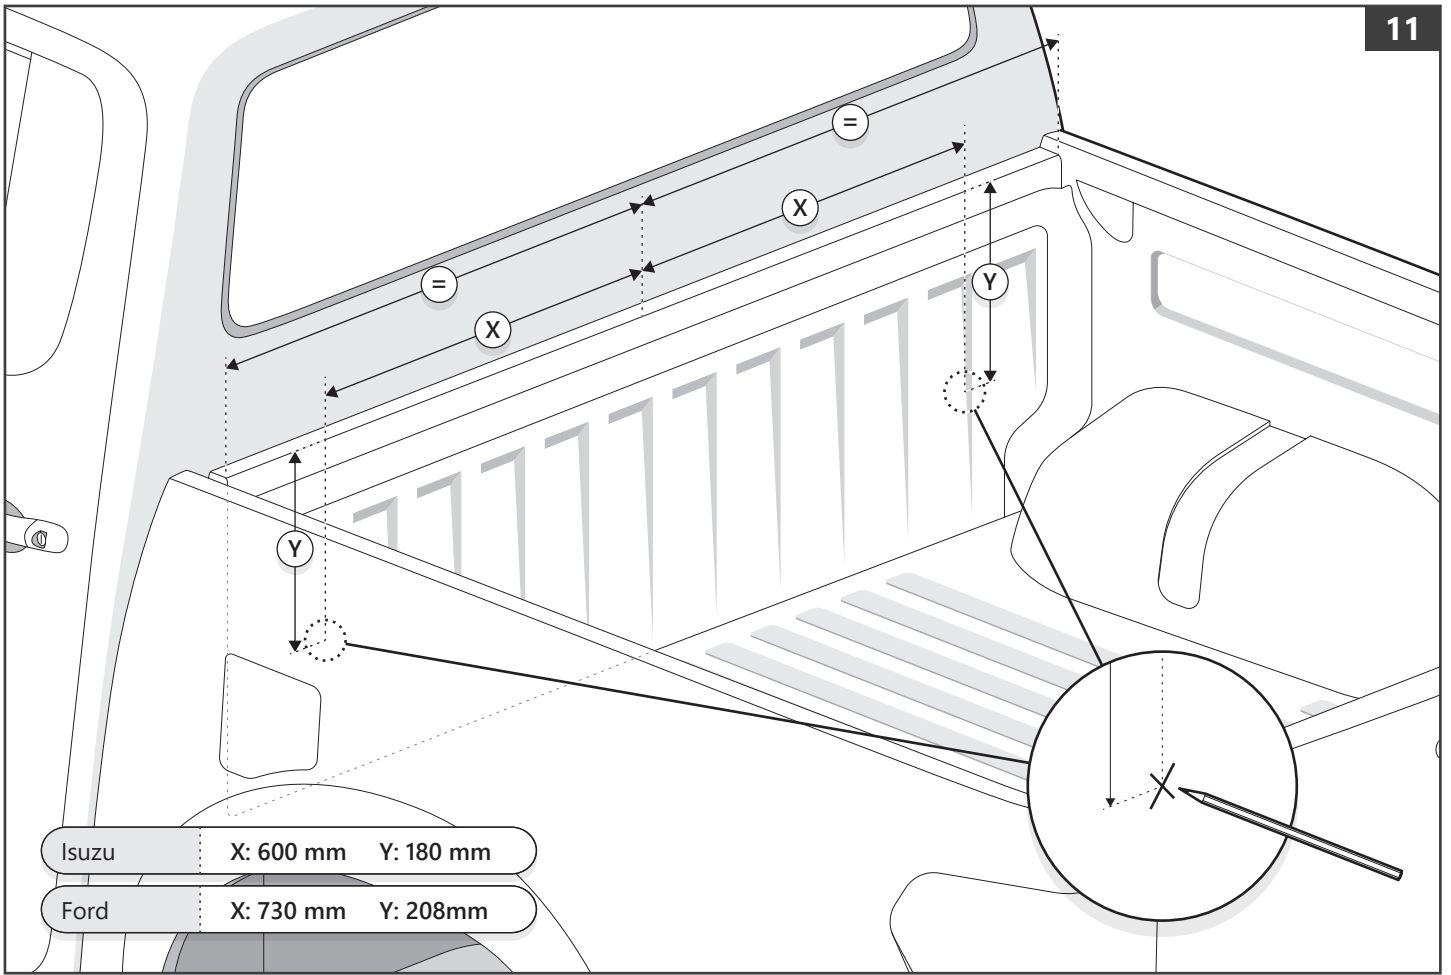


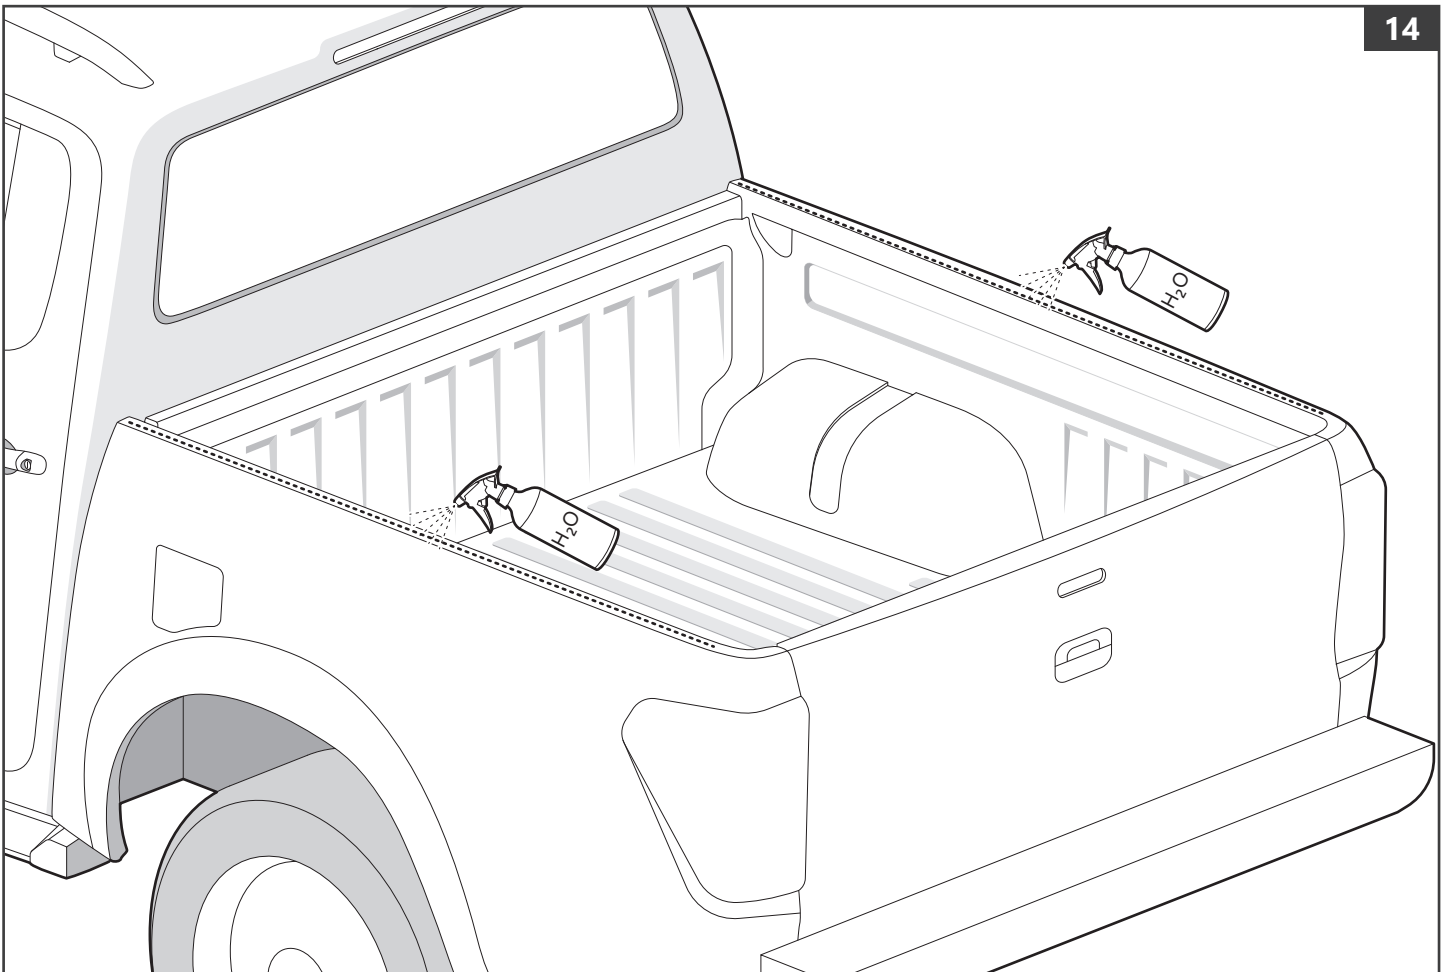
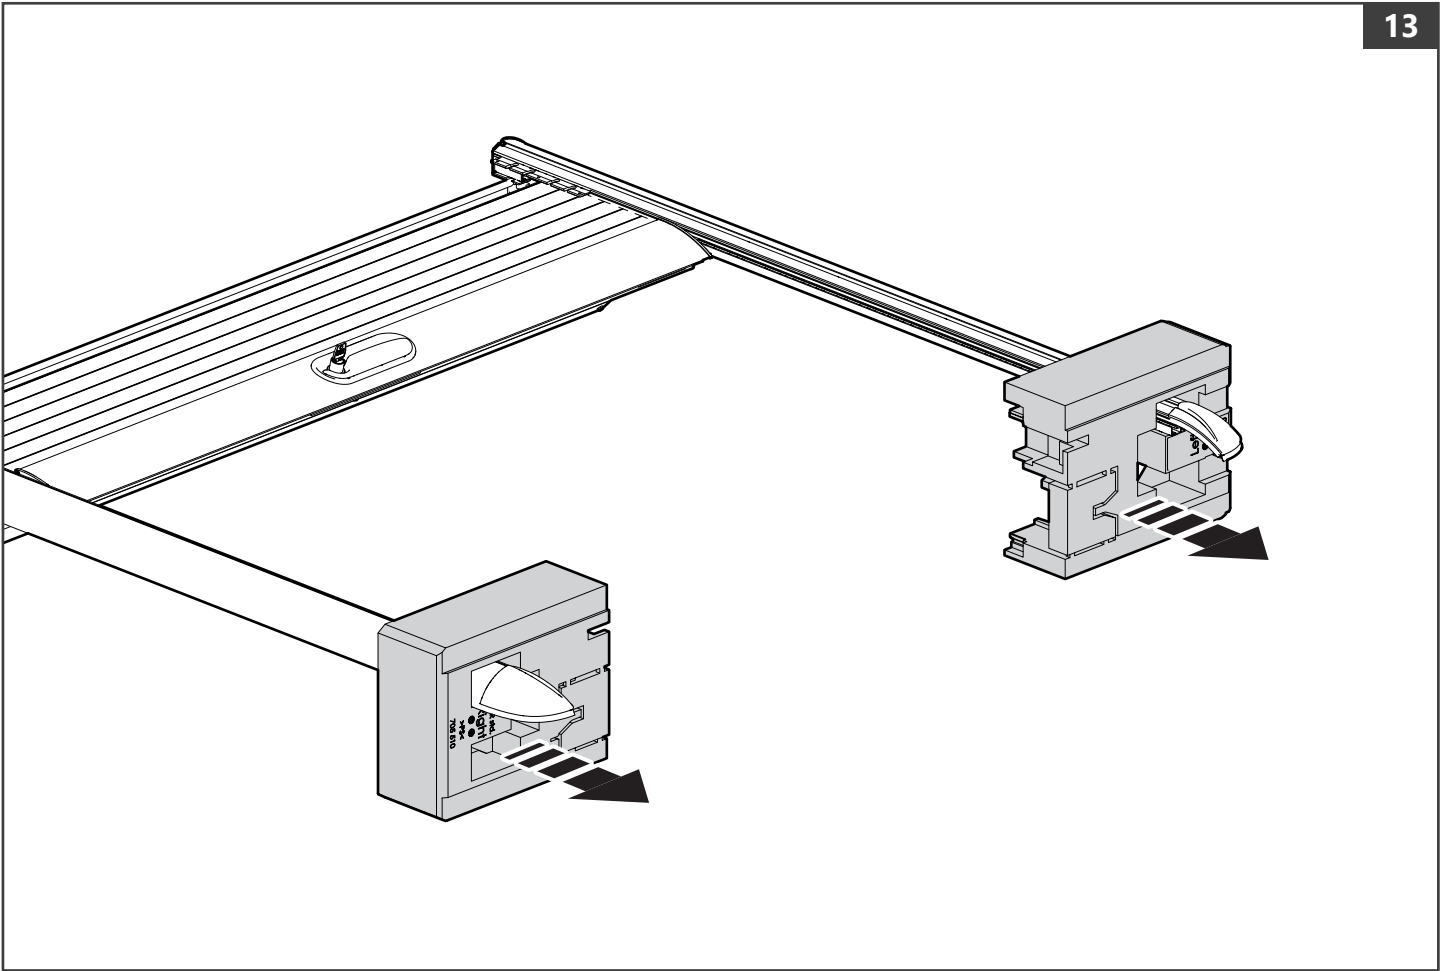


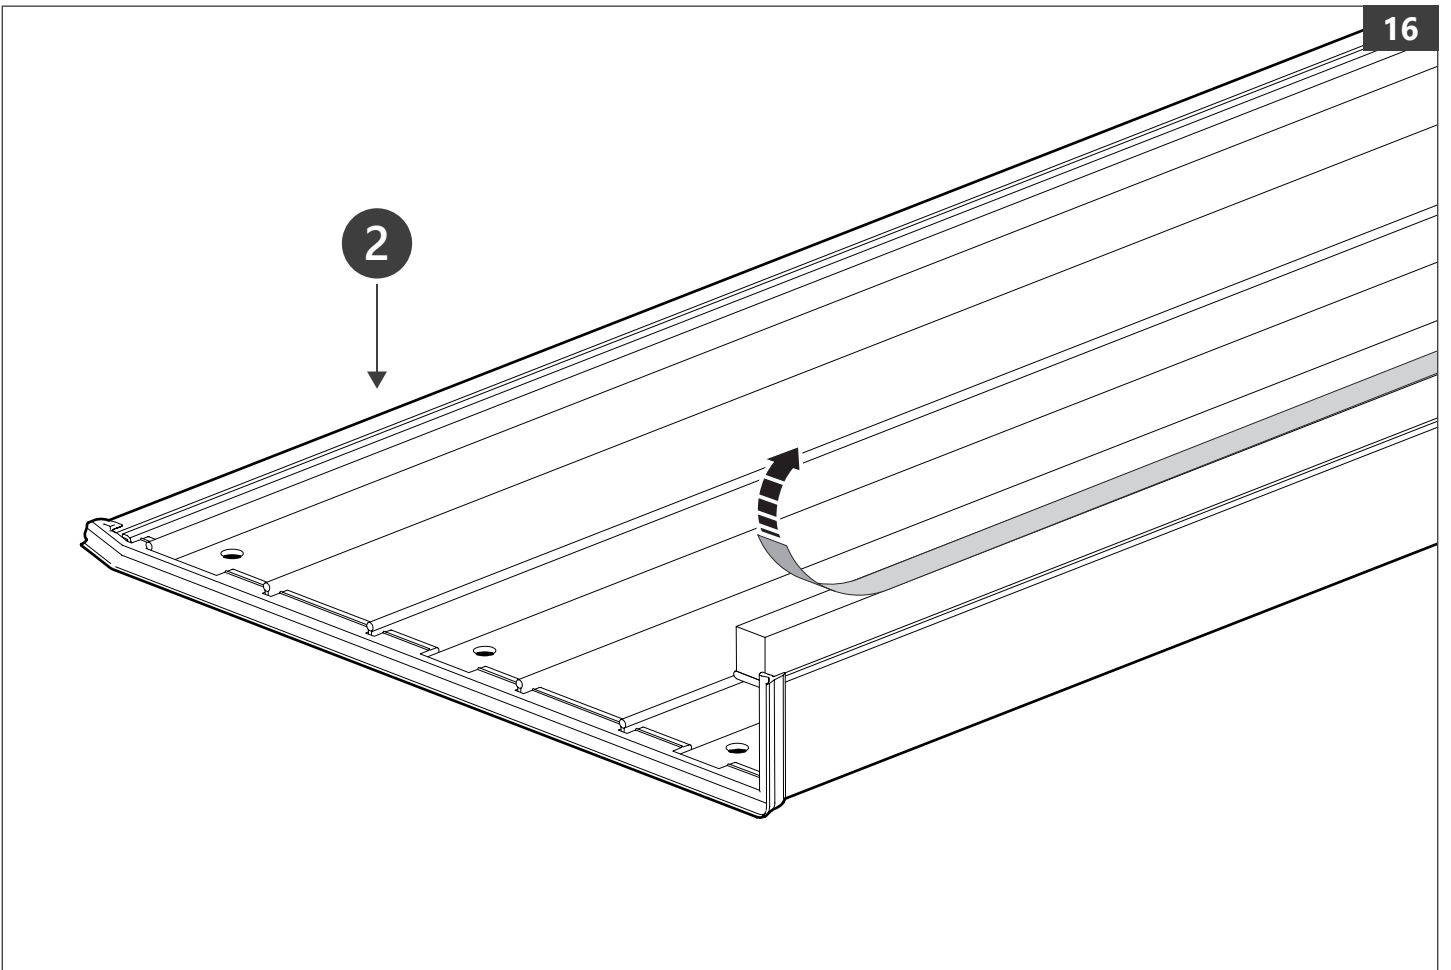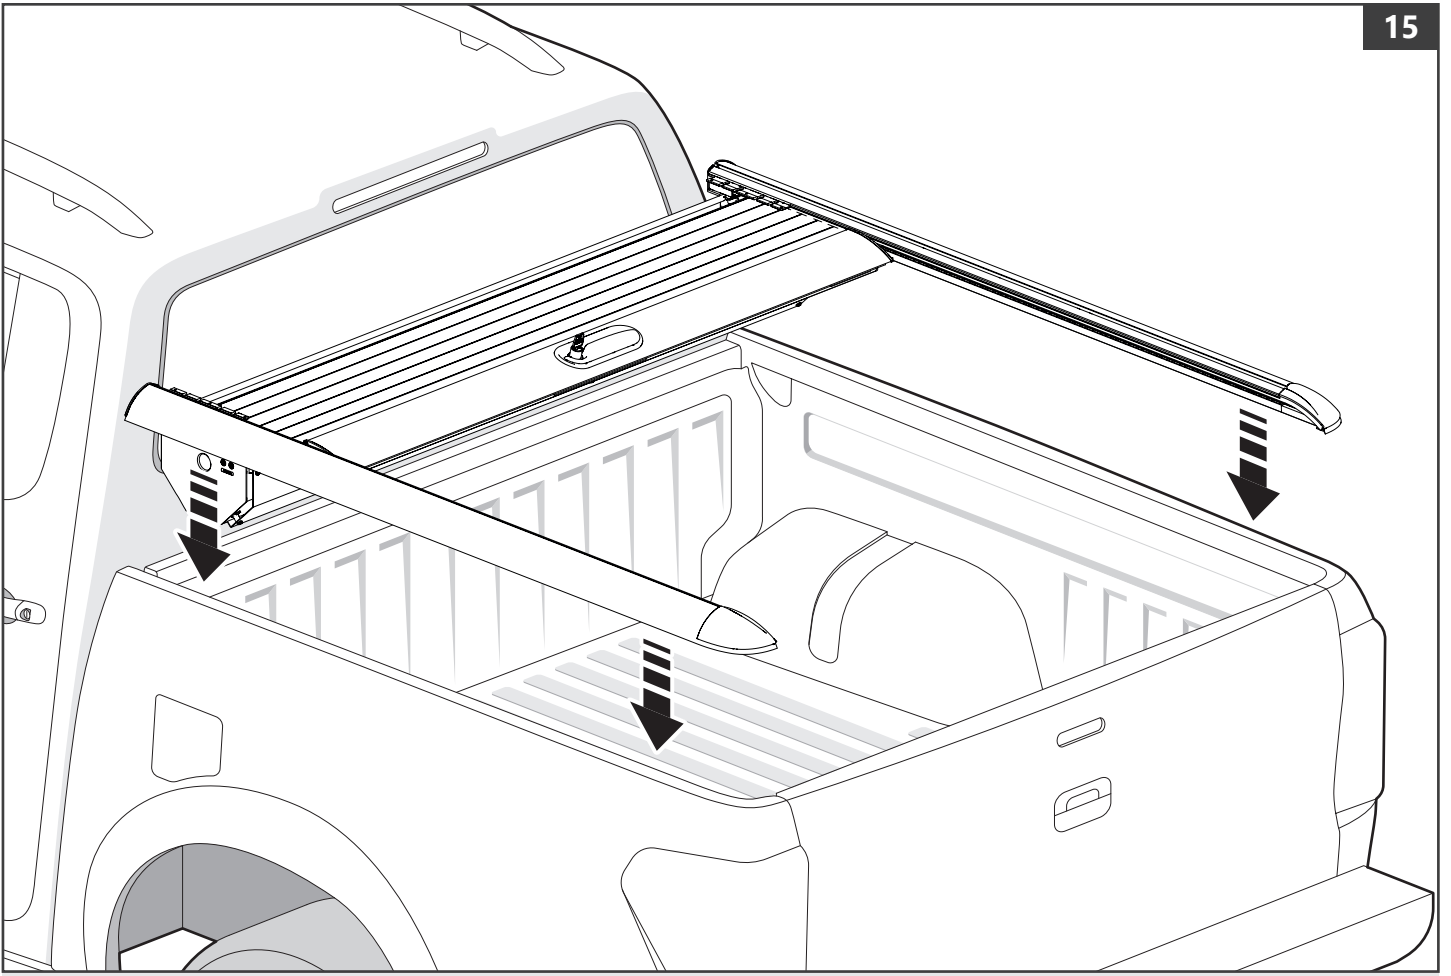

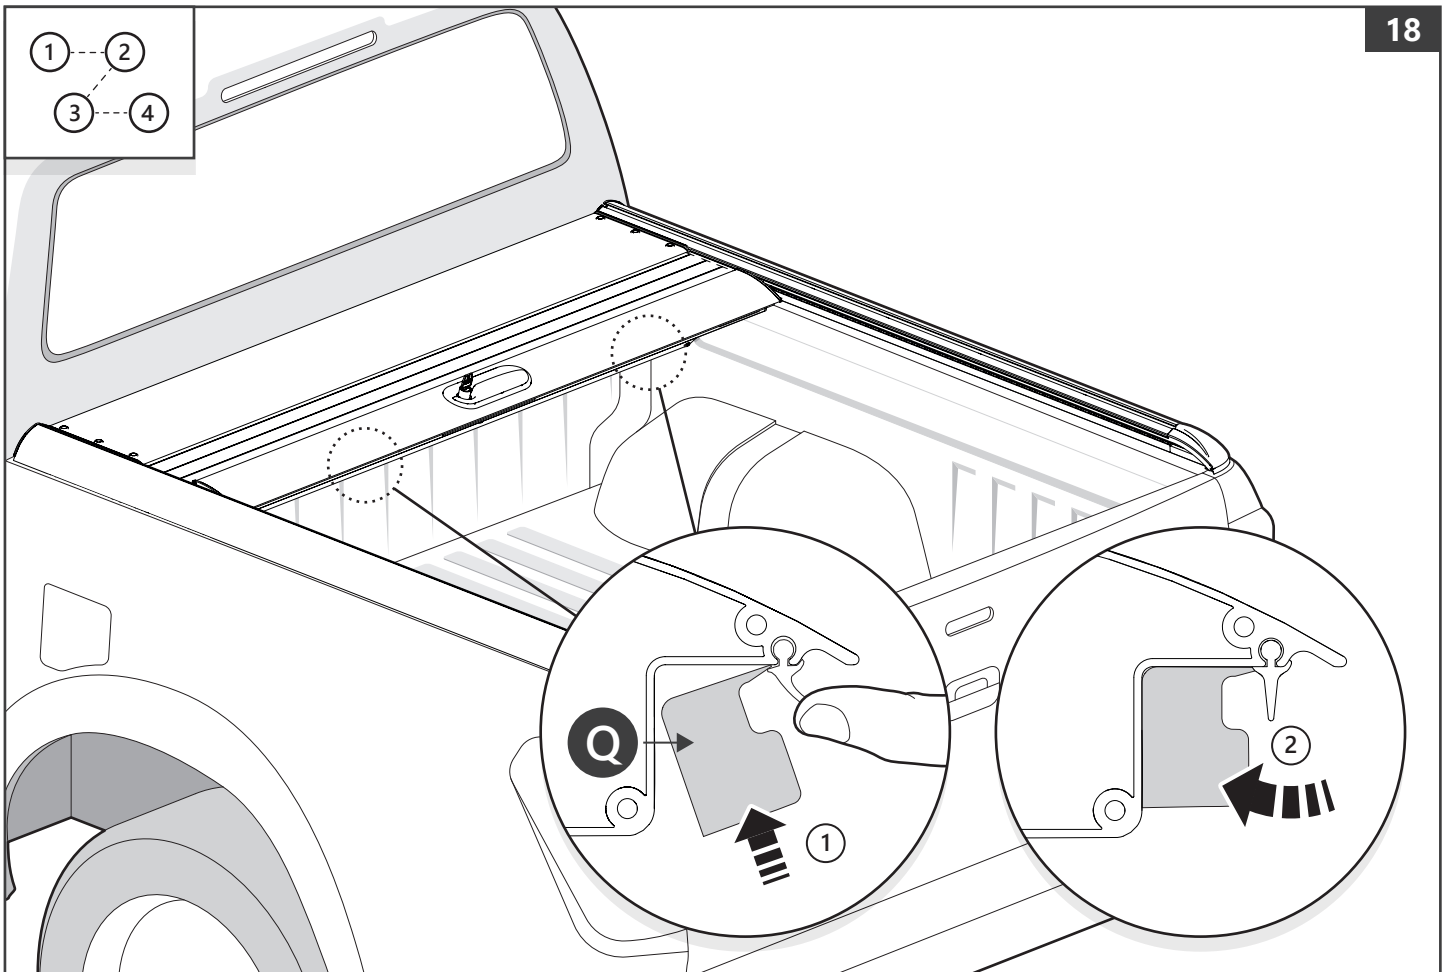
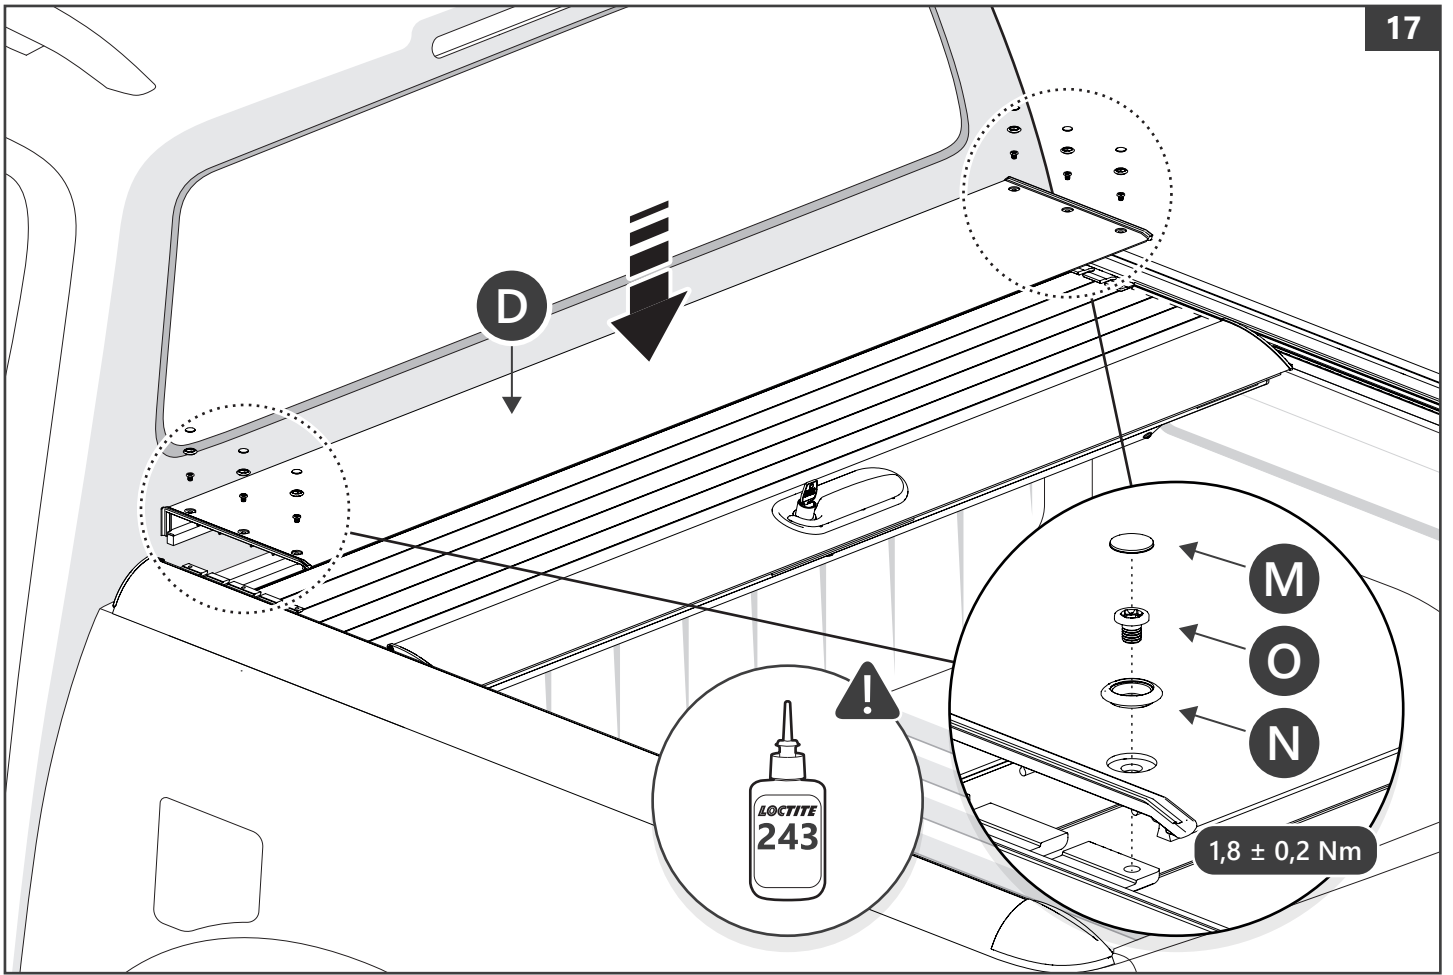


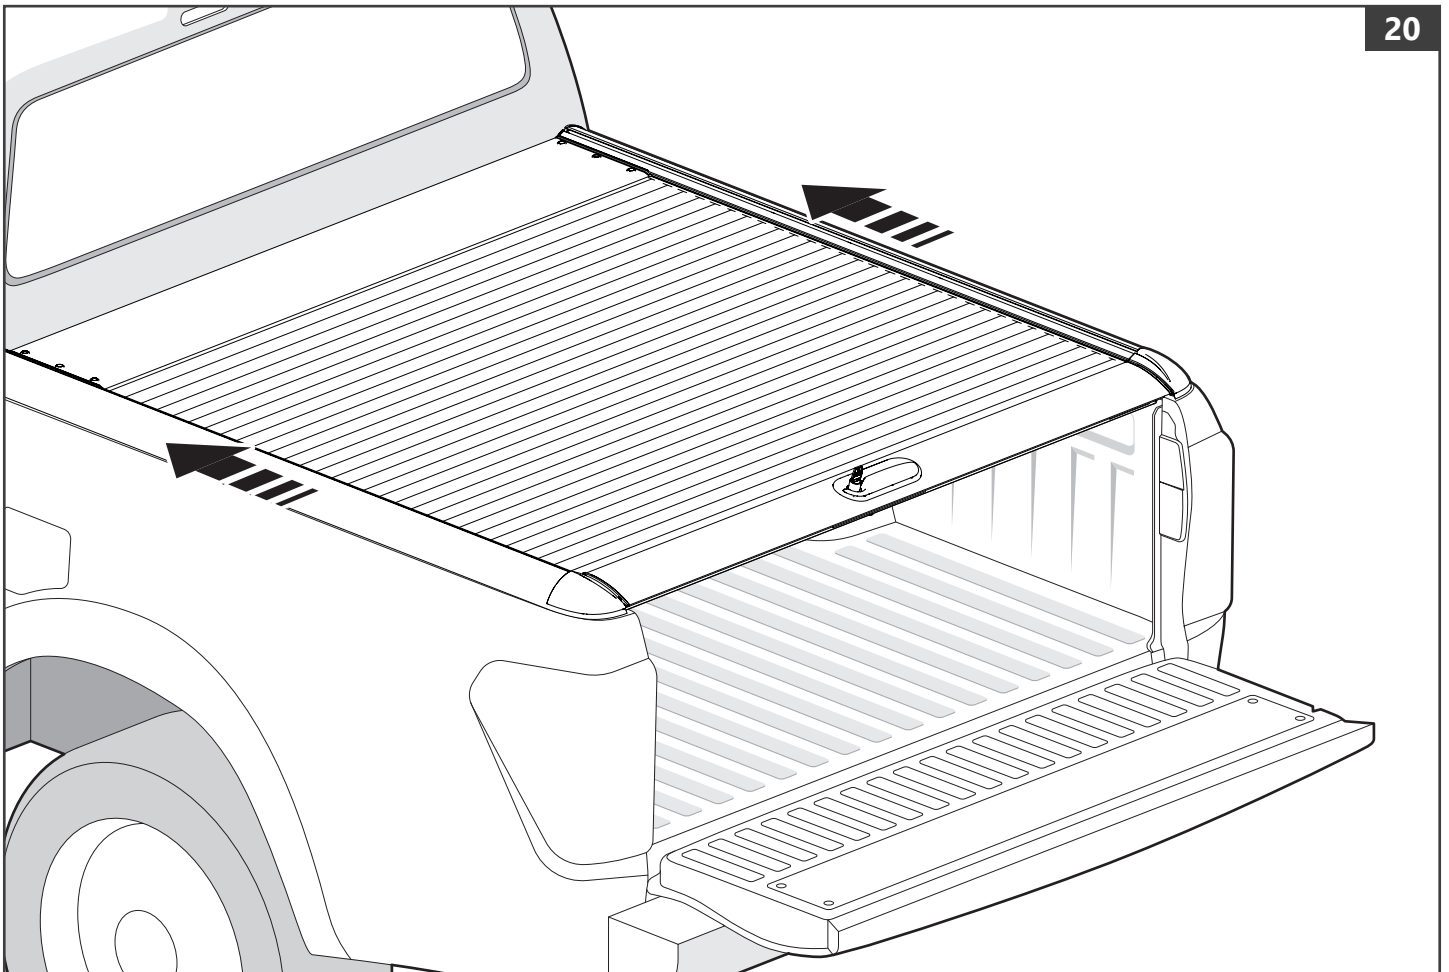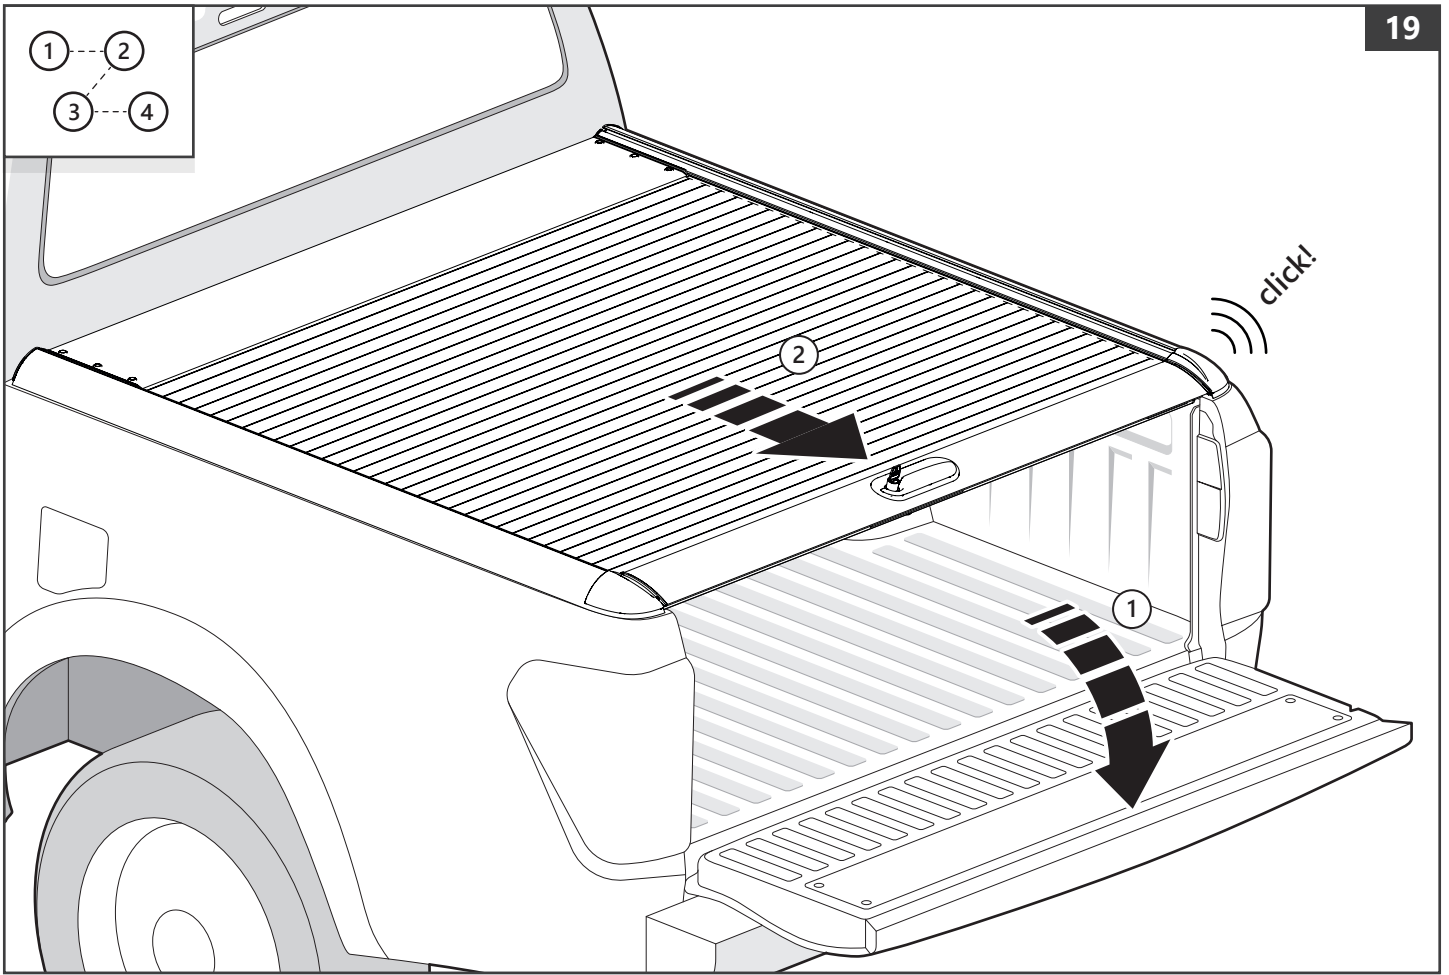


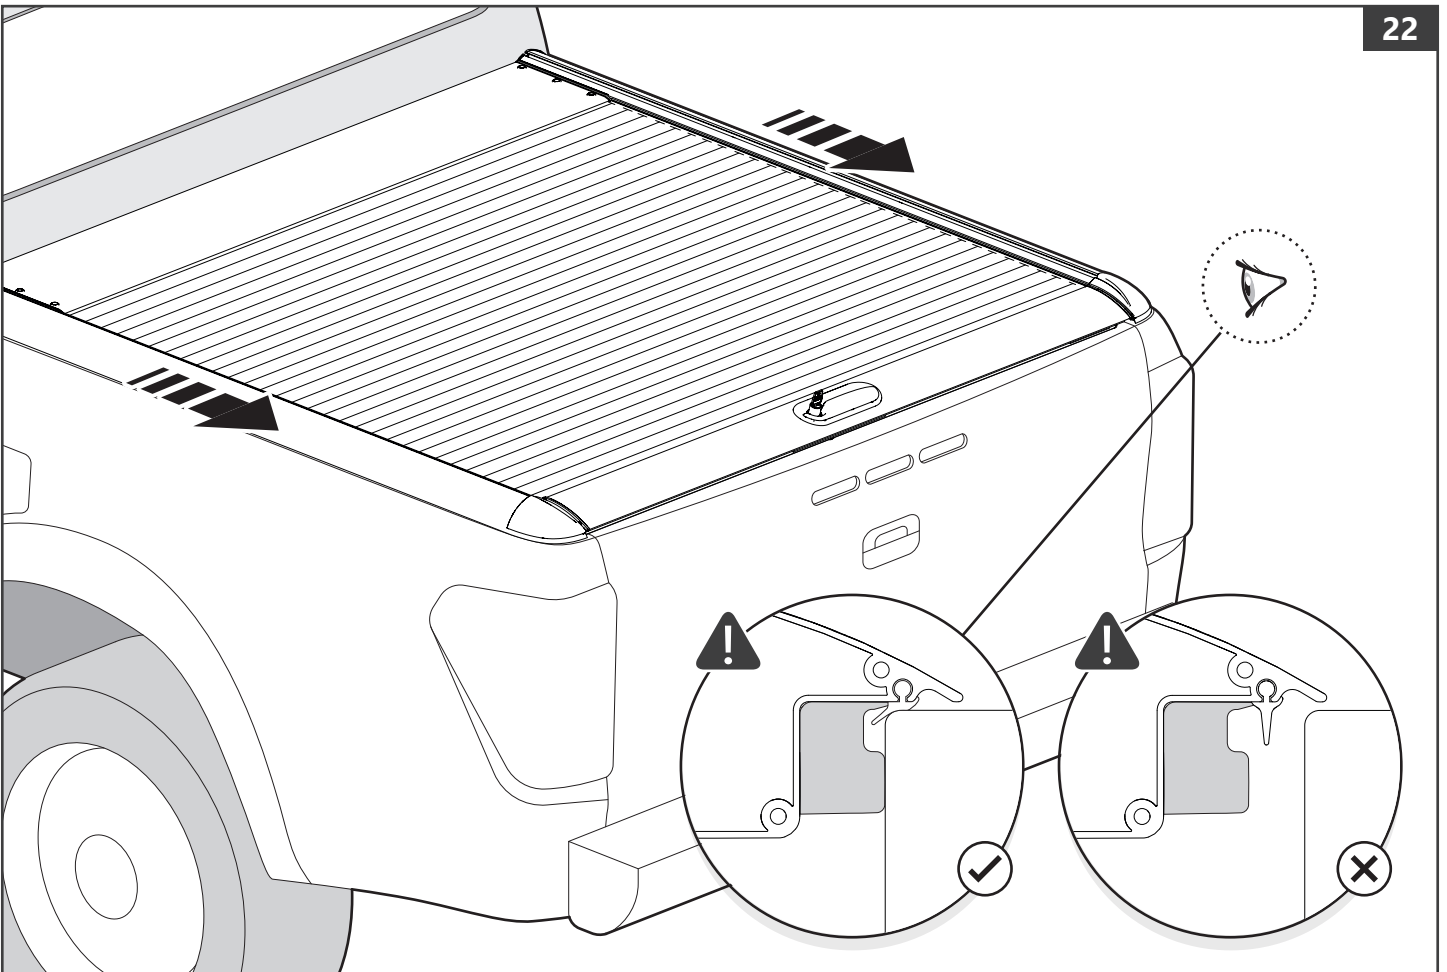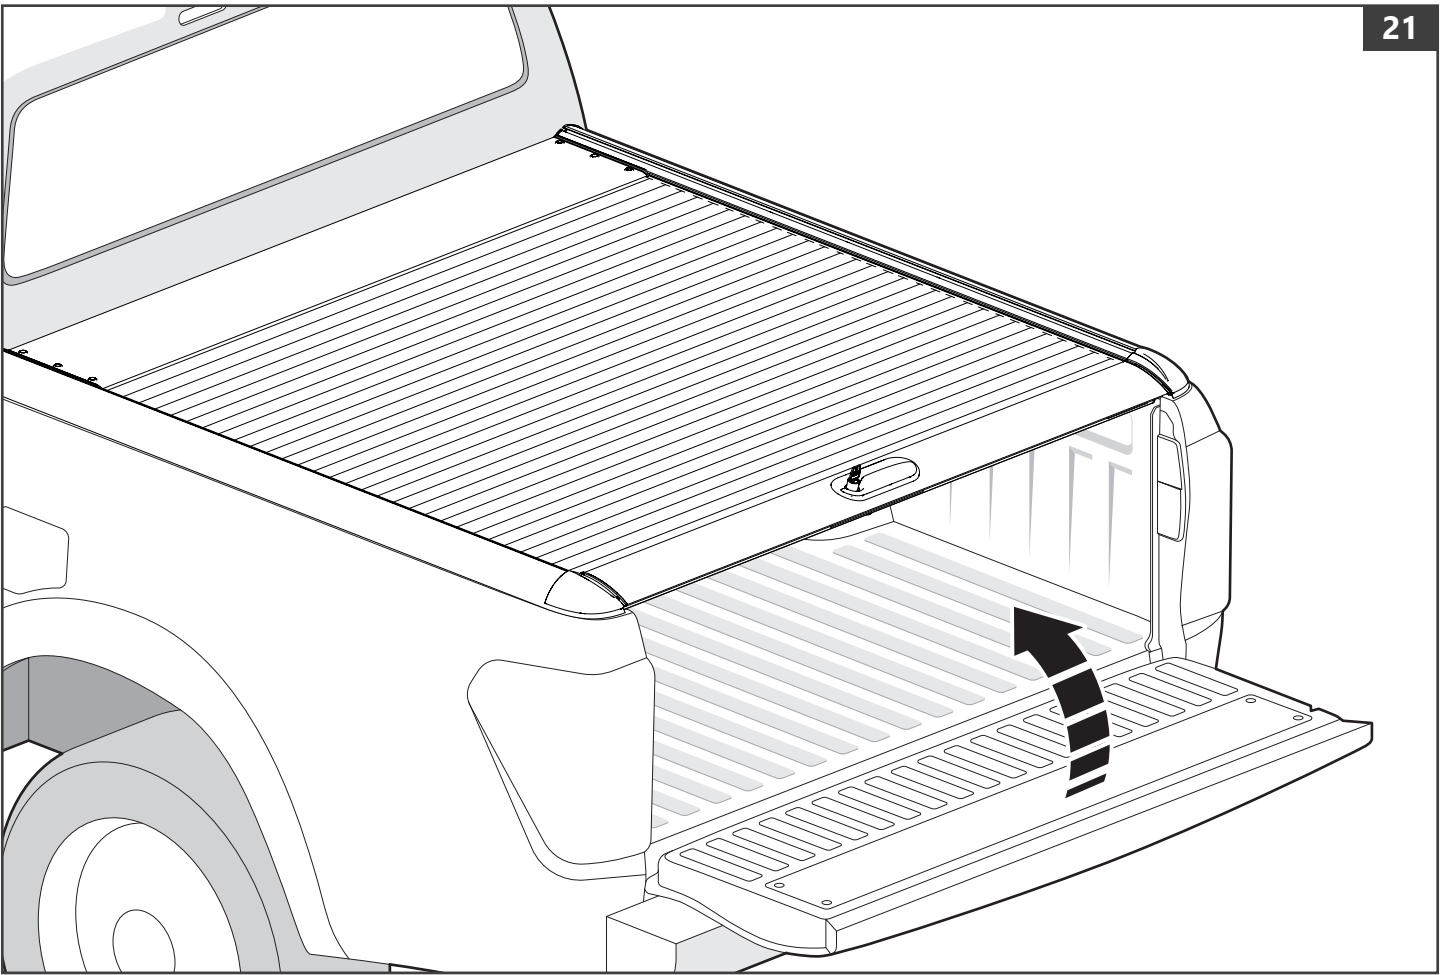

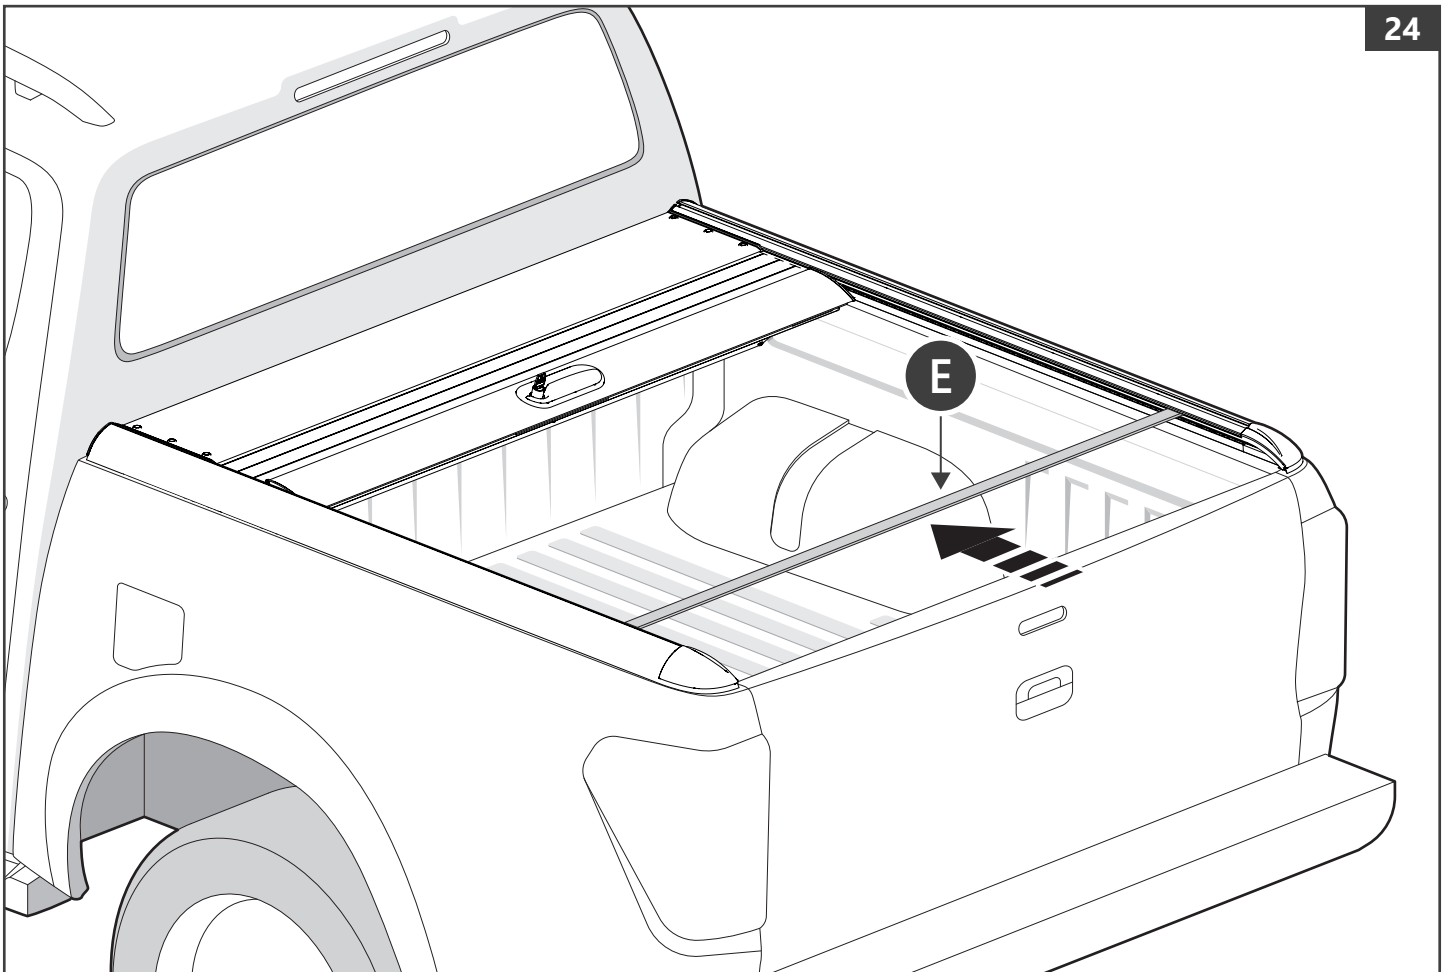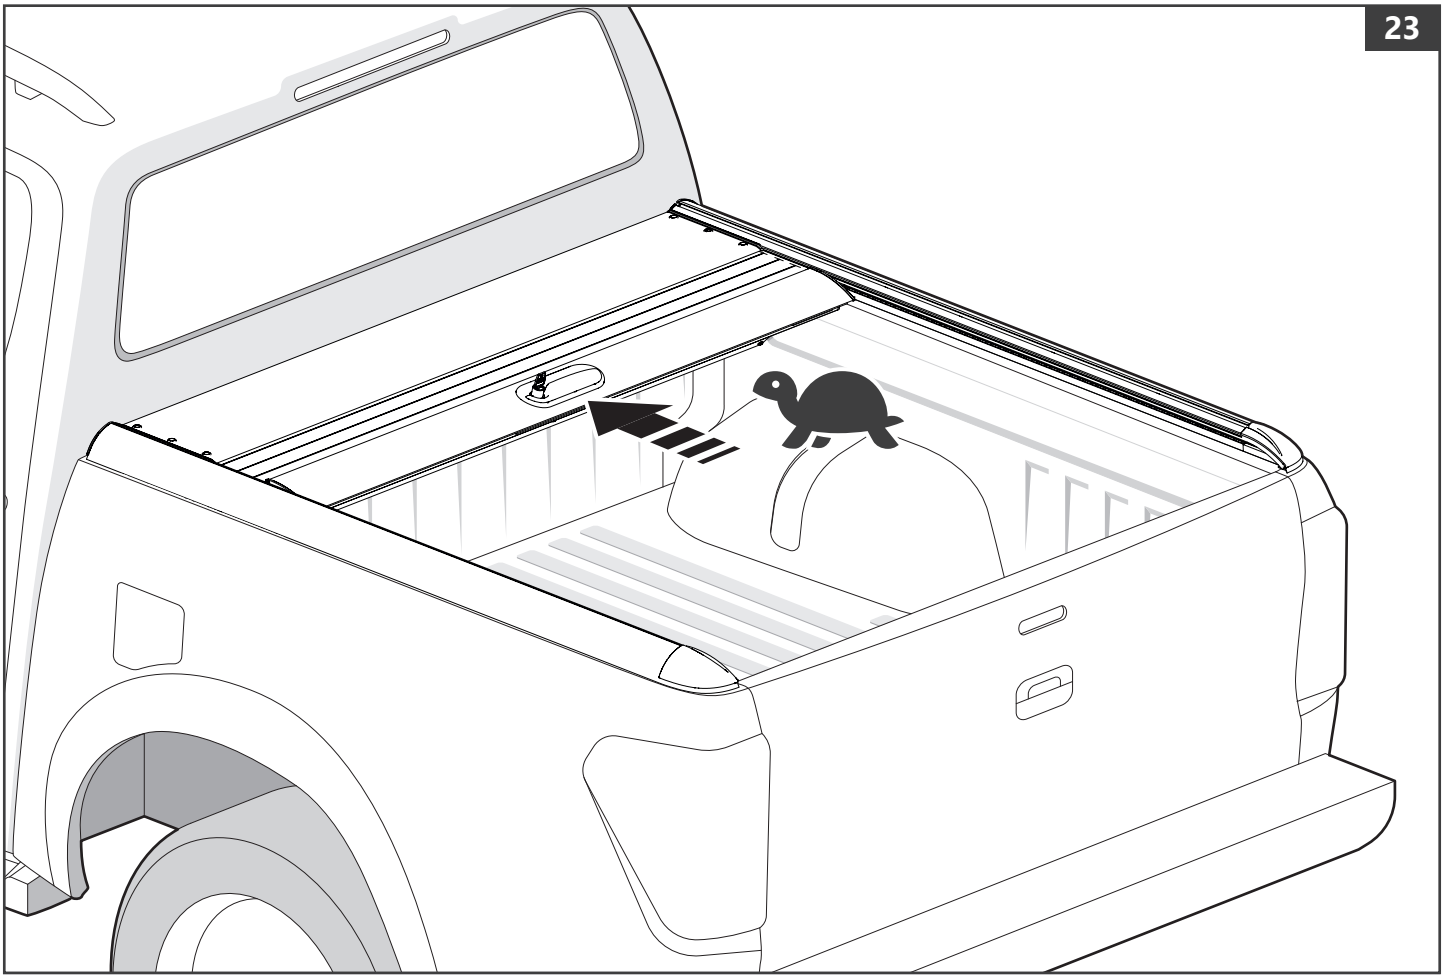






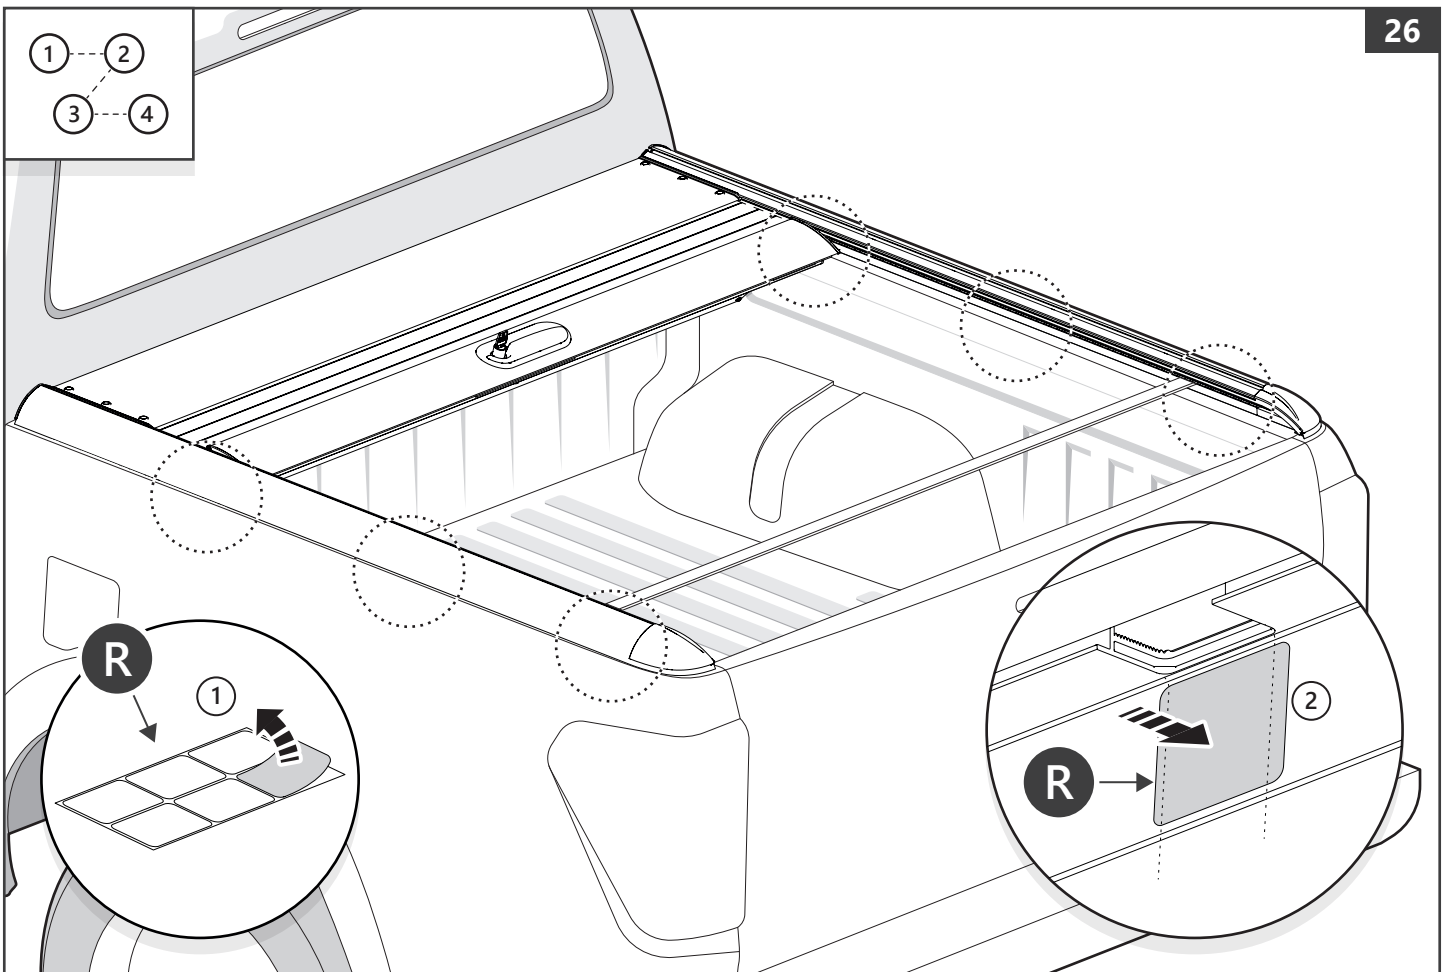
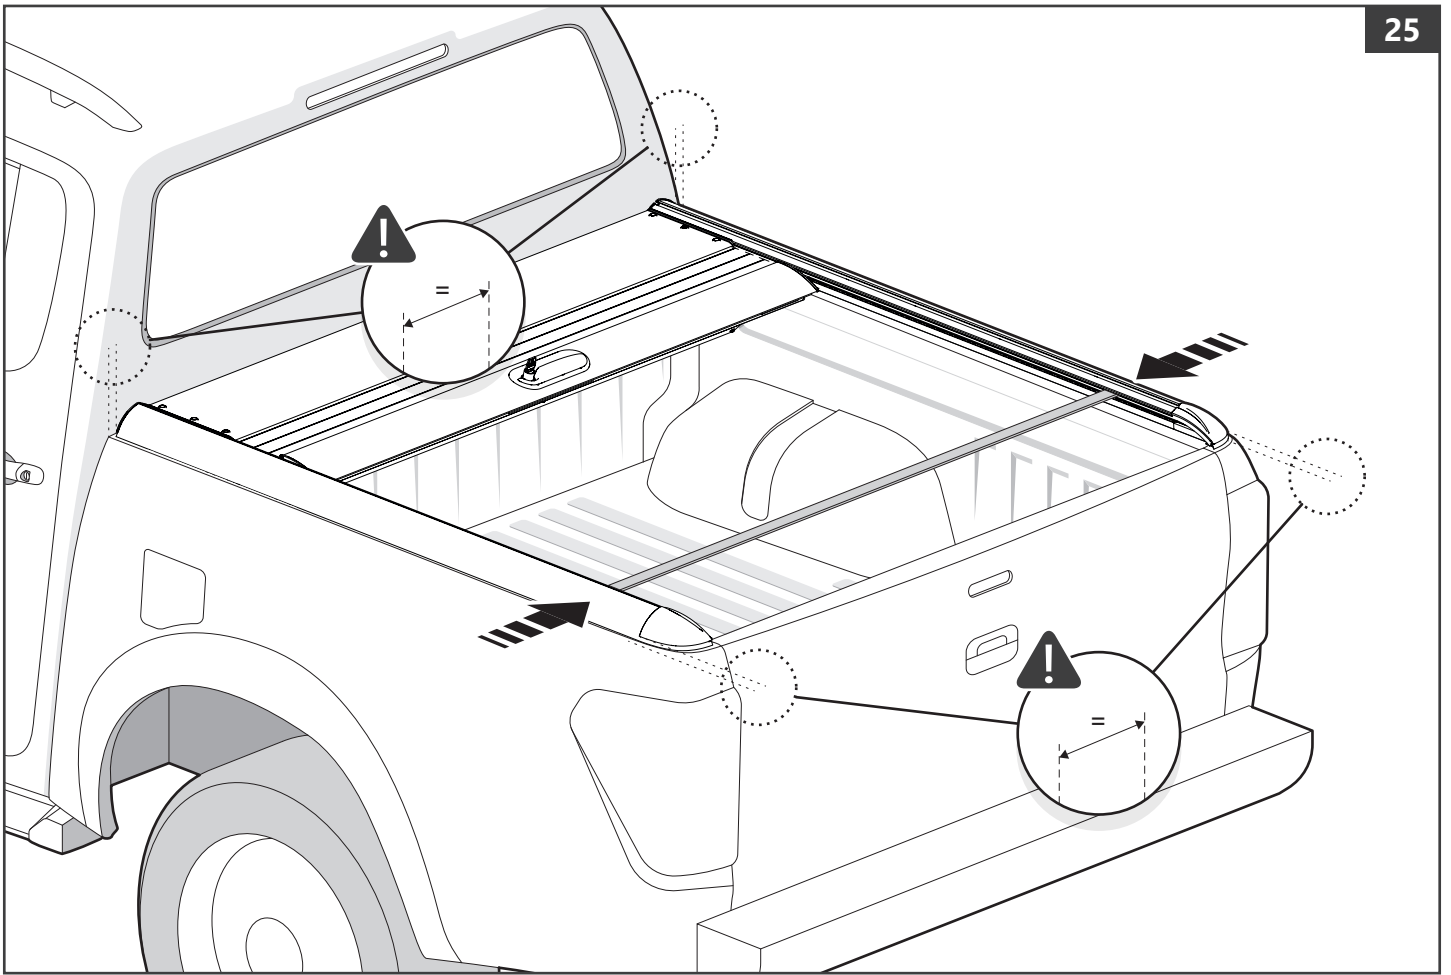



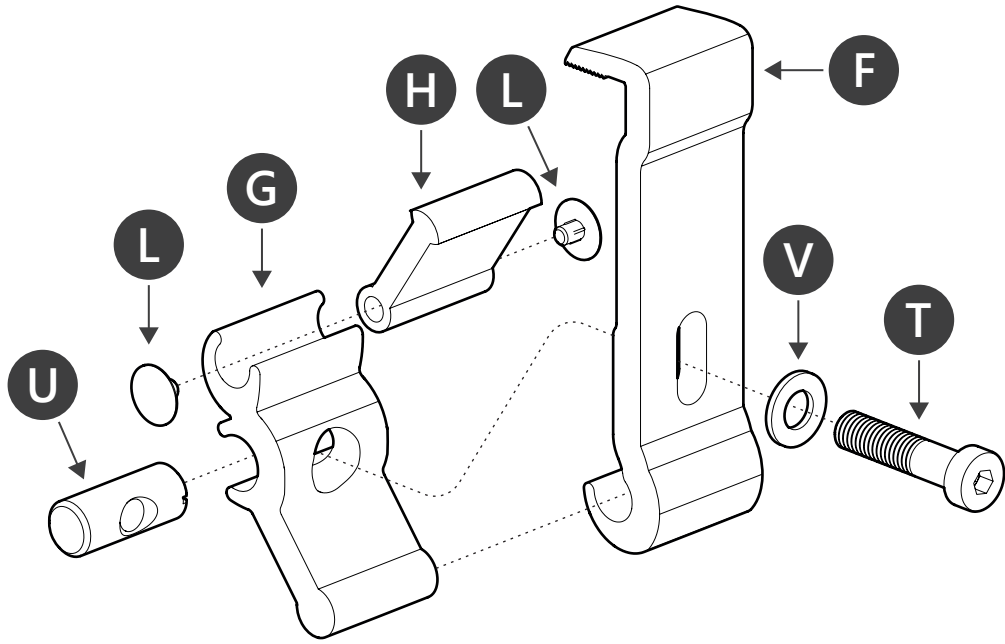




x 6


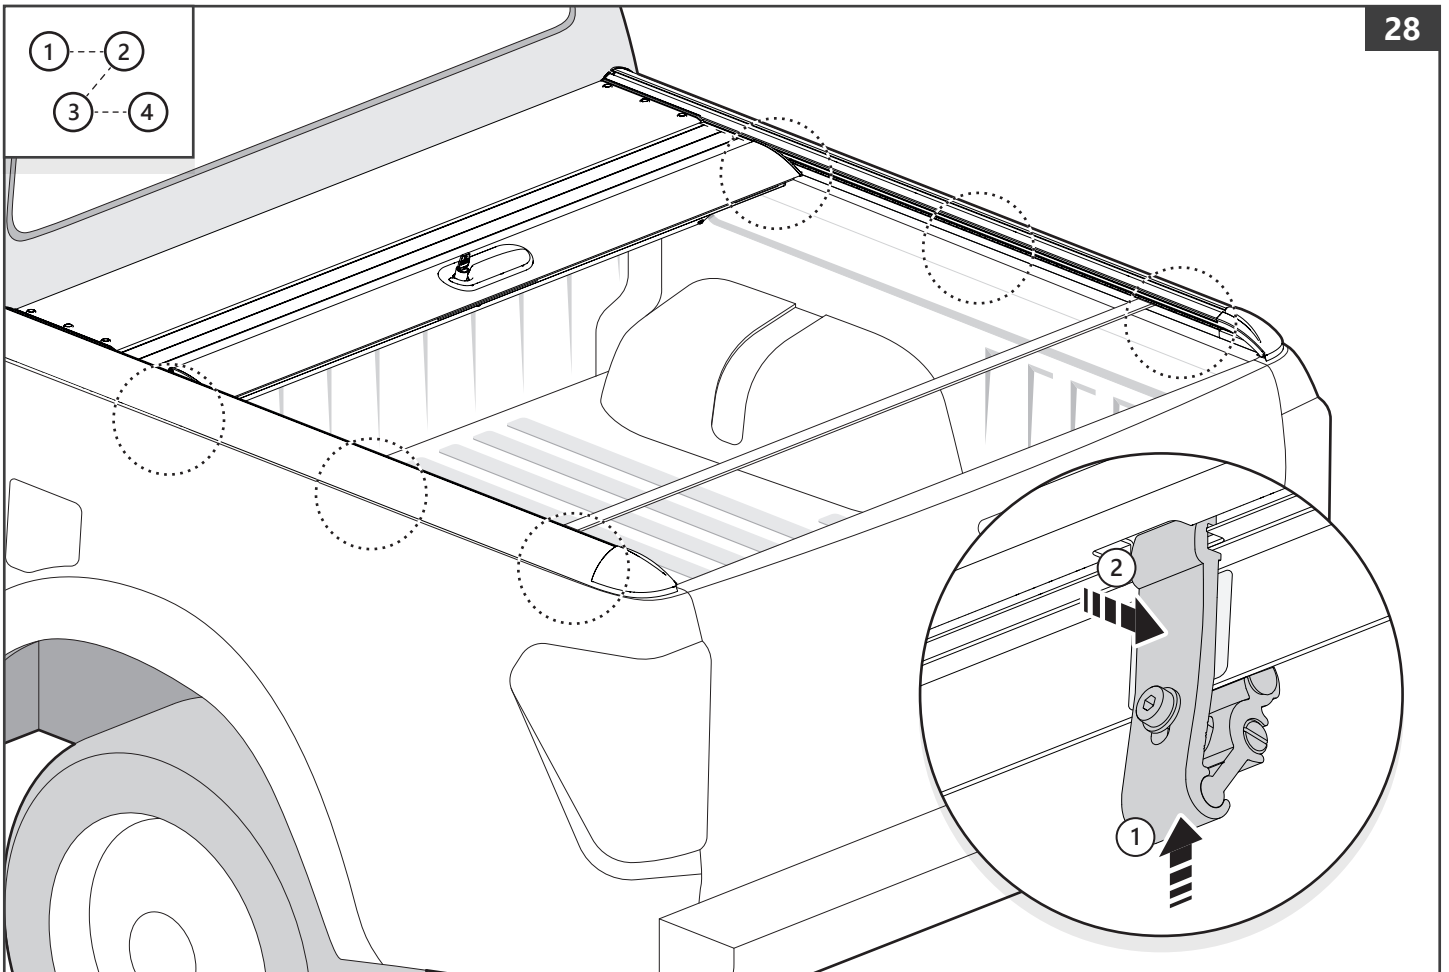


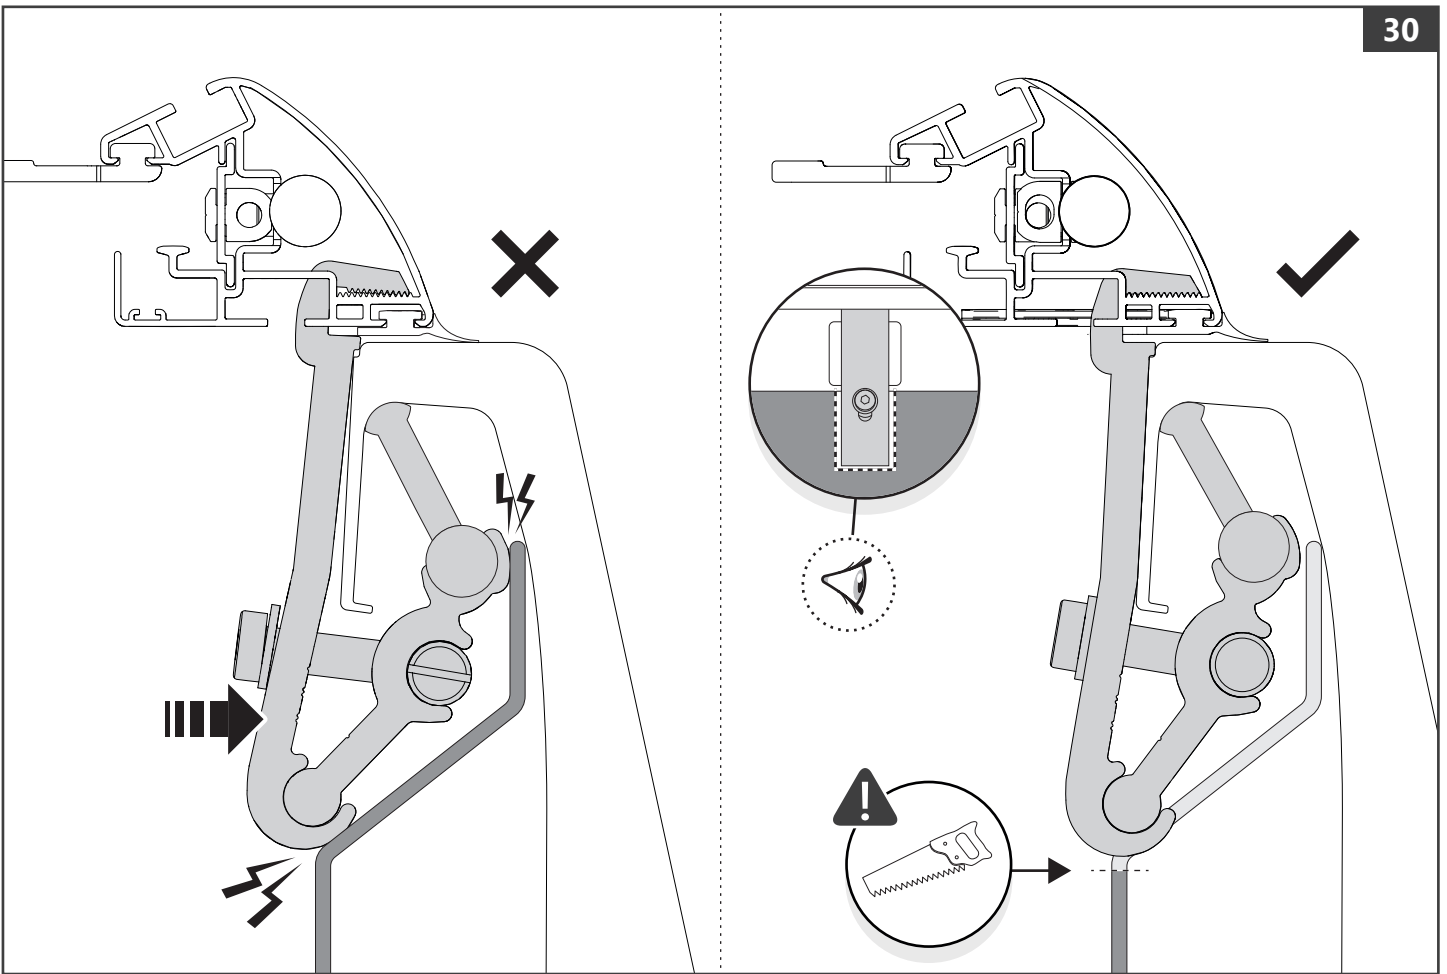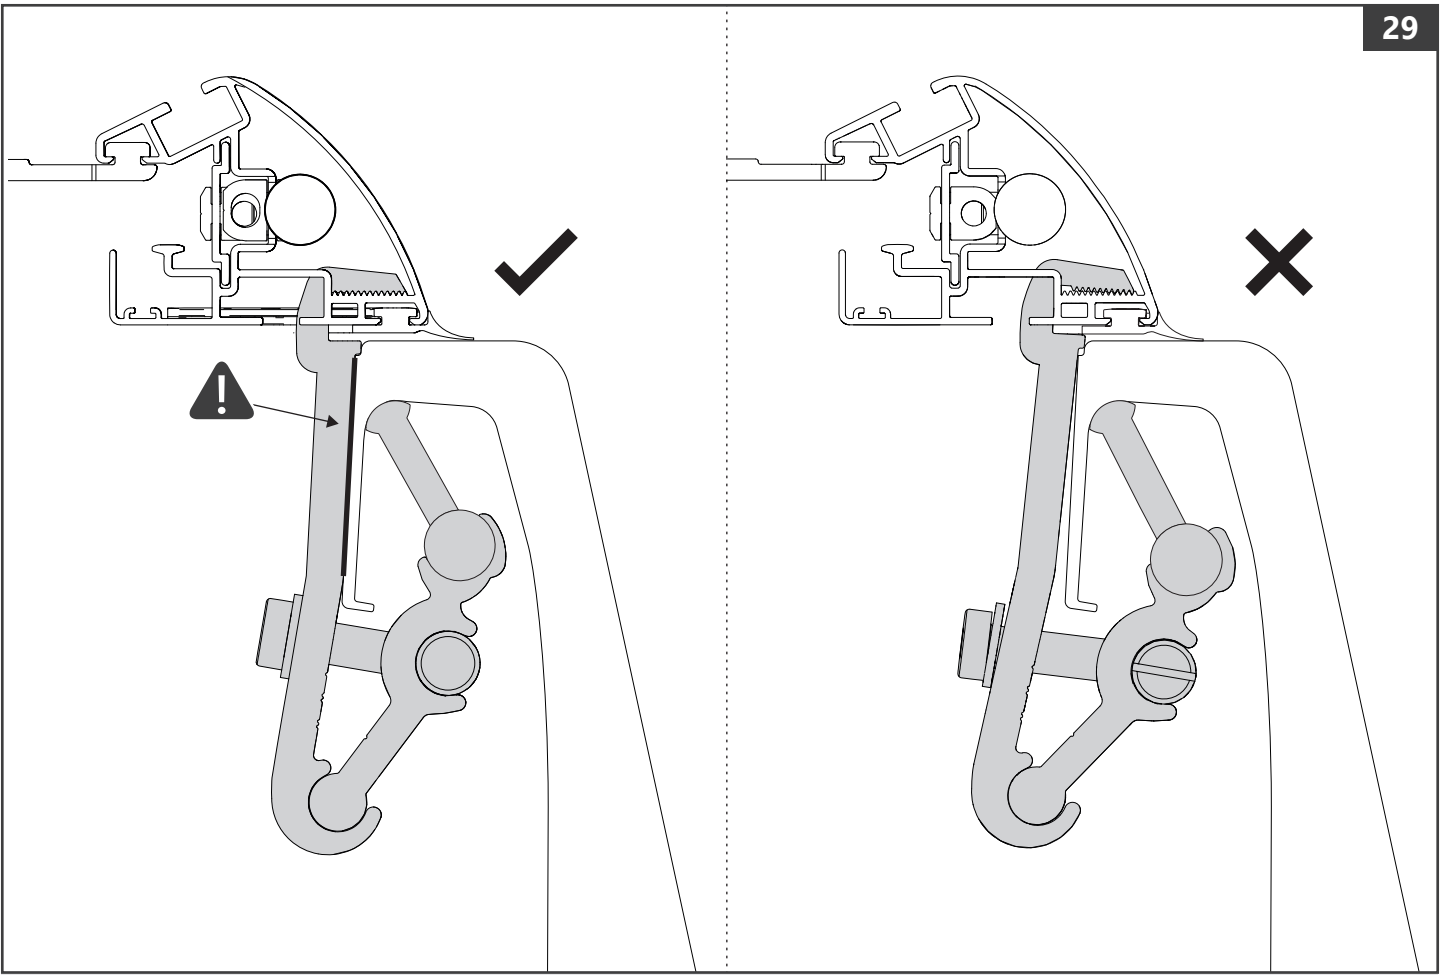


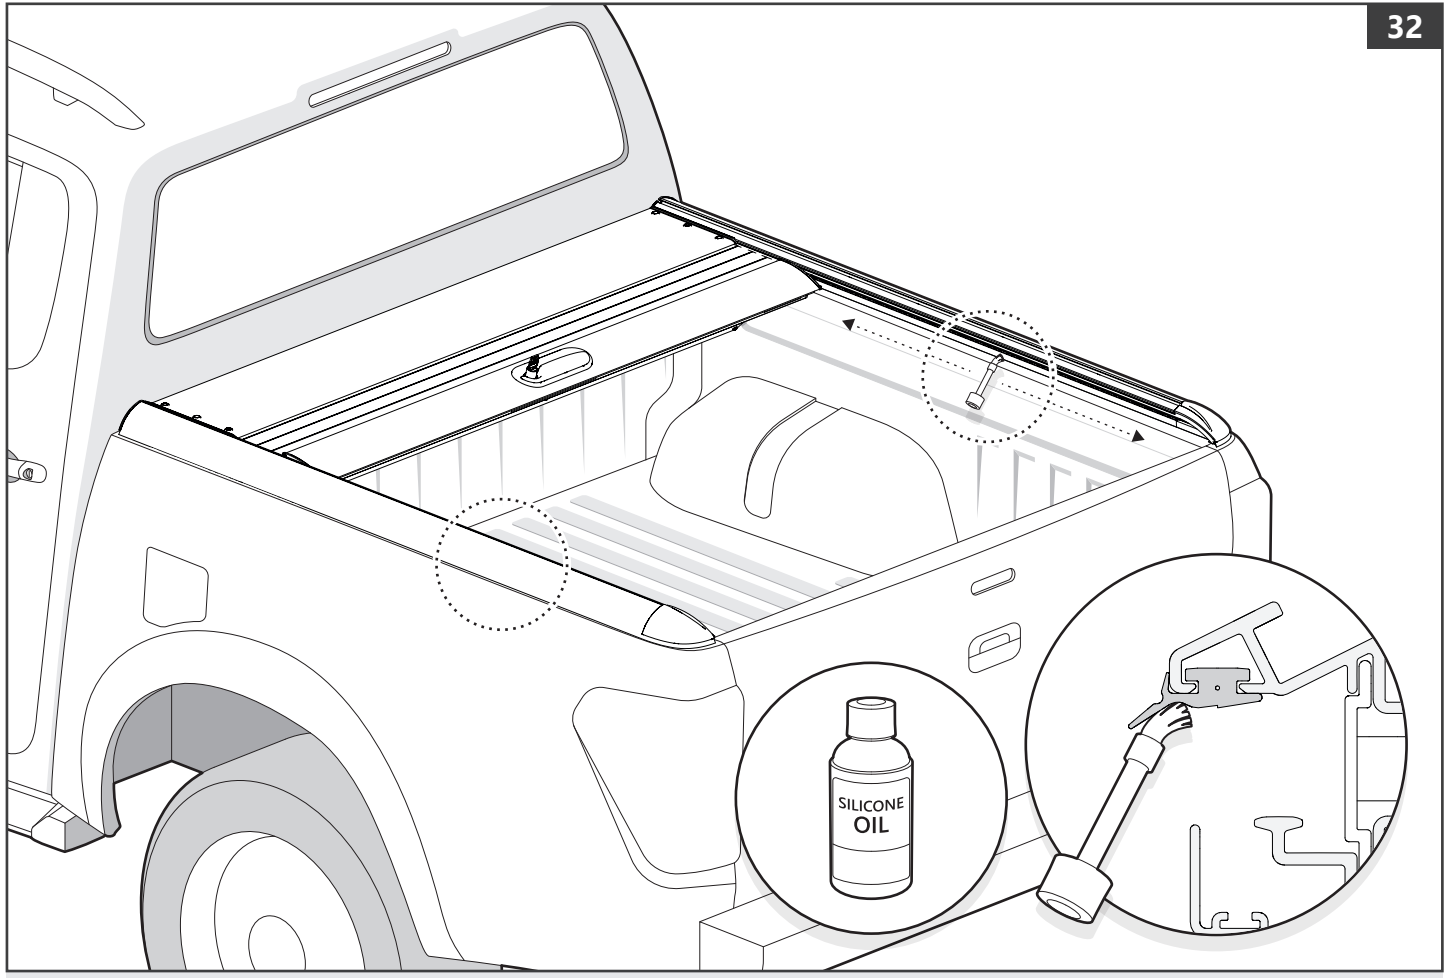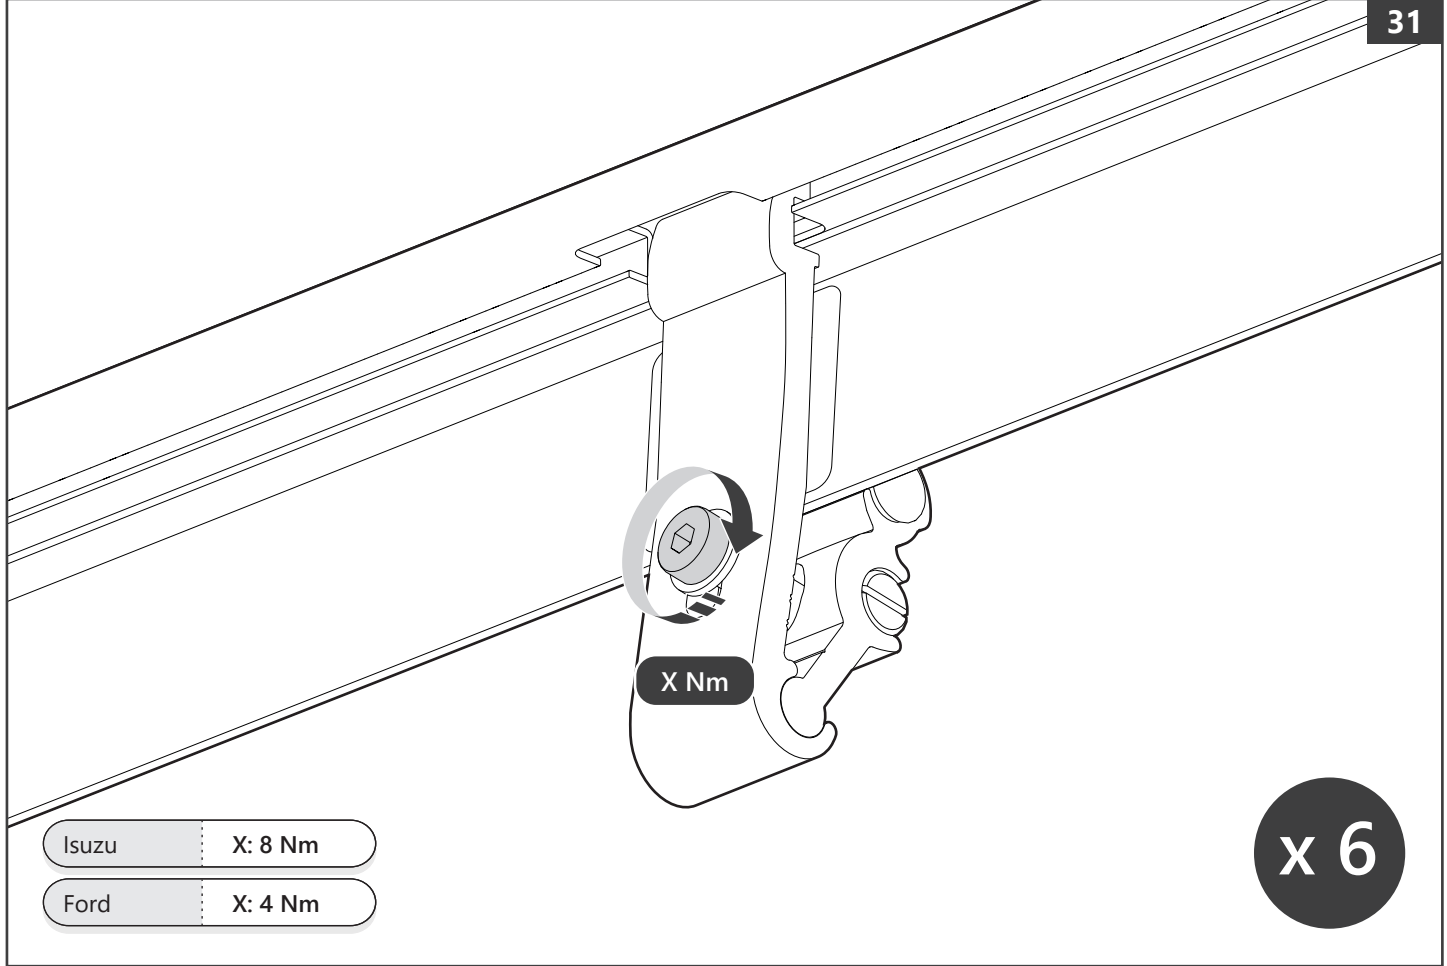

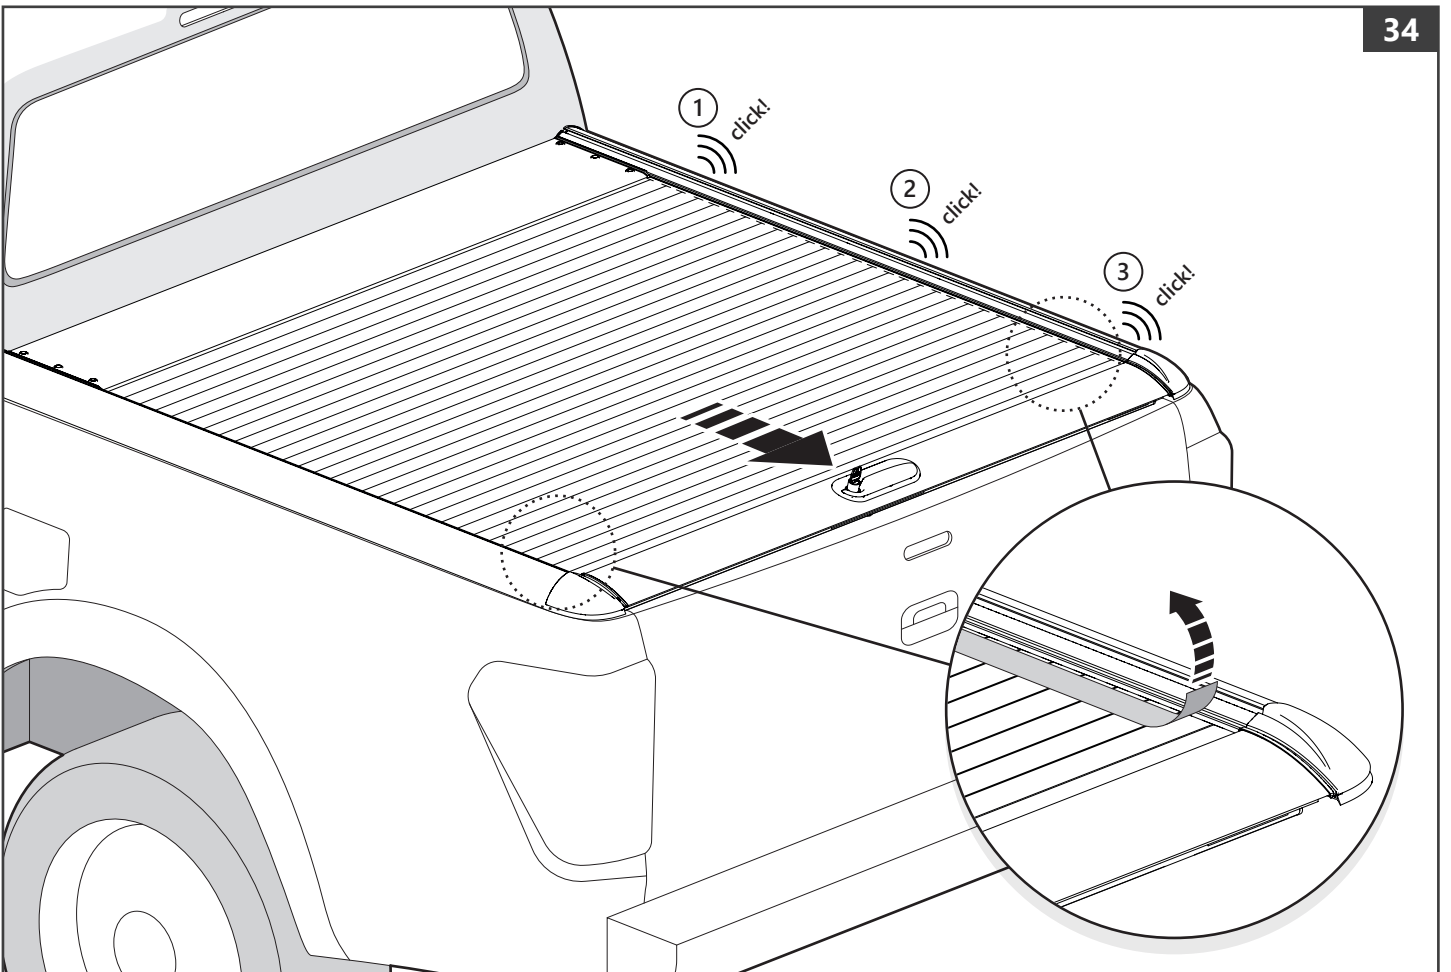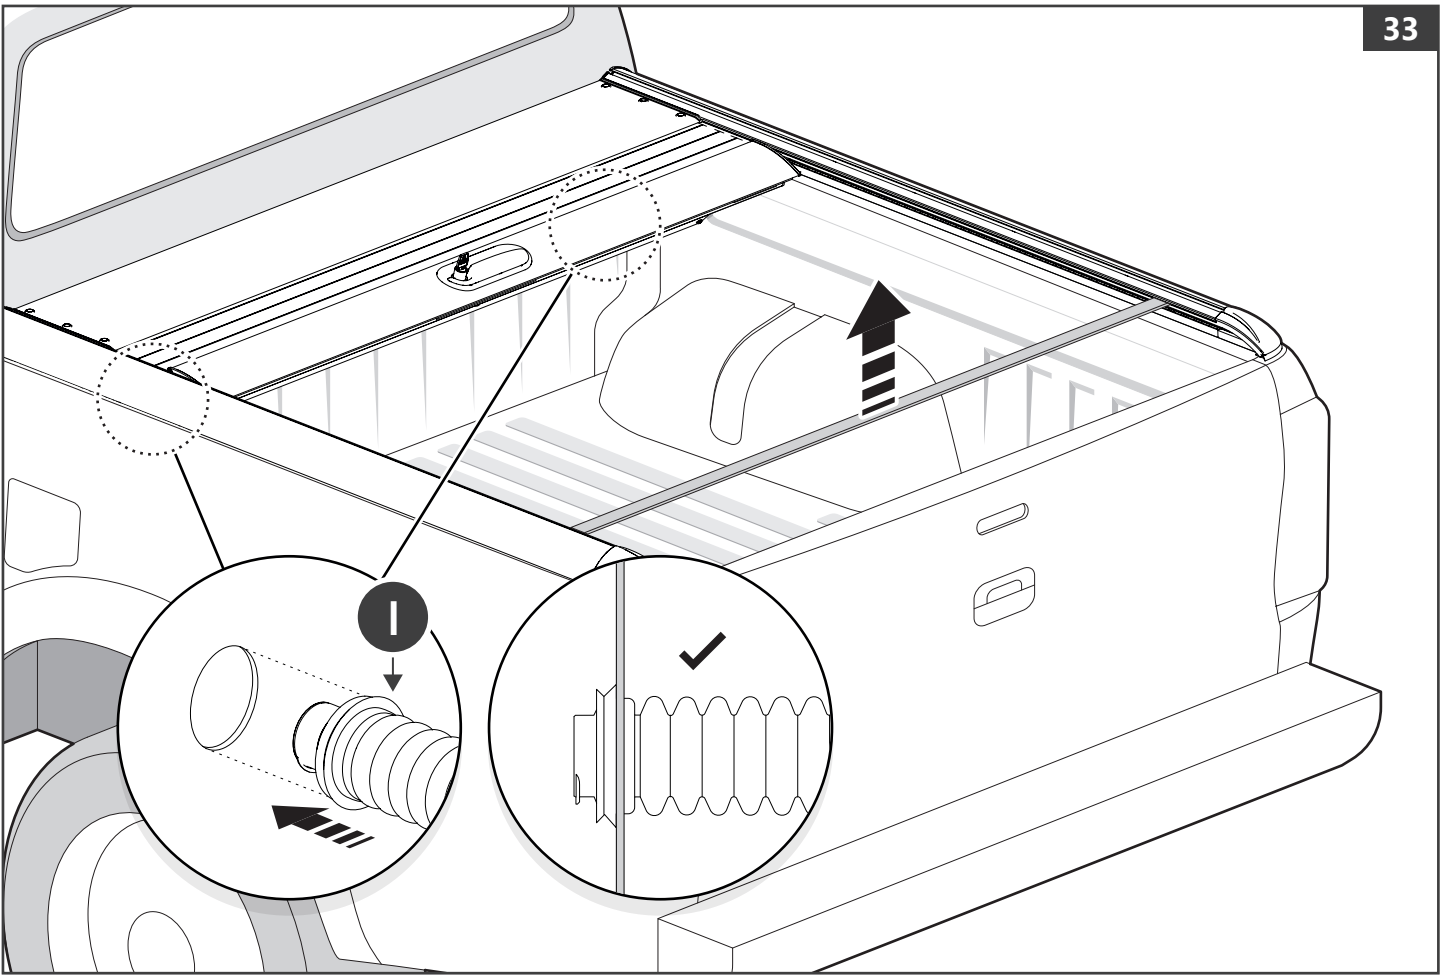

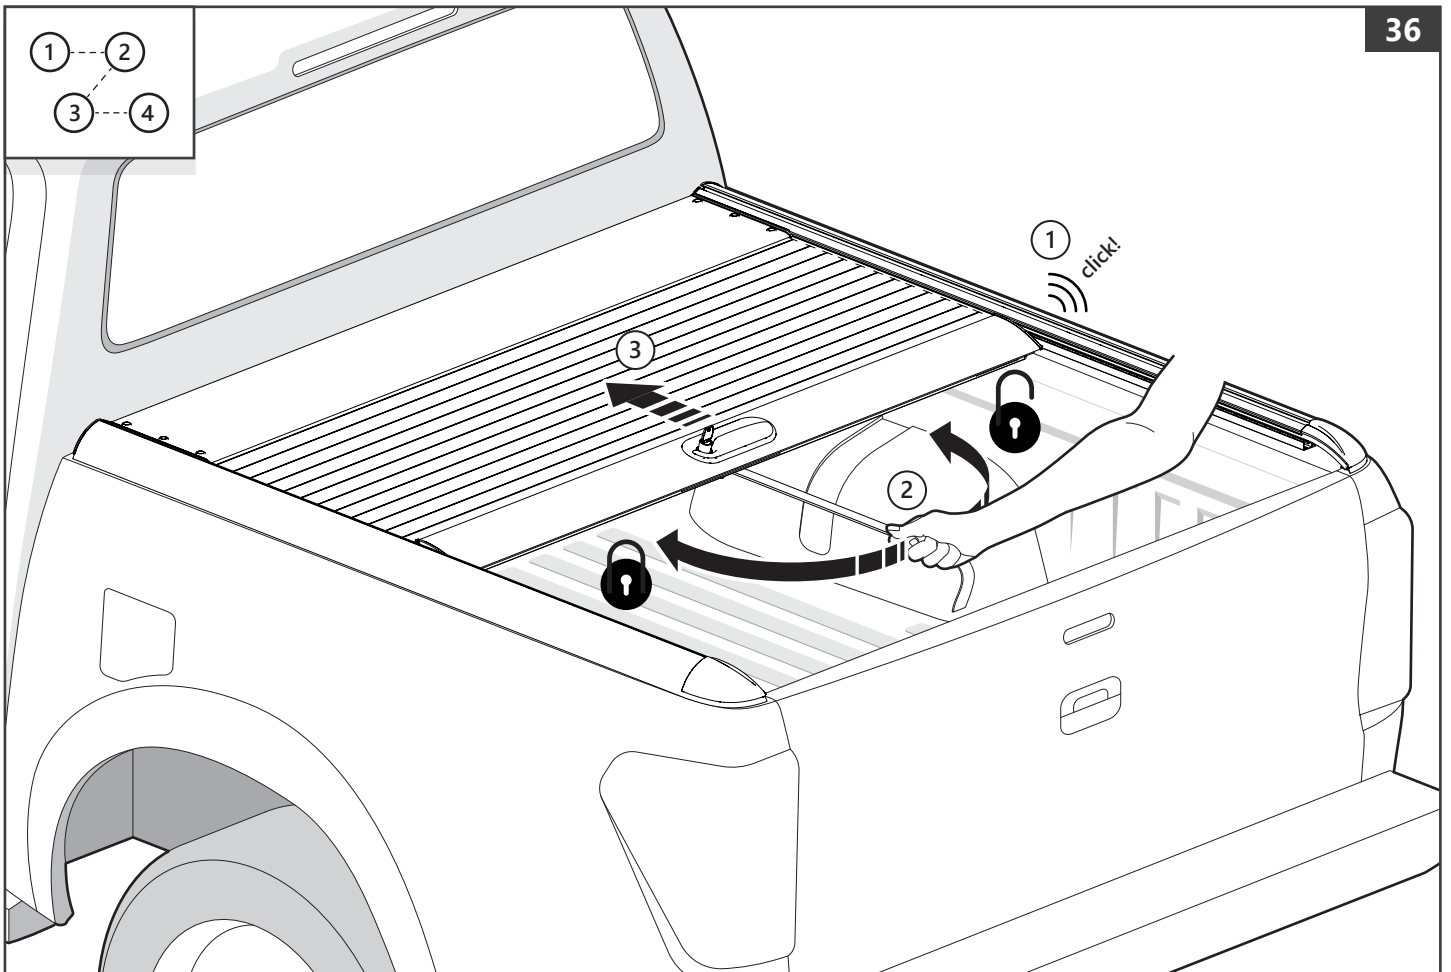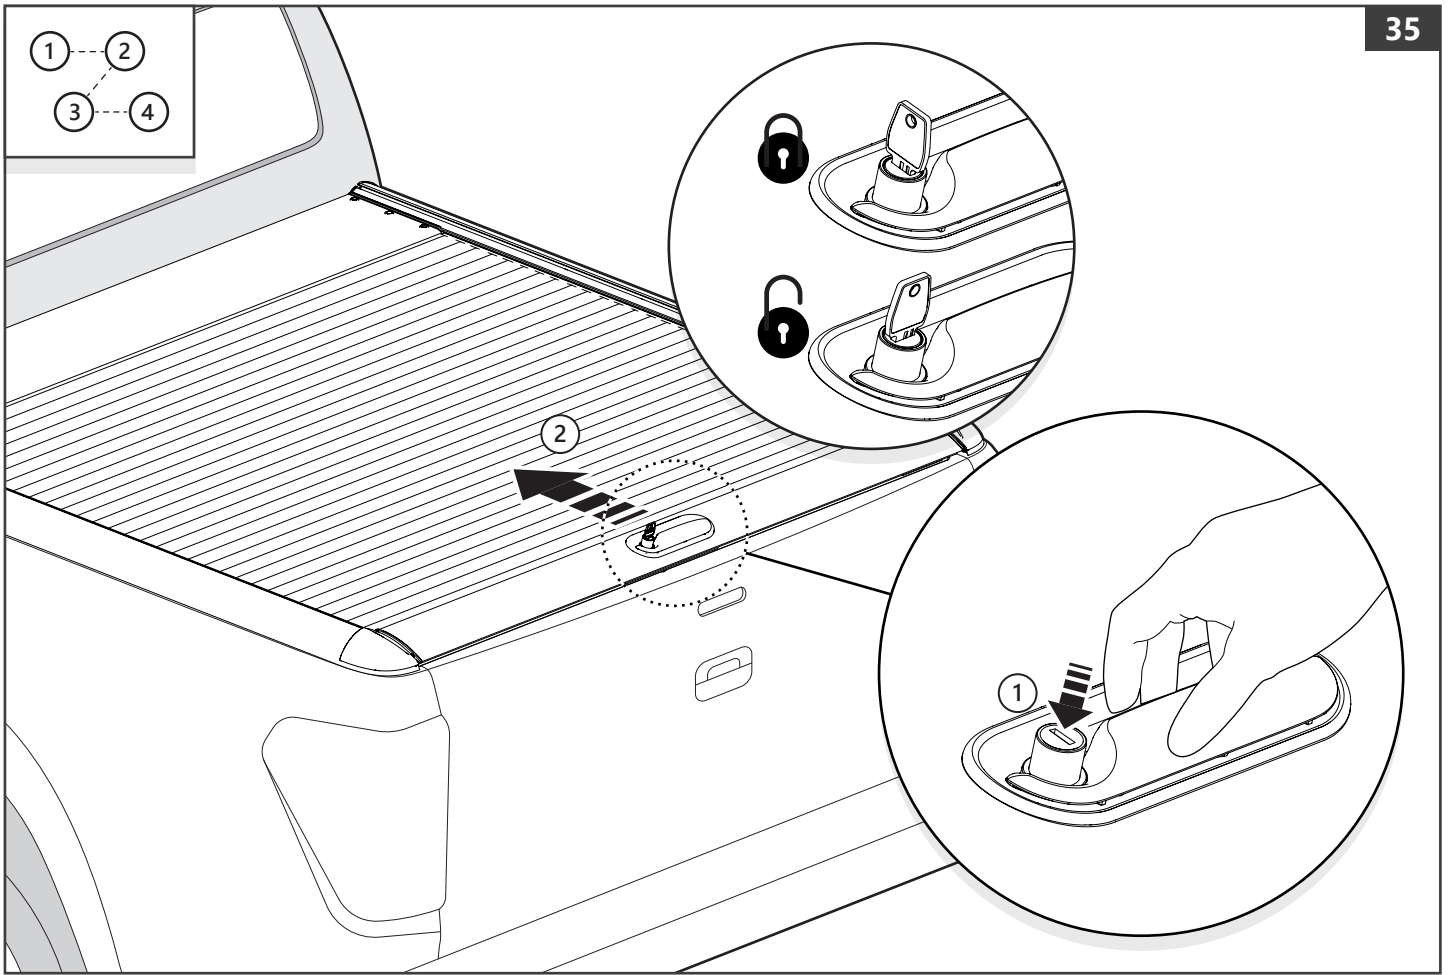

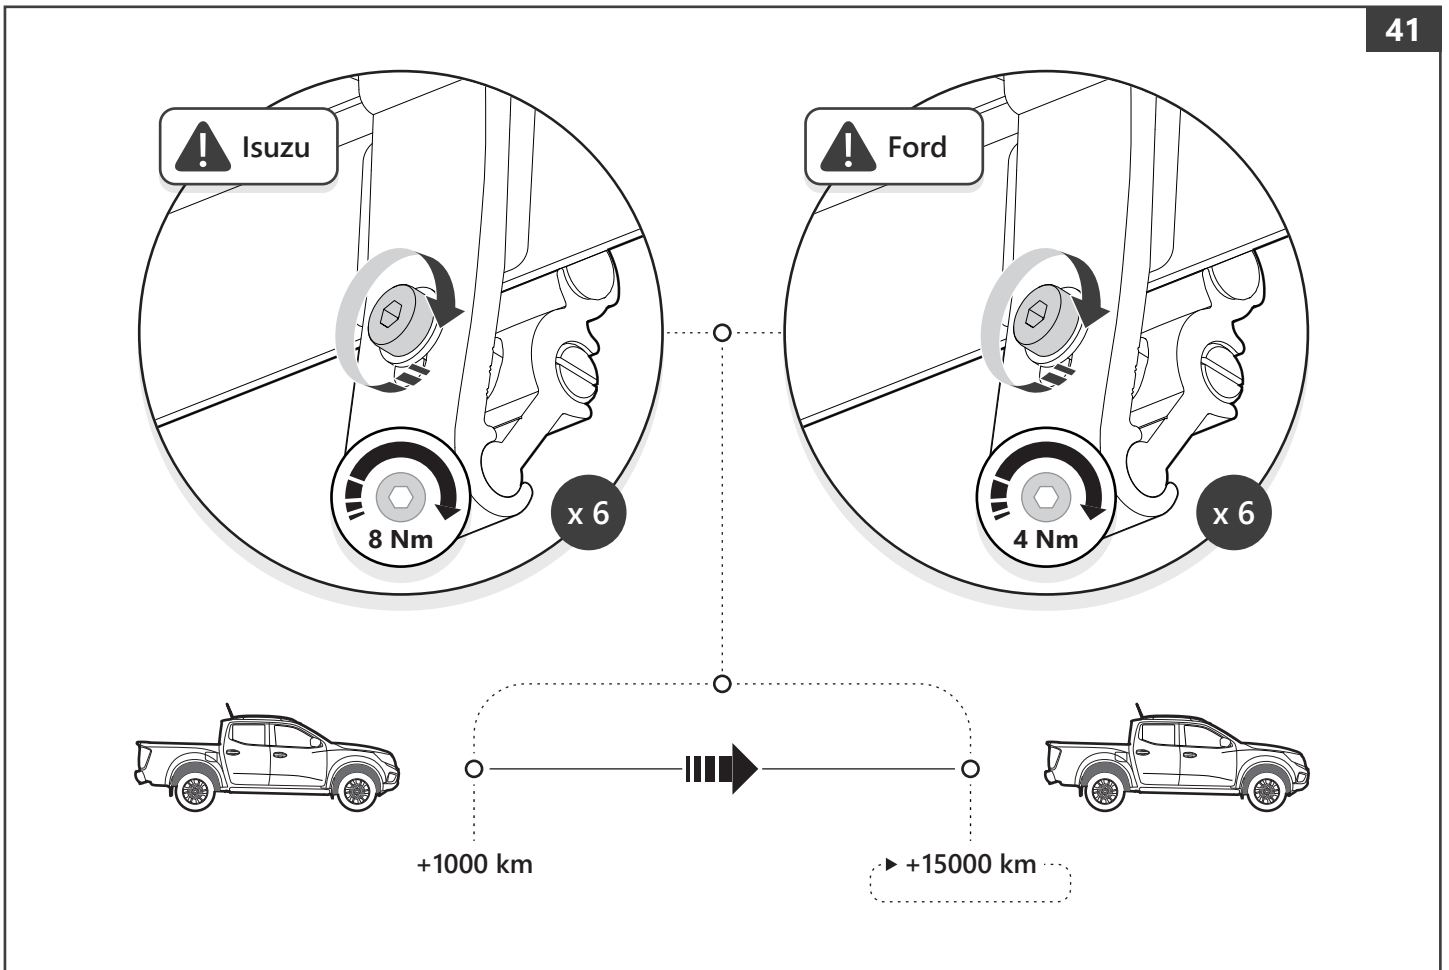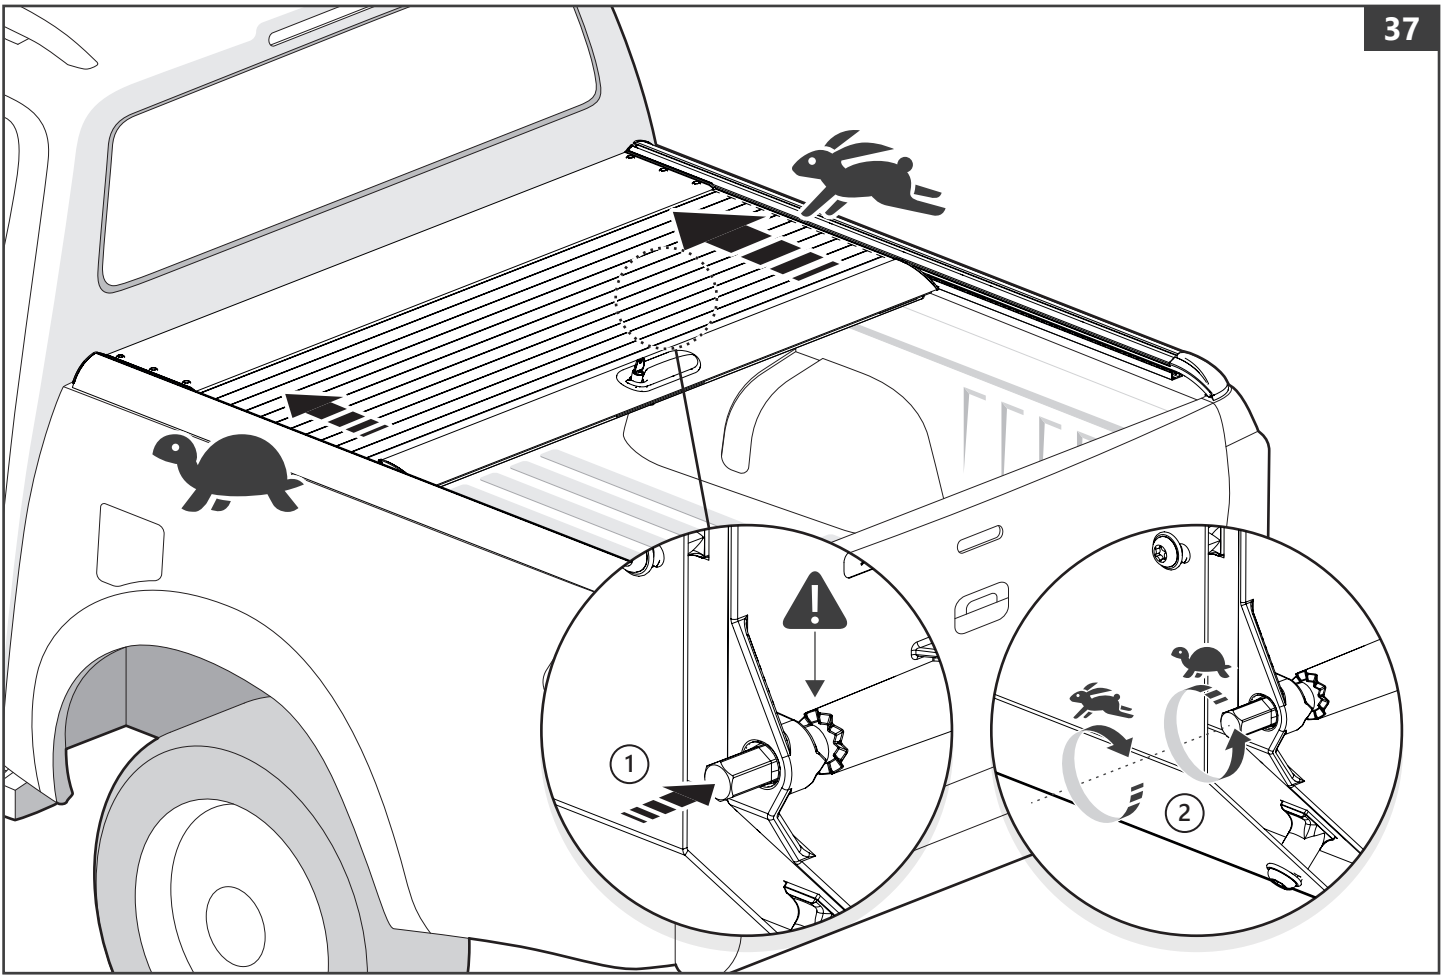

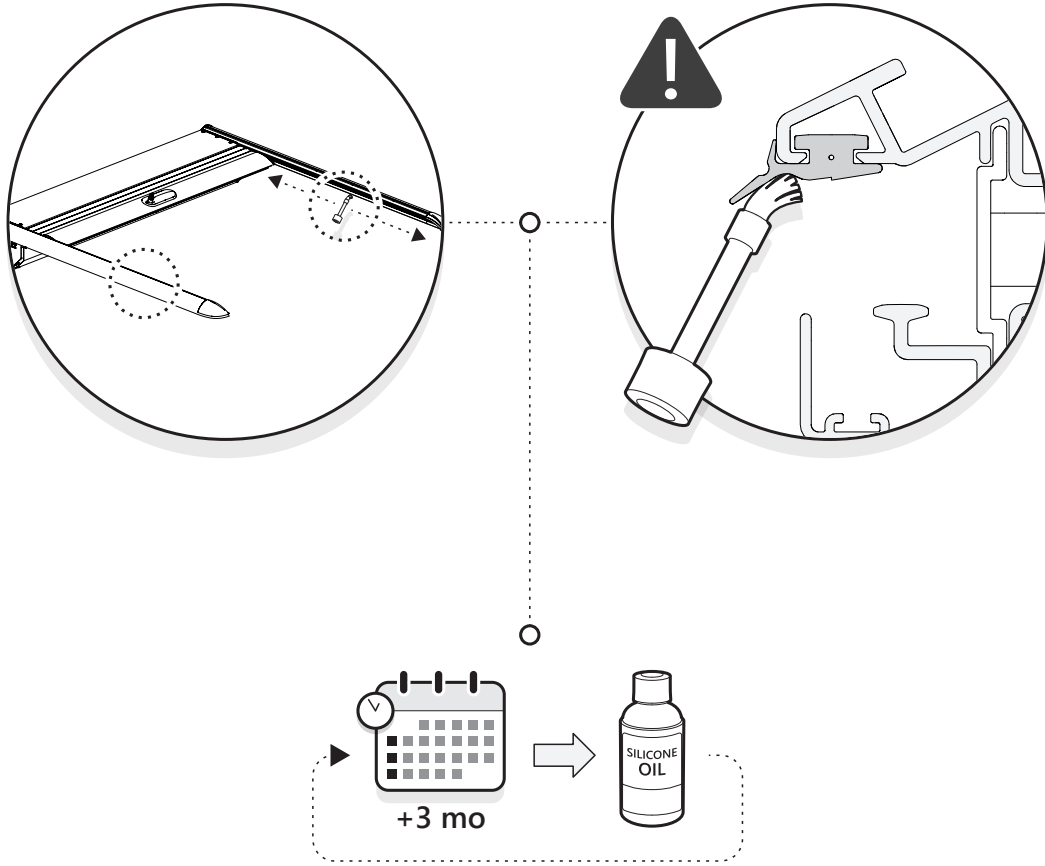











Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Fax +45 4810 2960  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR IS90/91	Isuzu / 2012 →	Double / Space	2 hour(s)	31 - 36 Kg
MTR FO90/91	Ford / 2011 →	Double / Super	2 hour(s)	31 - 36 Kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni de montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare