

Ford Wildtrak
 Mountain Top Roll
 Installation Instructions



- | | |
|---|--|
| GR Installation instruction
Mountain Top Roll | S Monteringsanvisning
Mountain Top Roll |
| D Einbauanleitung
Mountain Top Roll | SF Asennusohje
Mountain Top Roll |
| E Instrucciones de montaje
Mountain Top Roll | CZ Návod k instalaci
Mountain Top Roll |
| F Notice de montage
Mountain Top Roll | H Szerelési utasítás
Mountain Top Roll |
| I Istruzioni di montaggio
Mountain Top Roll | PL Instrukcja montażu
Mountain Top Roll |
| P Instruções de instalação
Mountain Top Roll | GR Οδηγίες Εγκατάστασης
Mountain Top Roll |
| NL Installatie-instructies
Mountain Top Roll | RUS Инструкция по установке
Mountain Top Roll |
| DK Monteringsvejledning
Mountain Top Roll | TR Montaj Talimatı
Mountain Top Roll |
| N Monteringsveiledning
Mountain Top Roll | RO Instrucțiuni de instalare
Mountain Top Roll |

Model Year: 2011 →
 Part Number: MTR FO90 H03 Double cab (DC)



Weight: 31 / 36 kg






























Installation Time: 2 hr

MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 1 /26
Pedersholmparken 10		3600 Frederikssund	Denmark	ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

Ford Wildtrak

Mountain Top Roll














Installation Instructions

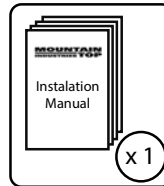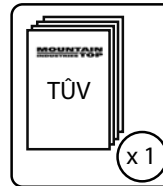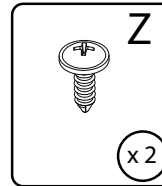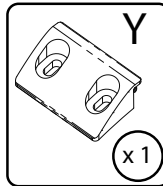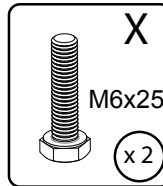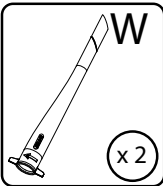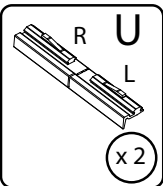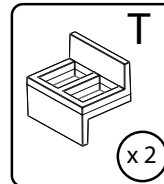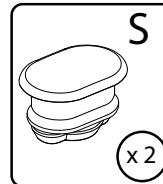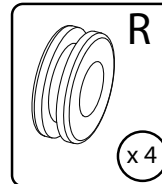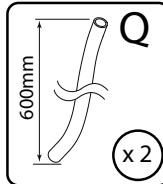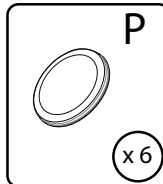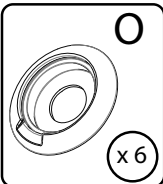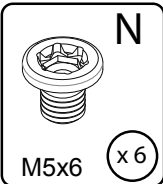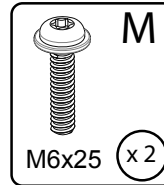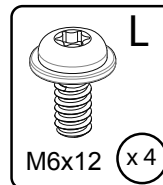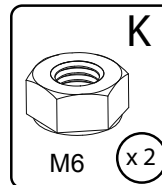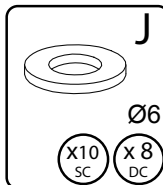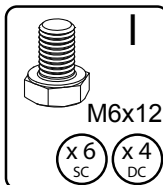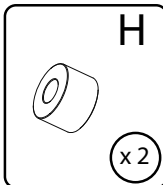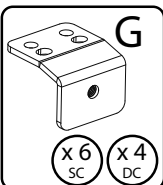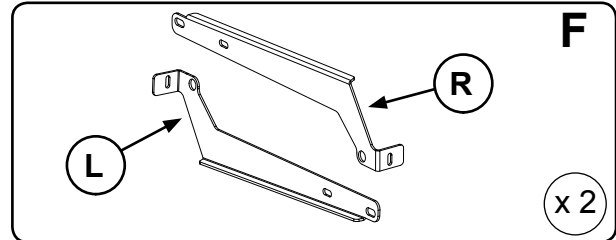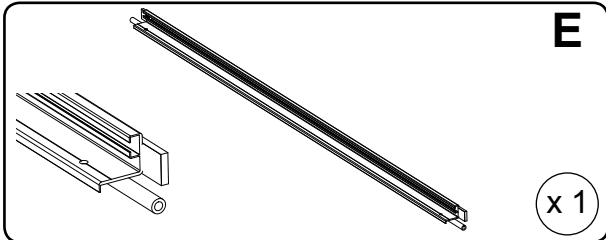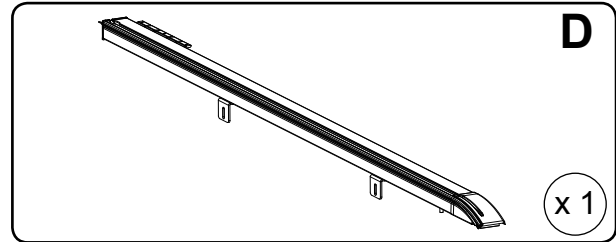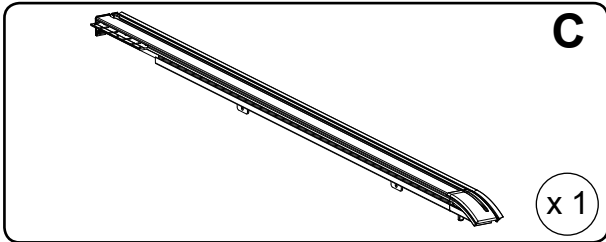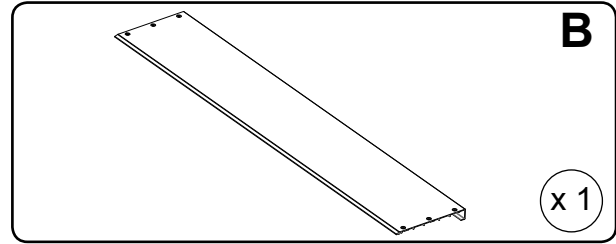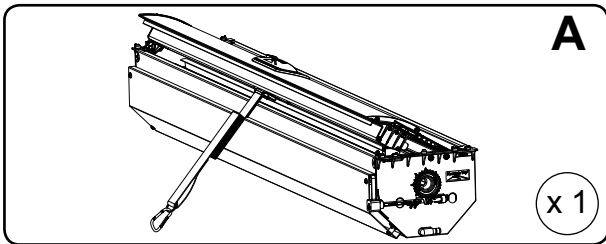

Ford Wildtrak


Mountain Top Roll

Installation Instructions

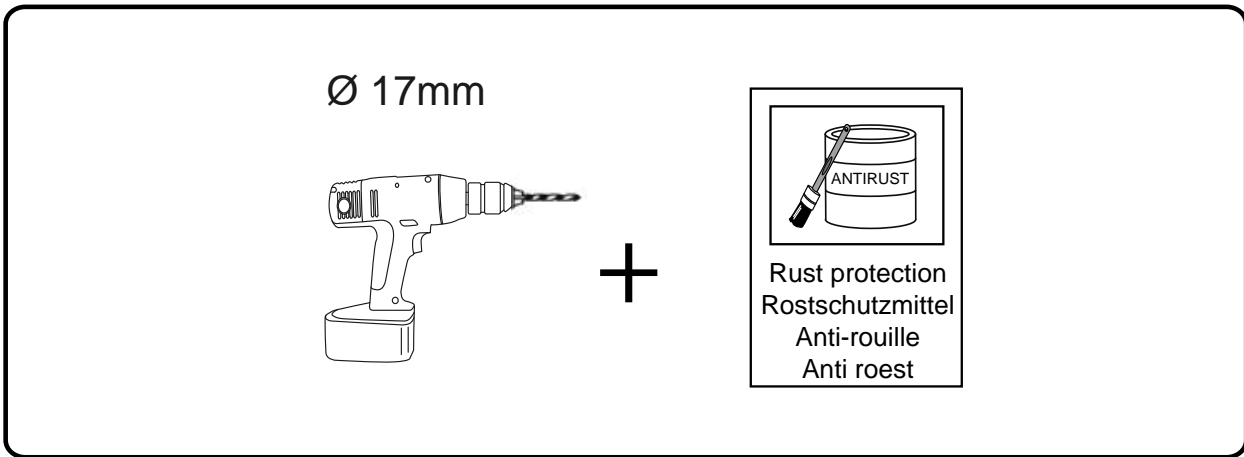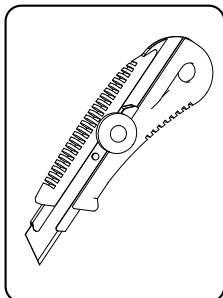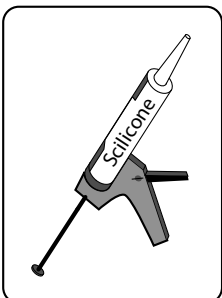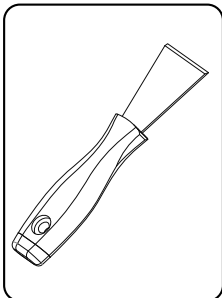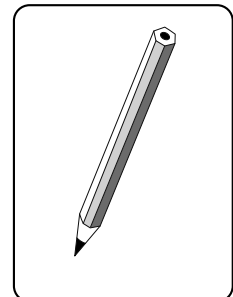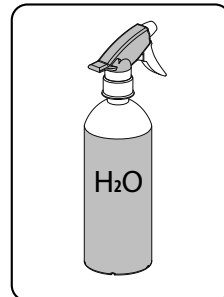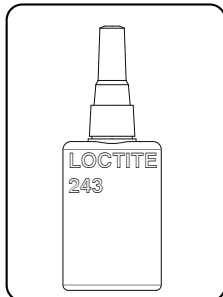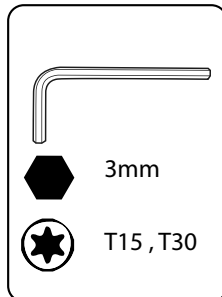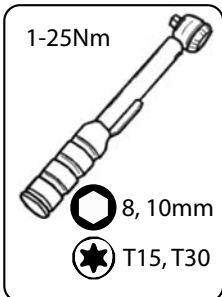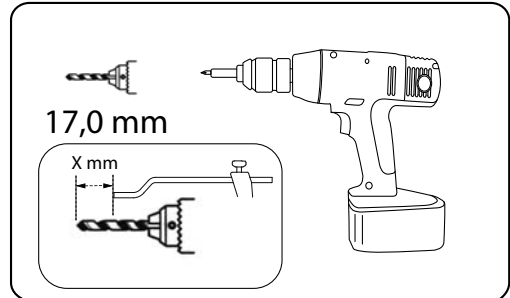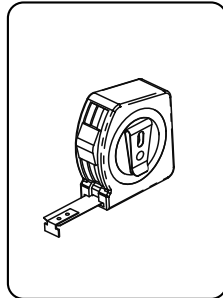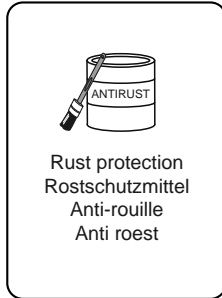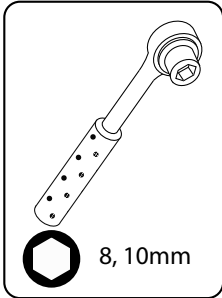

Ford Wildtrak



Mountain Top Roll
Installation Instructions

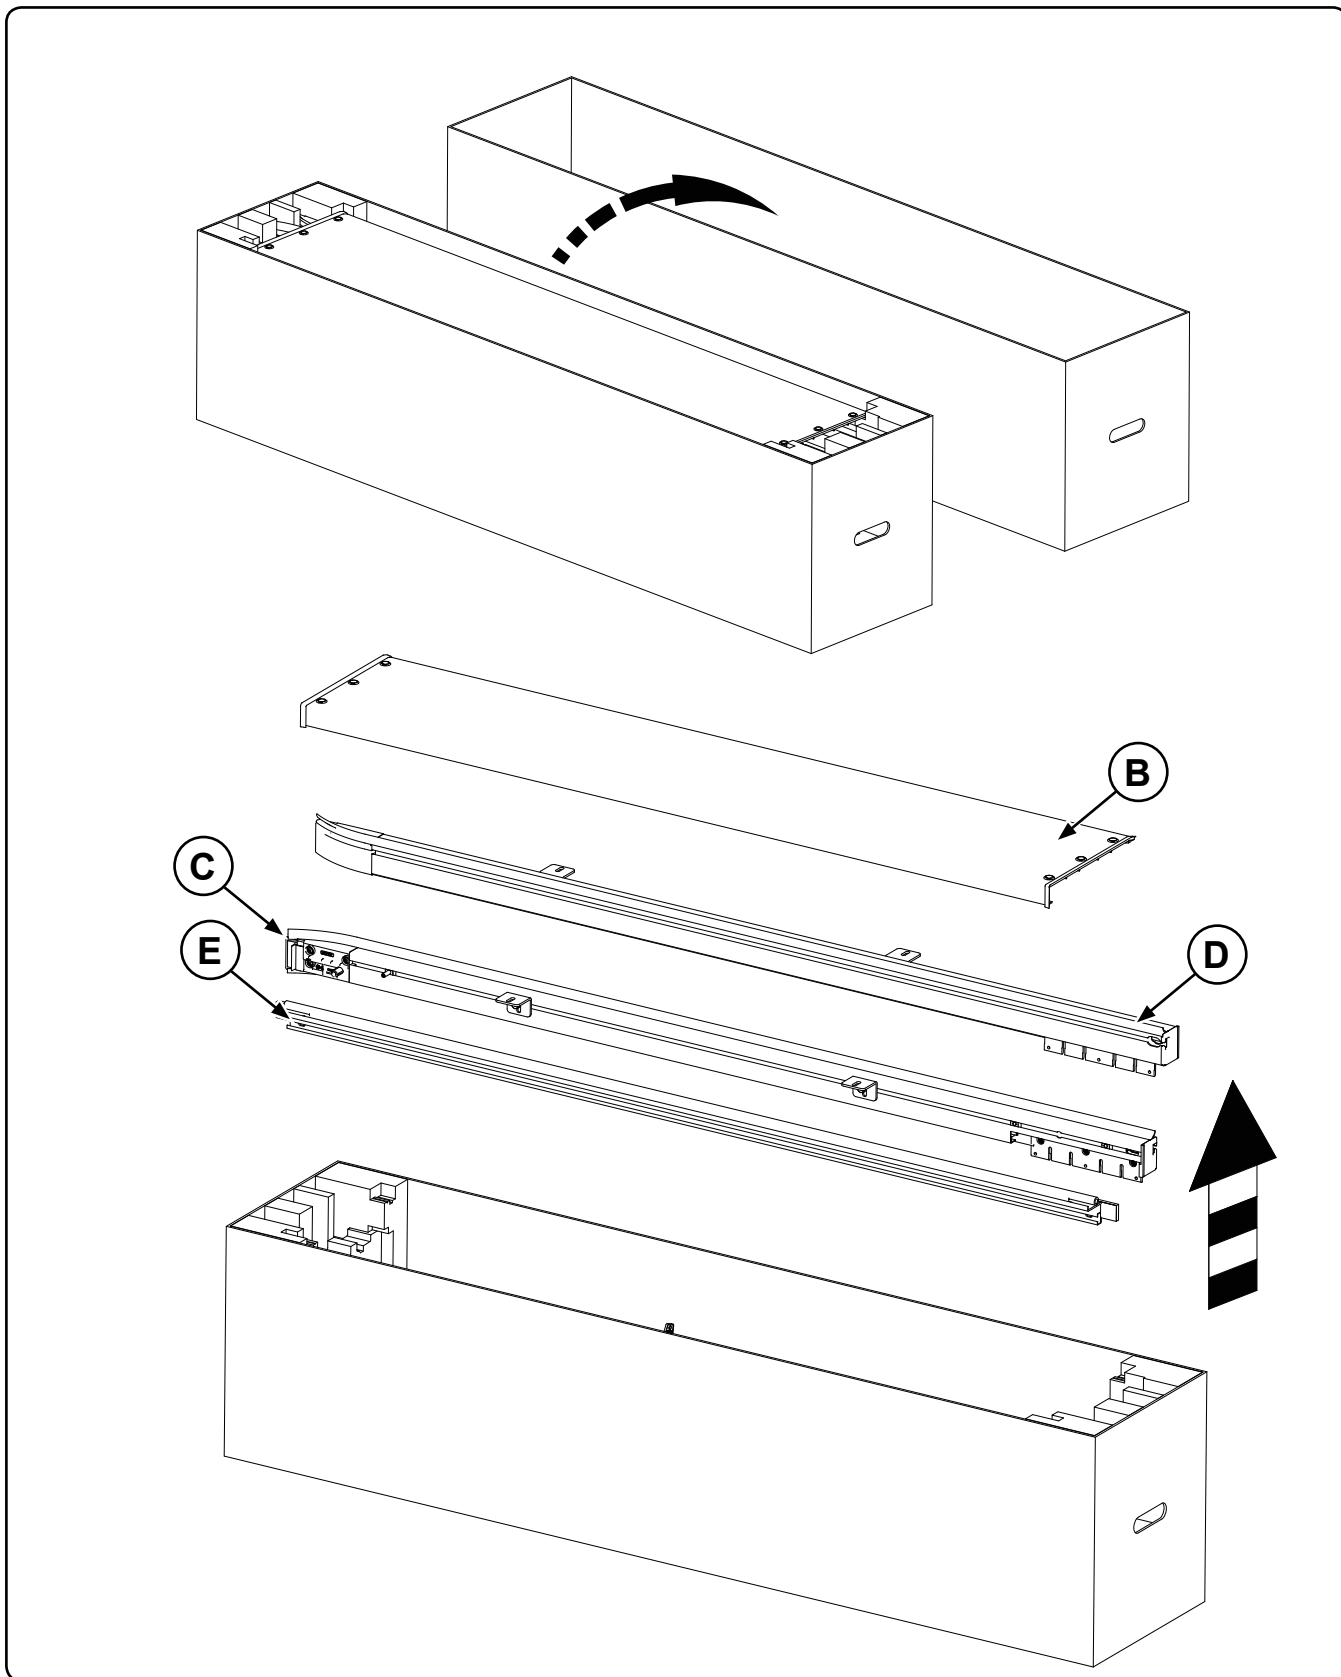

Ford Wildtrak

Mountain Top Roll

Installation Instructions

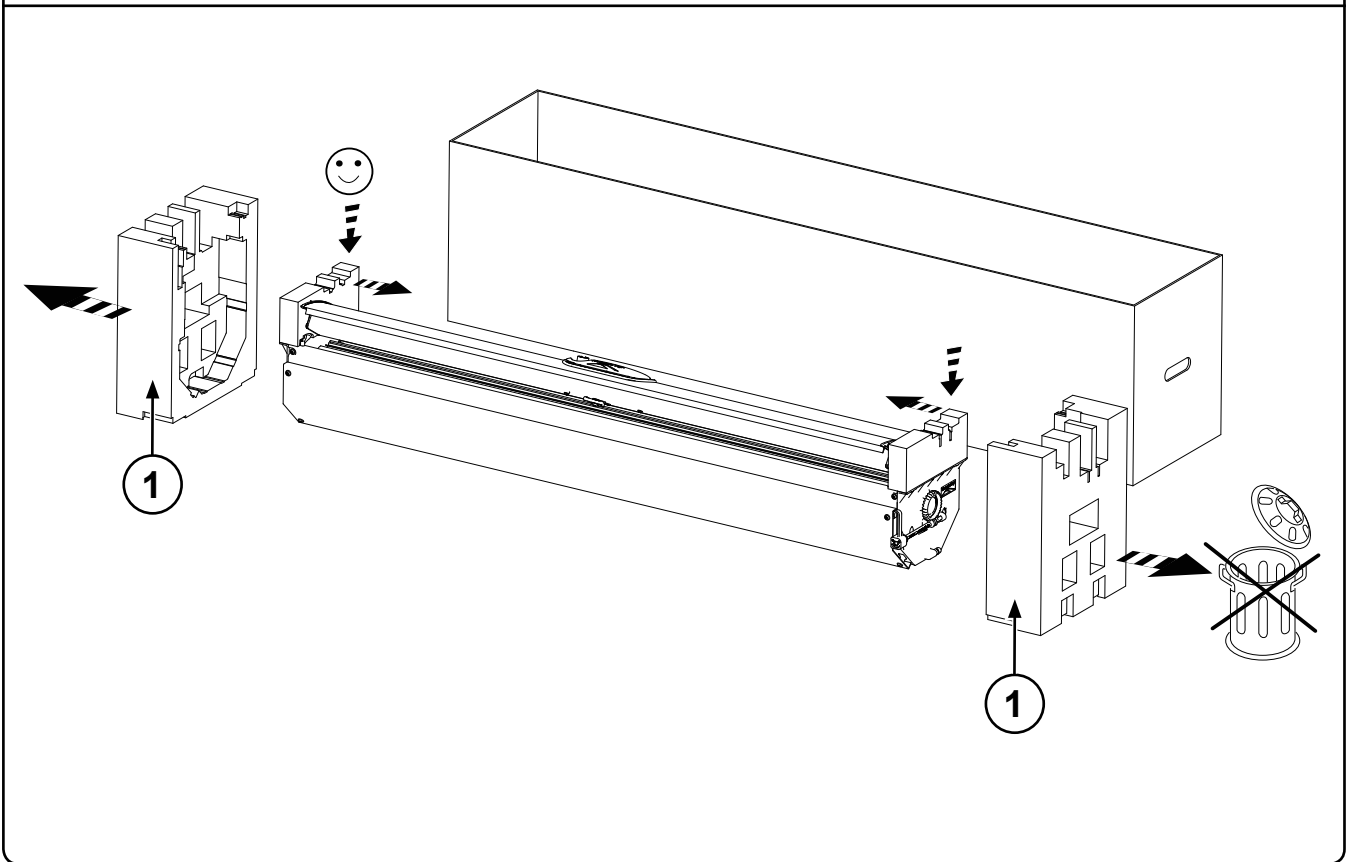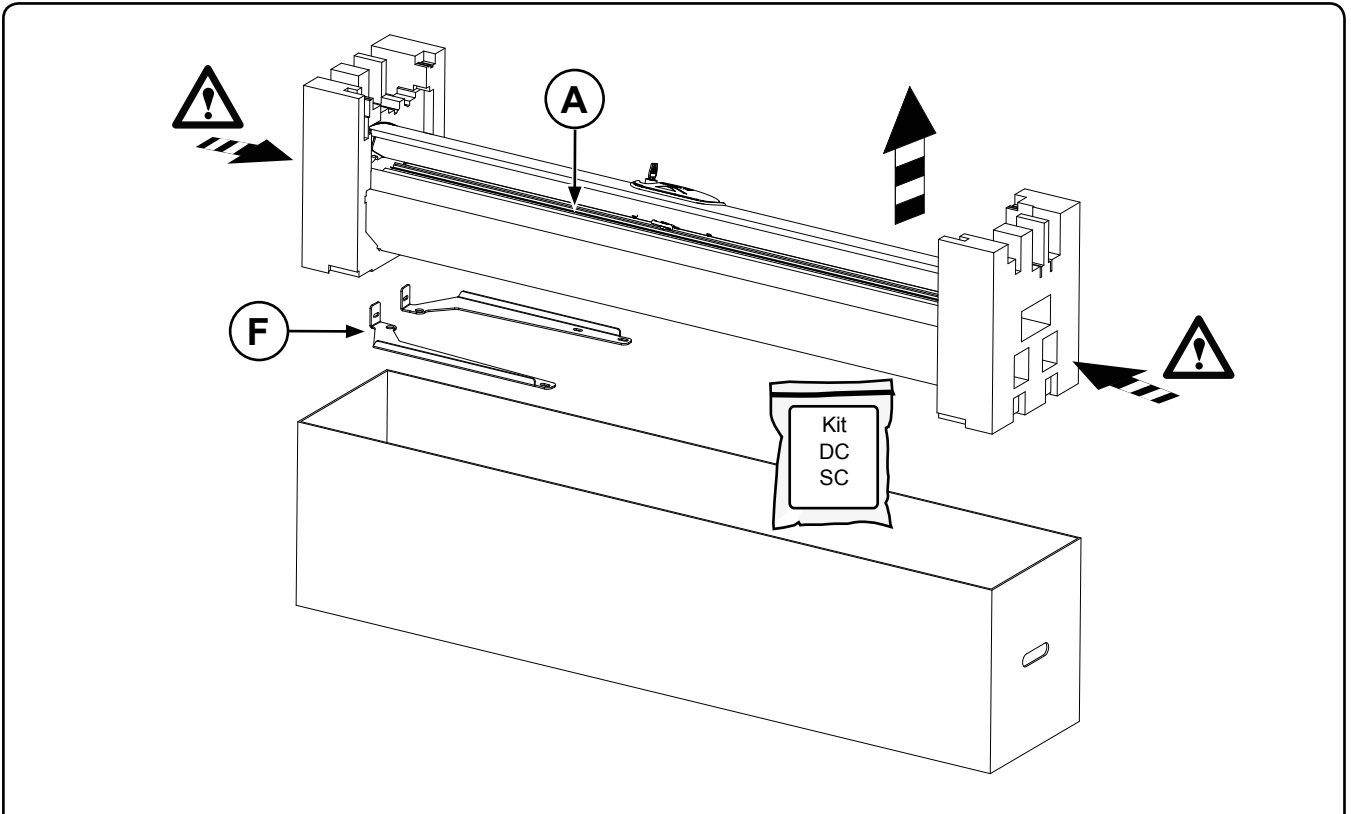


Ford Wildtrak

Mountain Top Roll

Installation Instructions




L & R

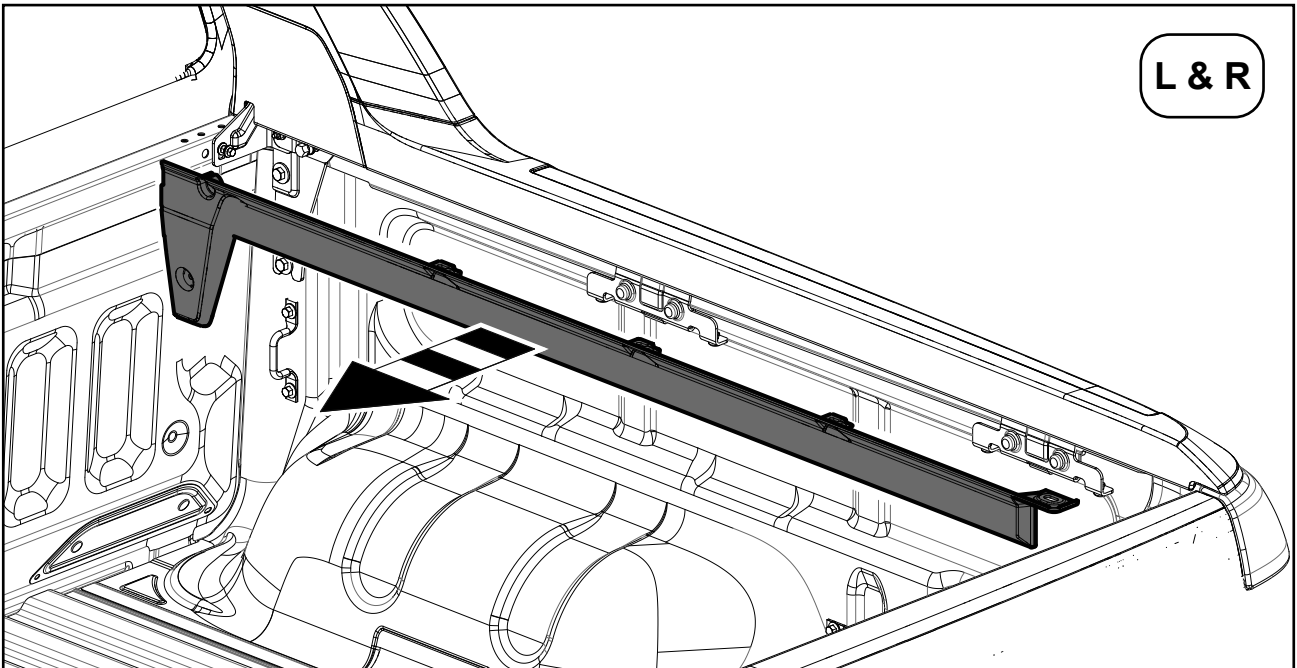


Double Cab

L & R

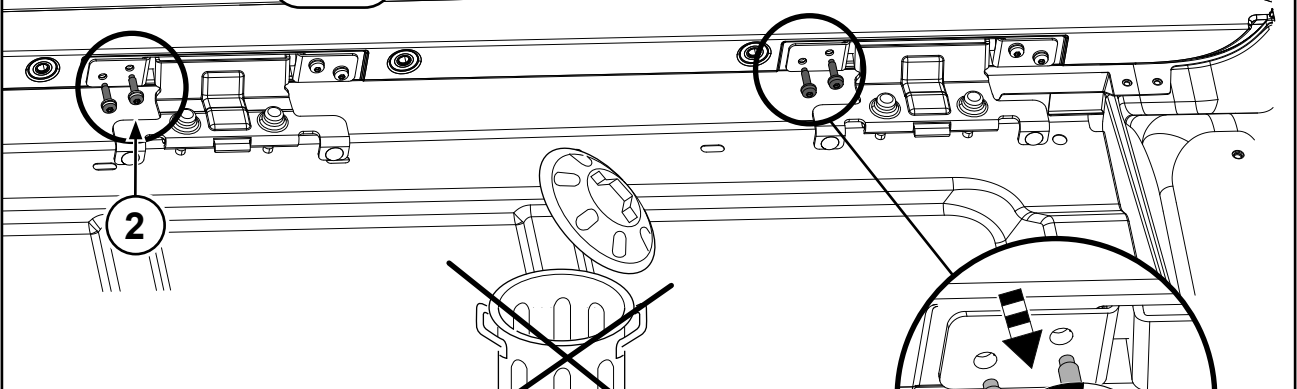

Super Cab

L & R

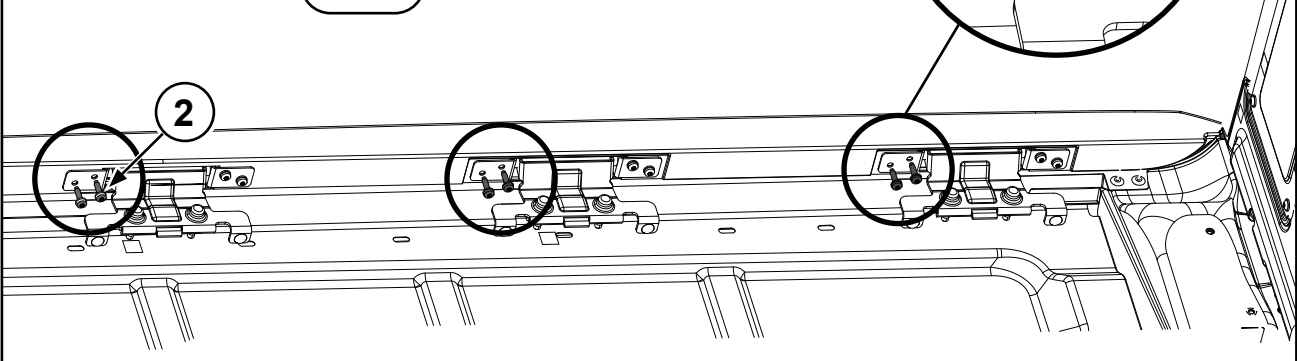


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 6 /26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll



Installation Instructions

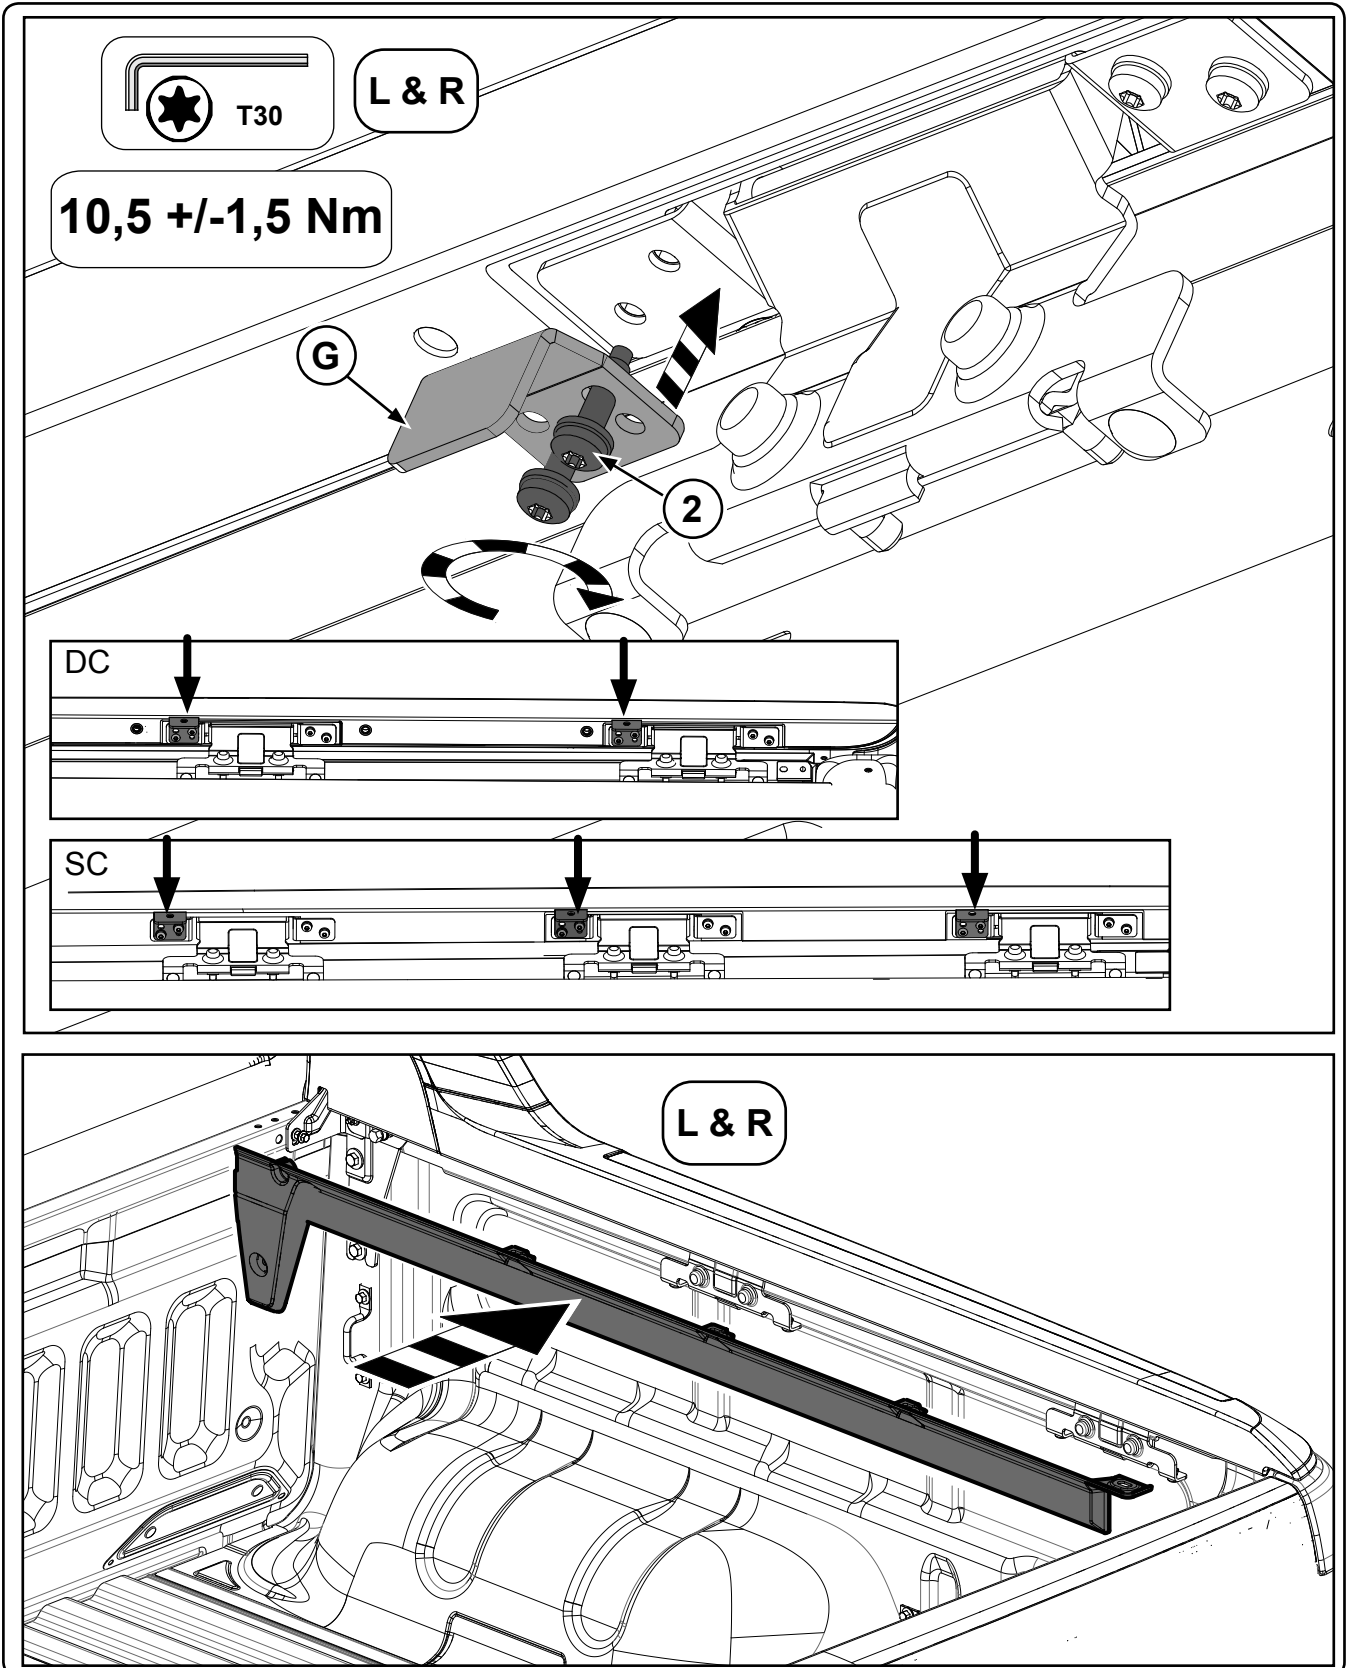

Ford Wildtrak

Mountain Top Roll





Installation Instructions

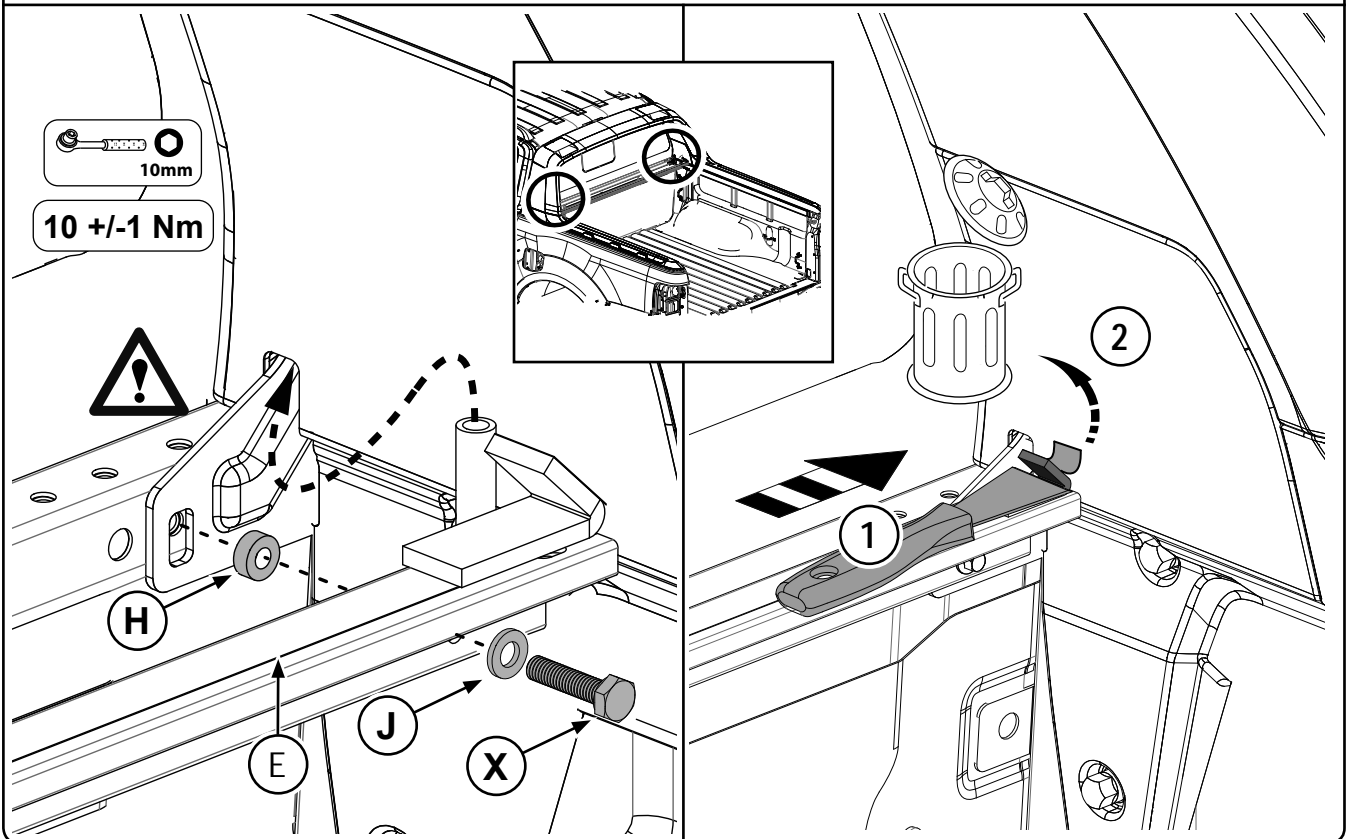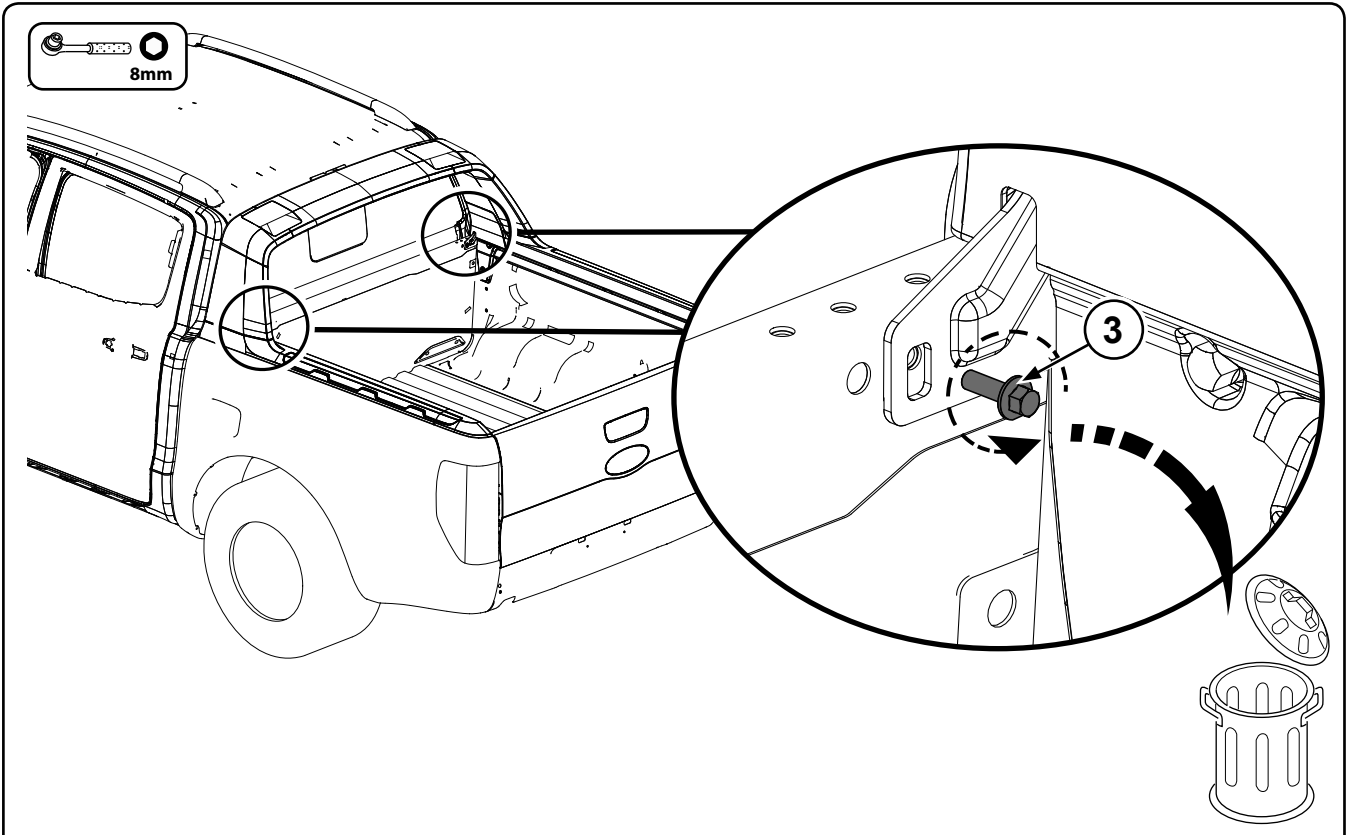

Ford Wildtrak

Mountain Top Roll



Installation Instructions

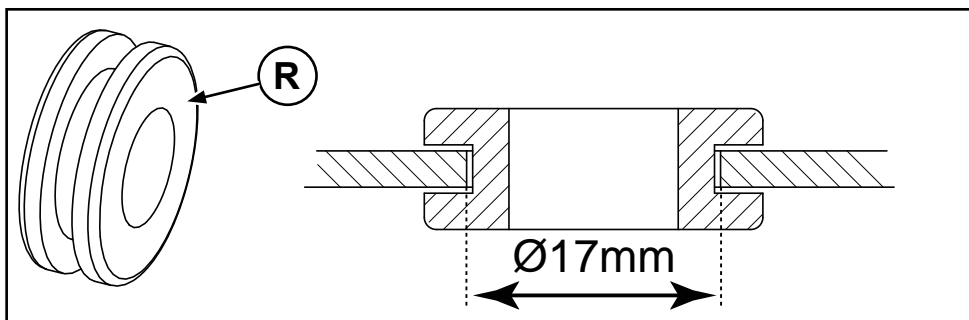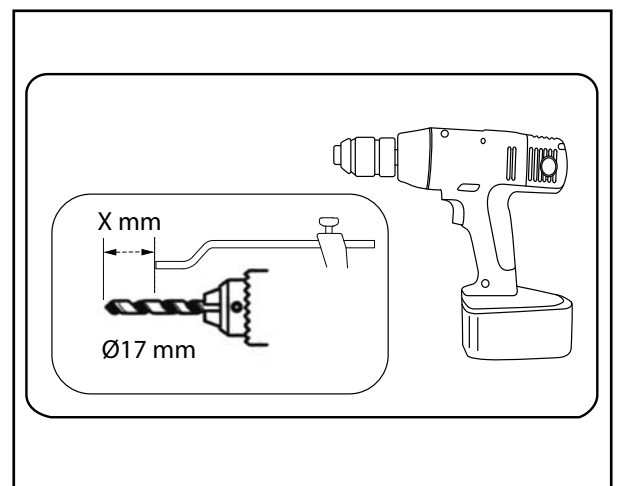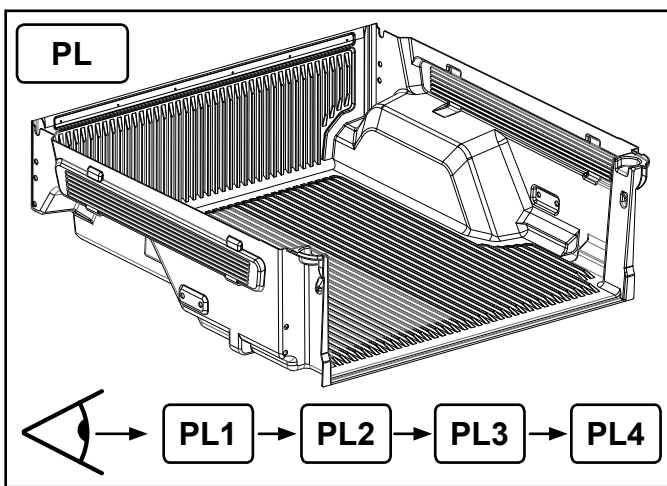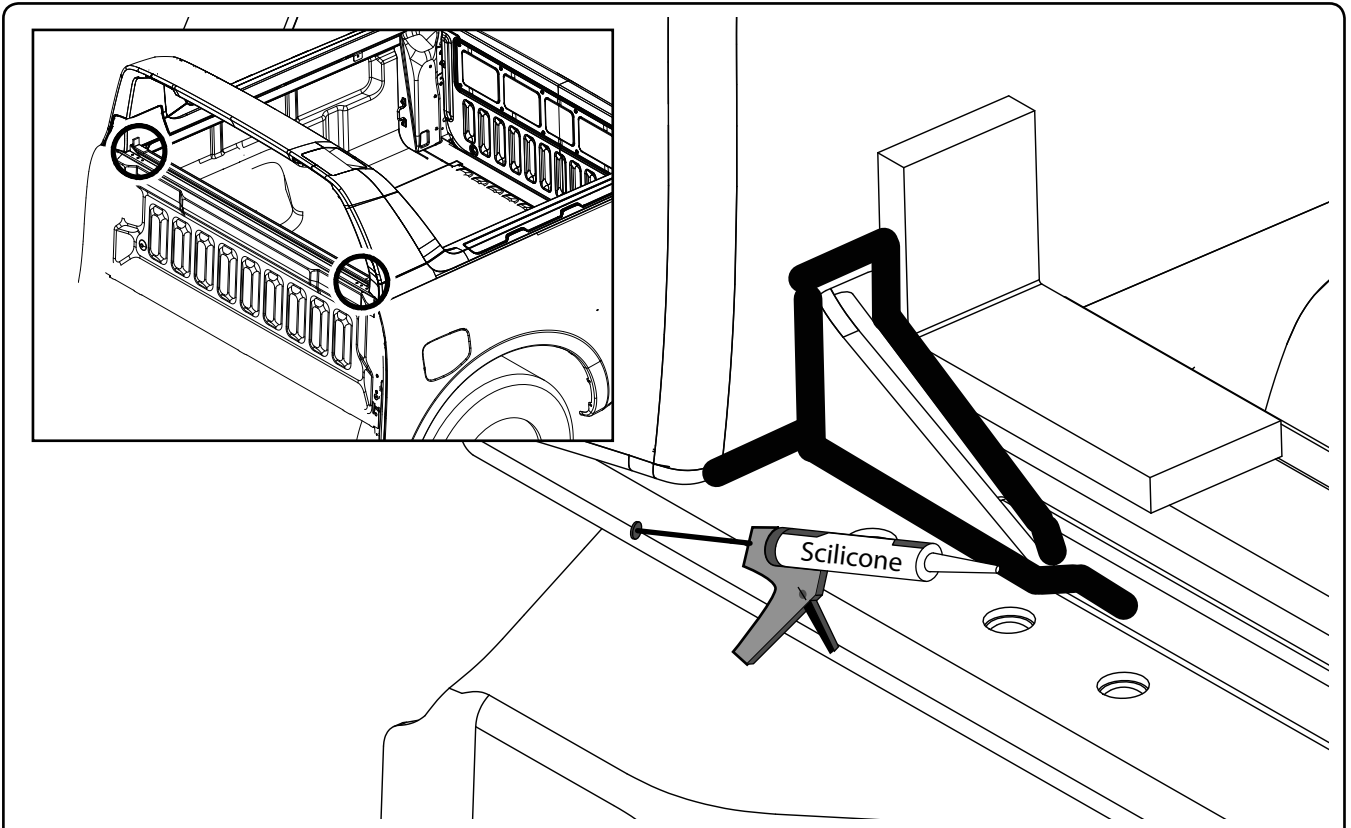

Ford Wildtrak

Mountain Top Roll

Installation Instructions

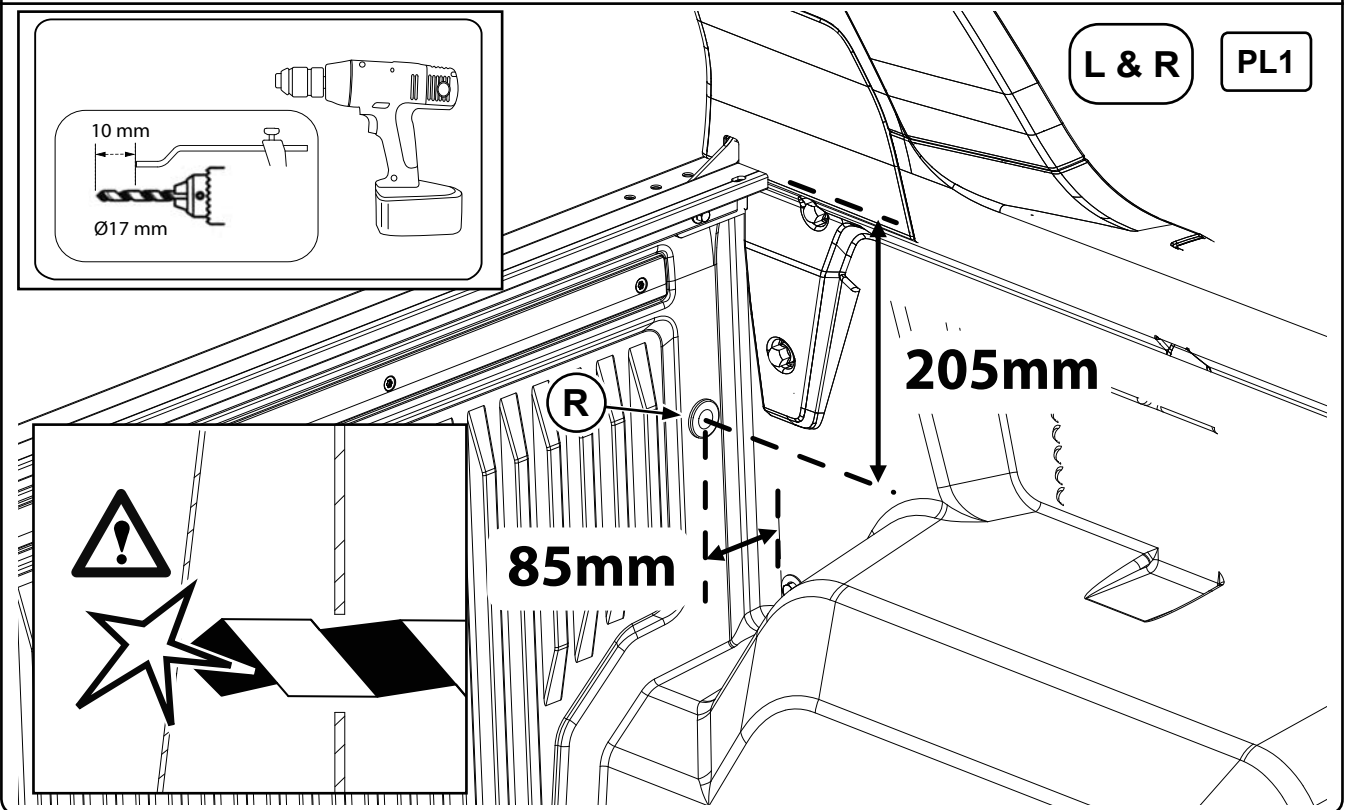
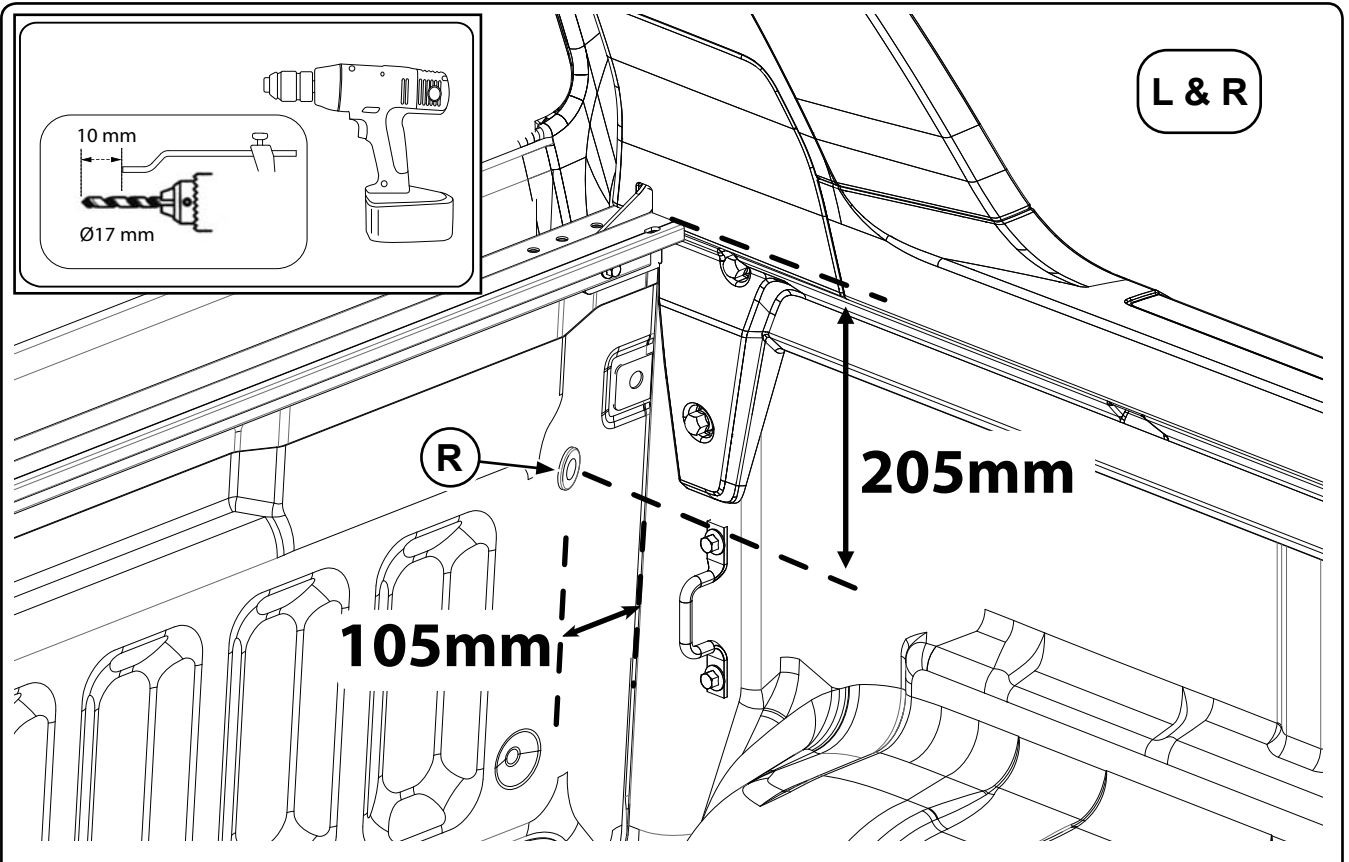


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 10/26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll

Installation Instructions

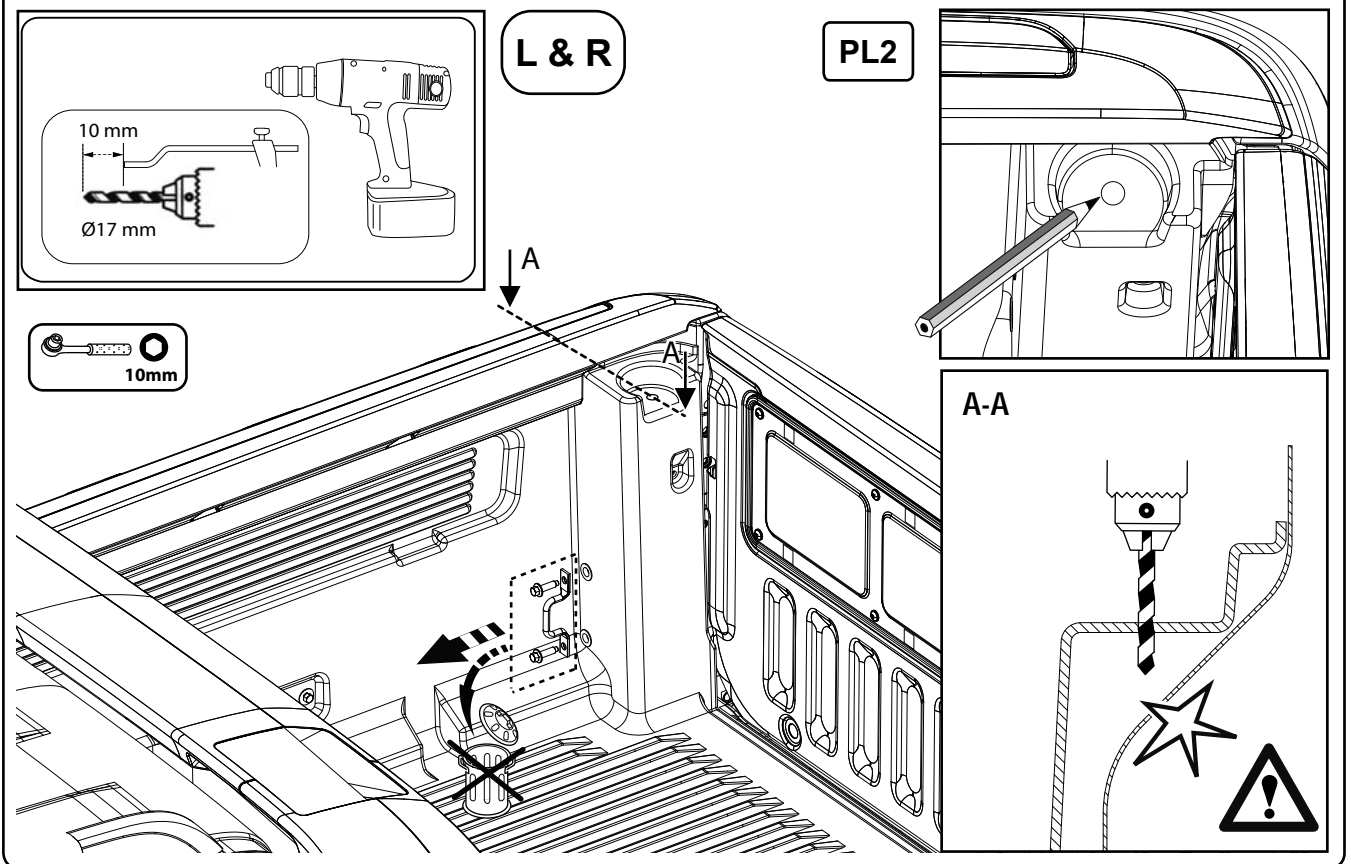
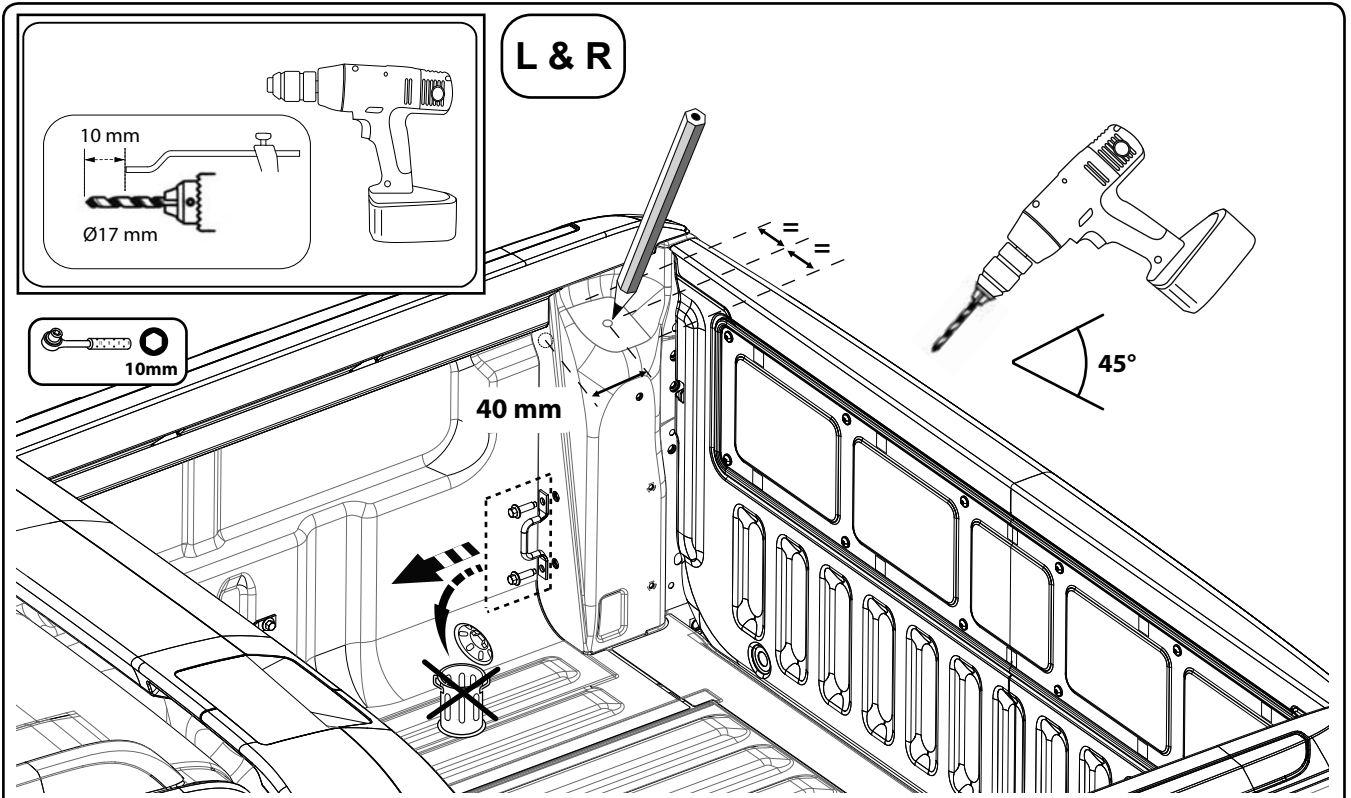


Ford Wildtrak

Mountain Top Roll

Installation Instructions

Mountain Top[®]
INDUSTRIES APS

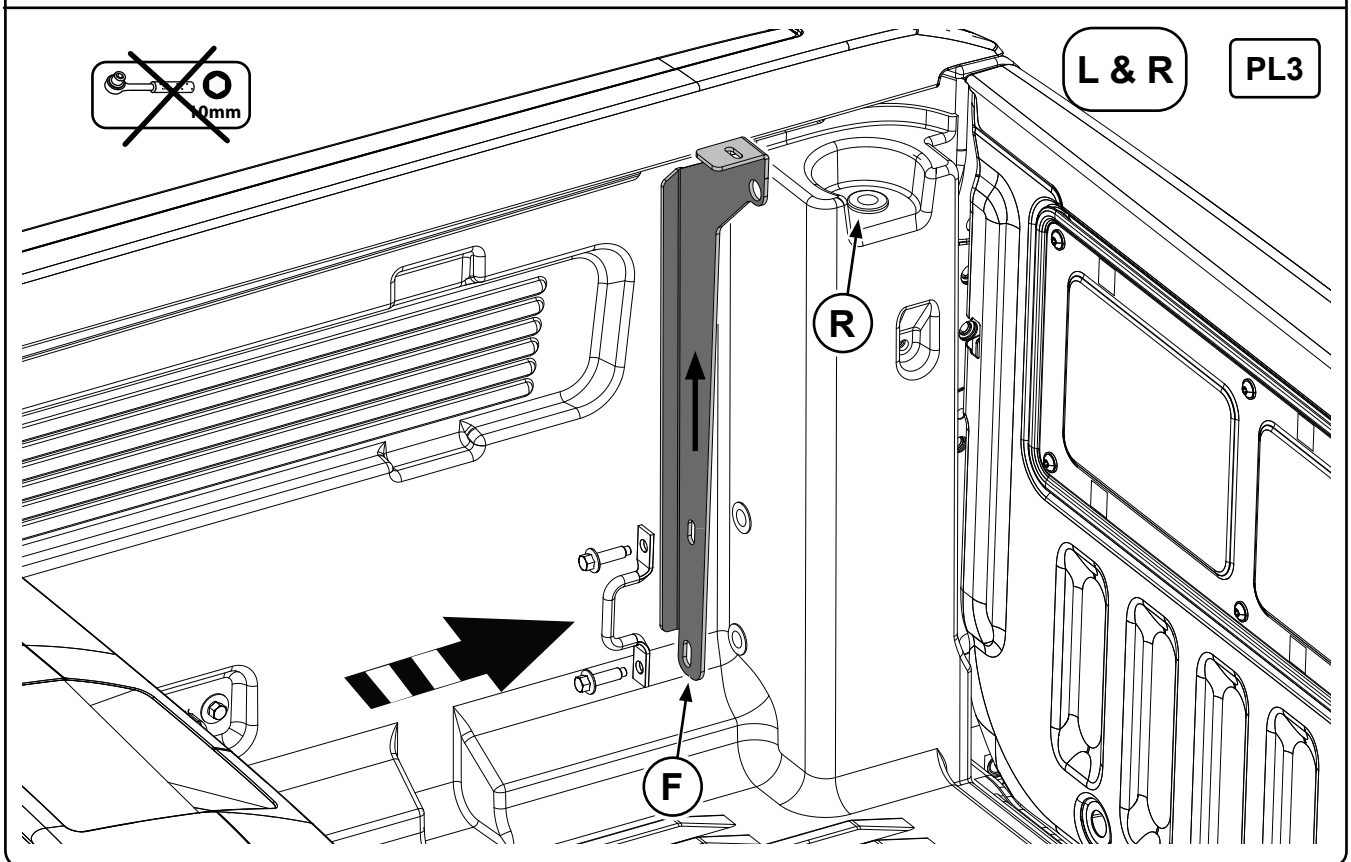
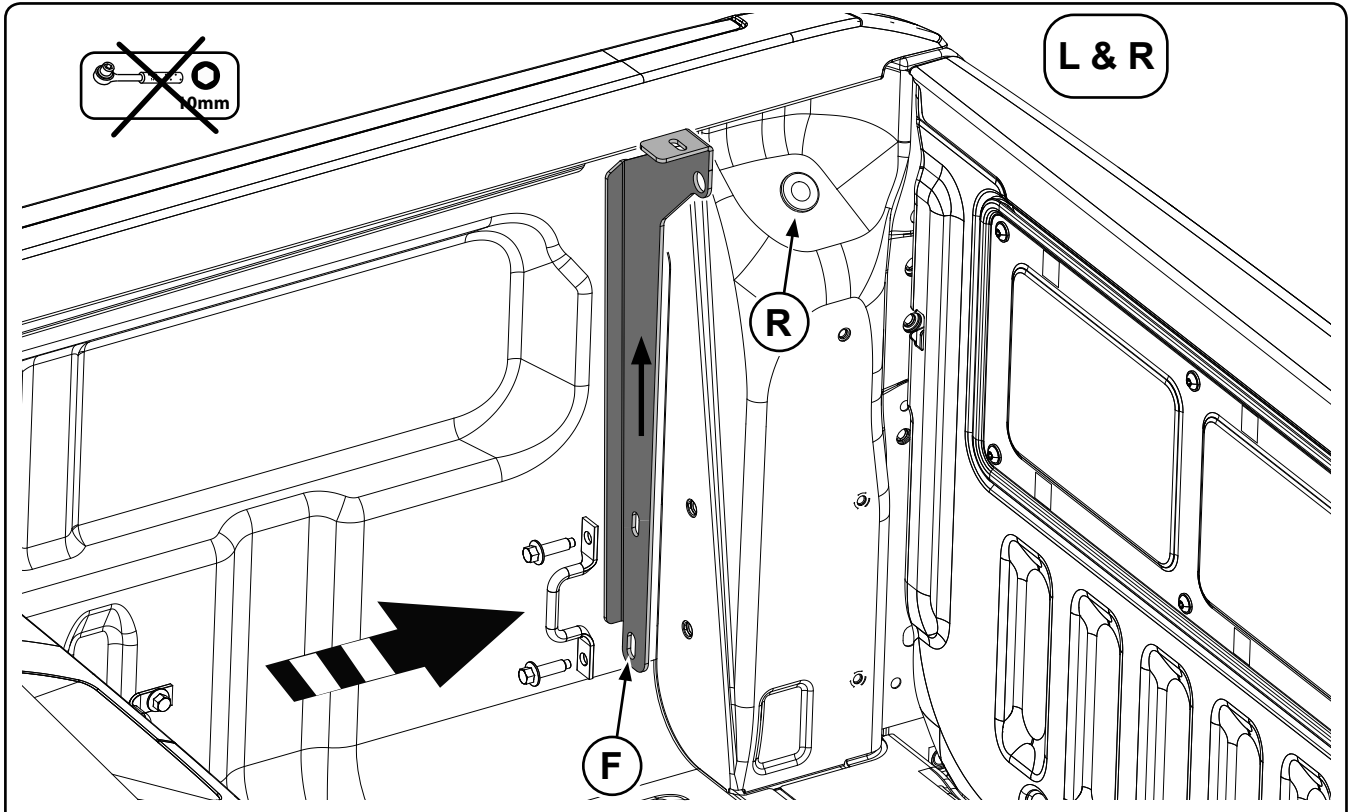


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 12/26
Pedersholmparken 10		3600 Frederikssund	Denmark	ph: +45 4810 2950 Fax +45 4810 2960
				www.mountaintop.dk

Ford Wildtrak

Mountain Top Roll

Installation Instructions

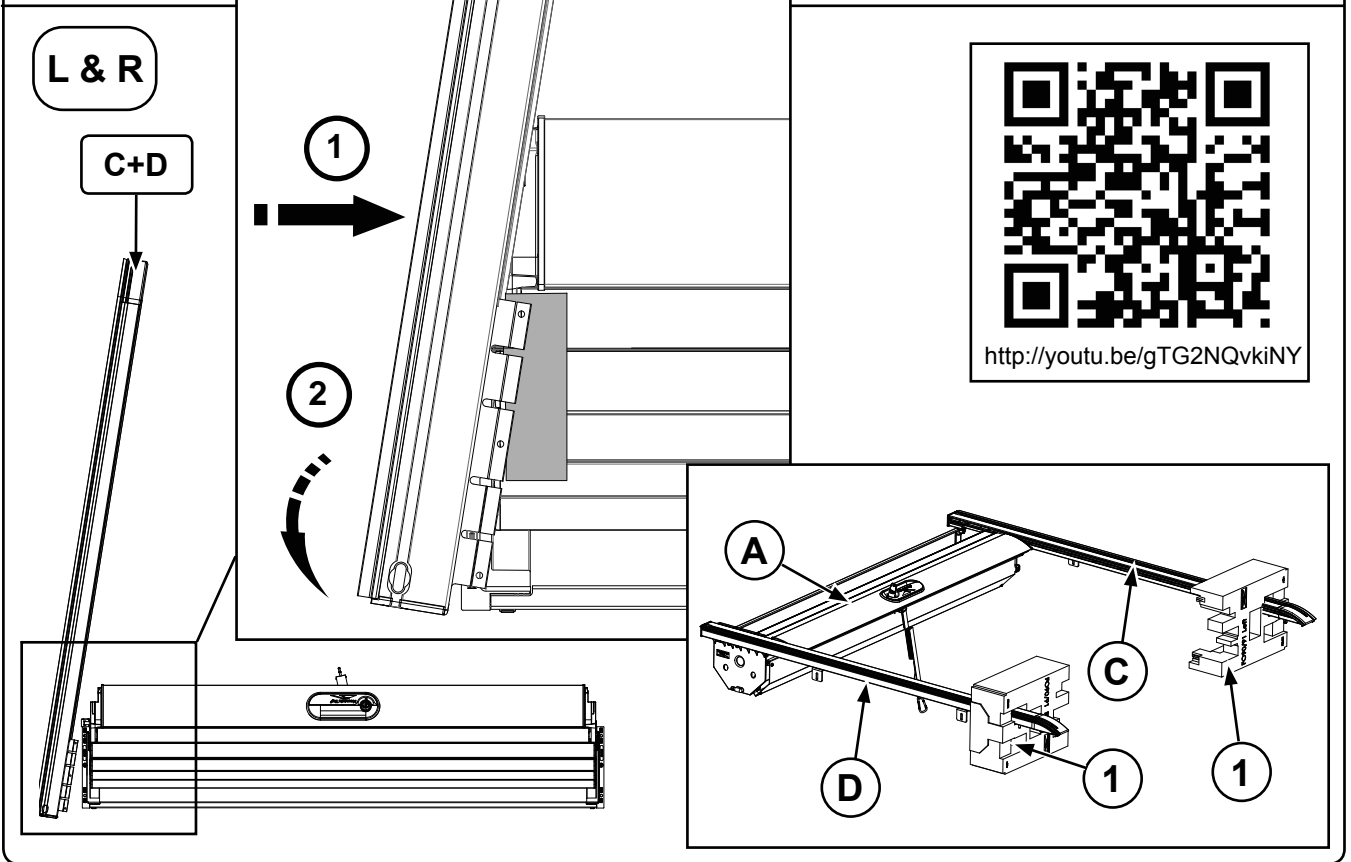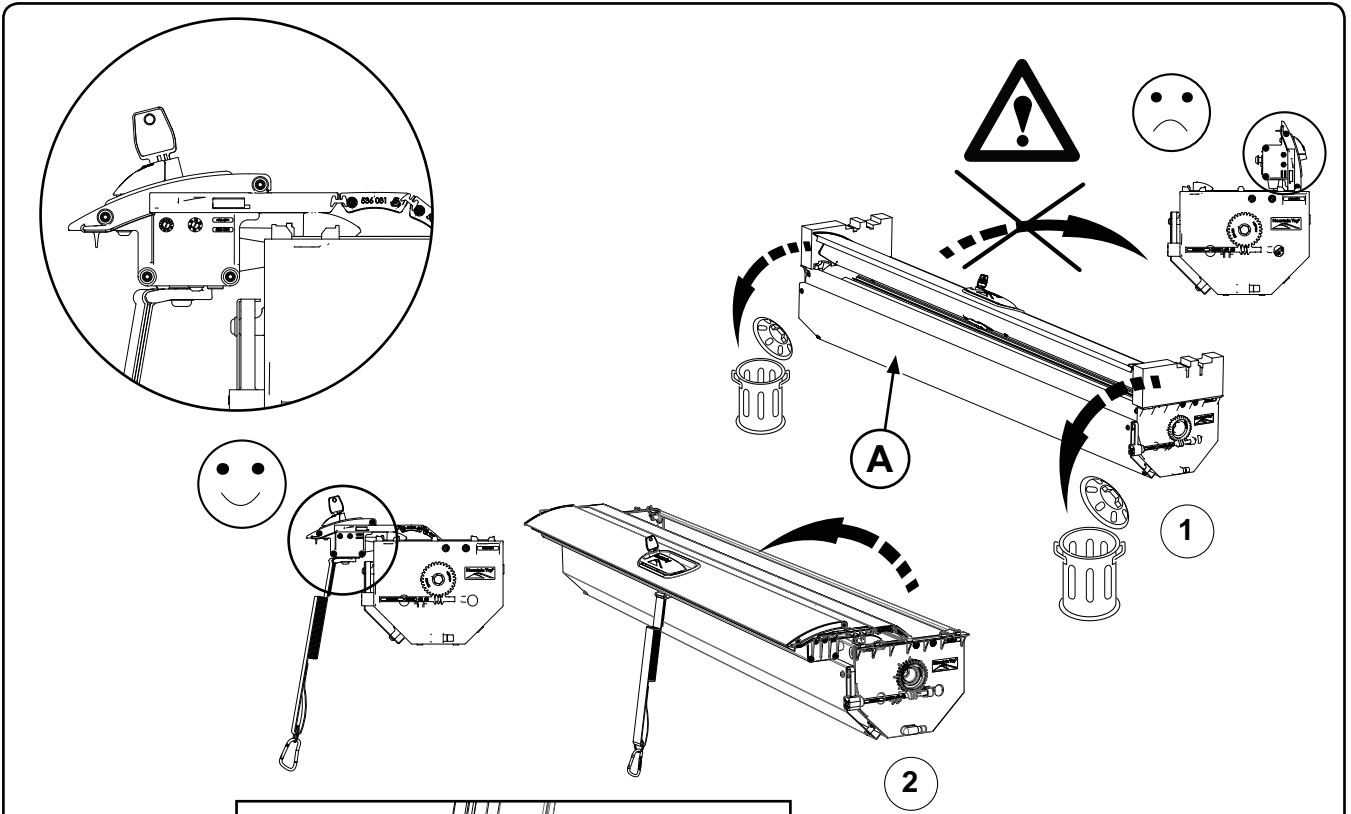


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 13/26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll

Installation Instructions


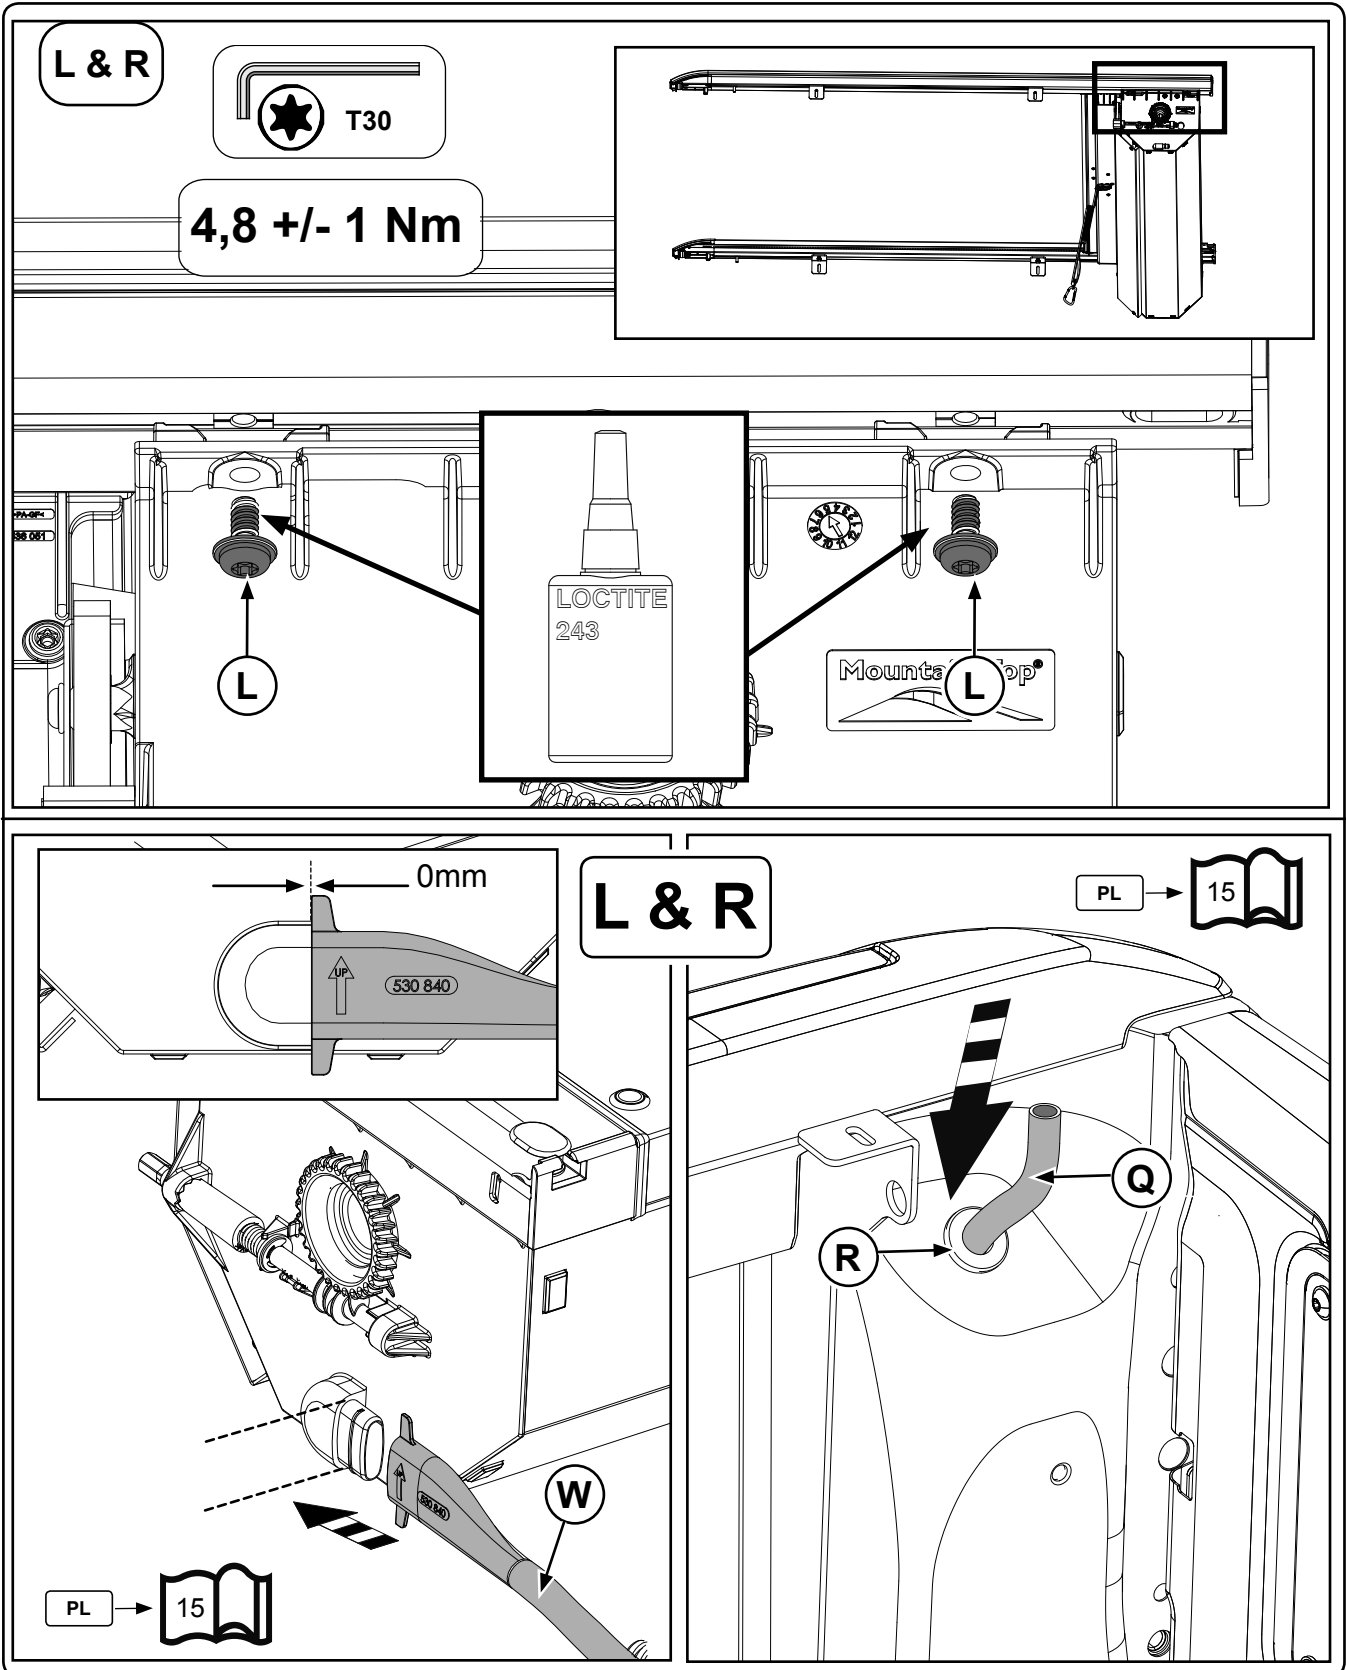


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 14/26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll



Installation Instructions

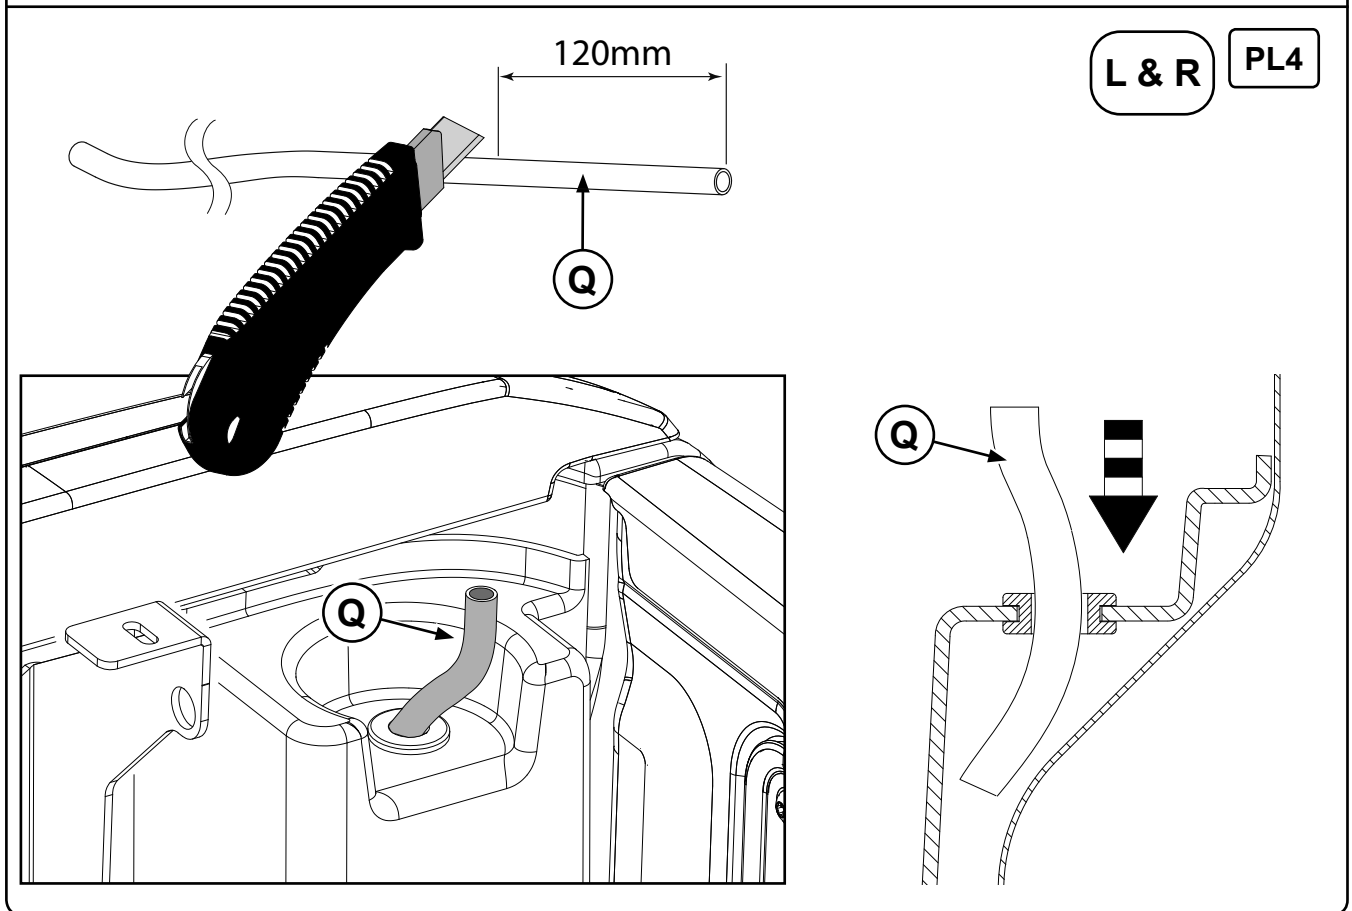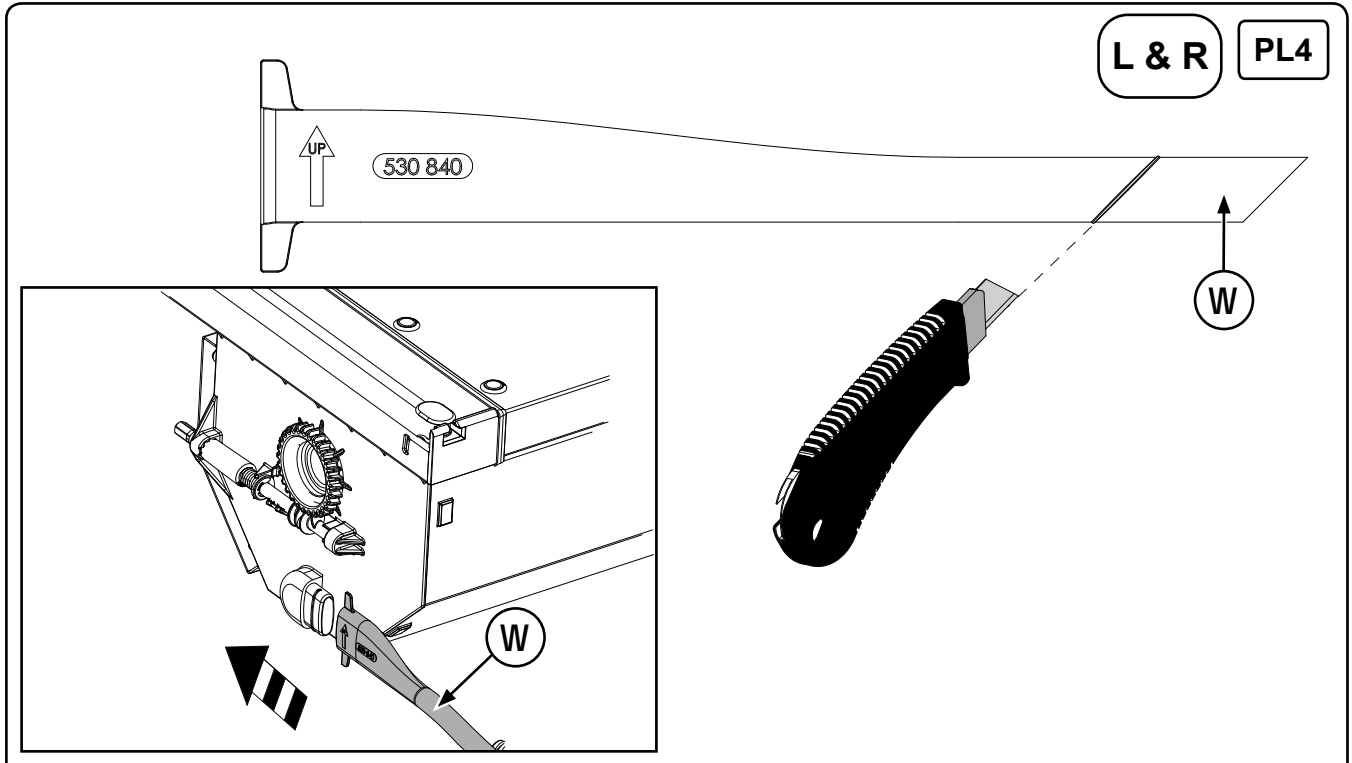

Ford Wildtrak

Mountain Top Roll

Installation Instructions

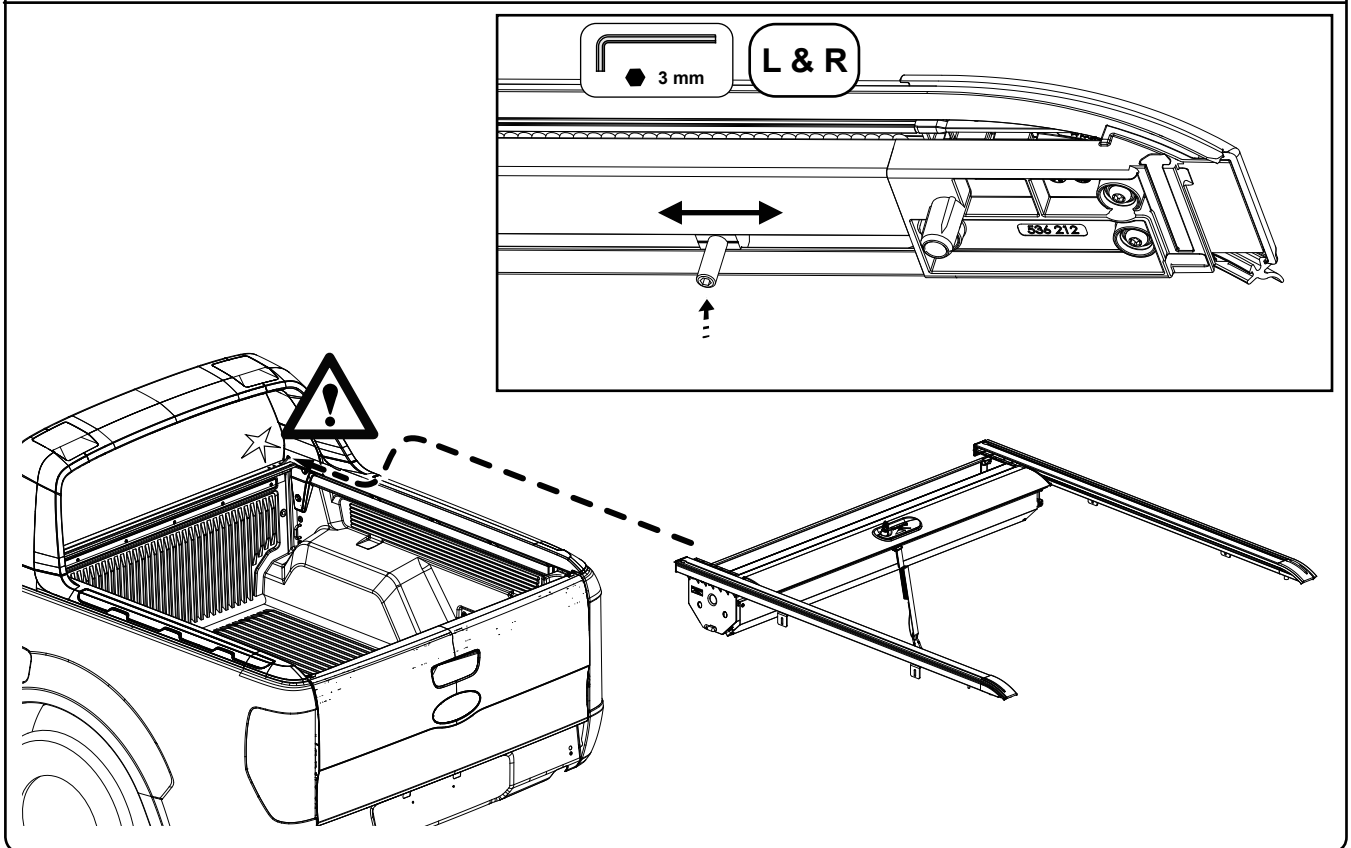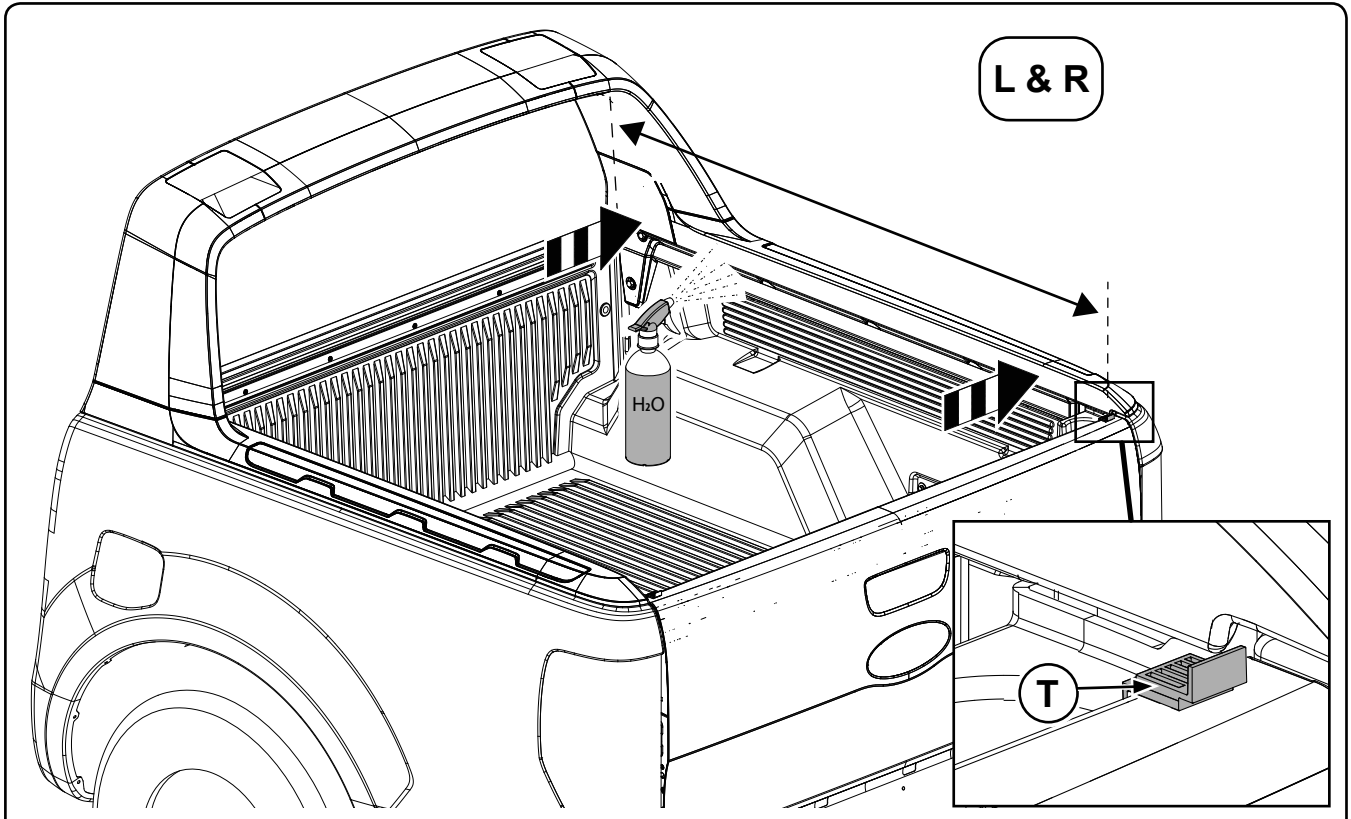


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 16/26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll

Installation Instructions

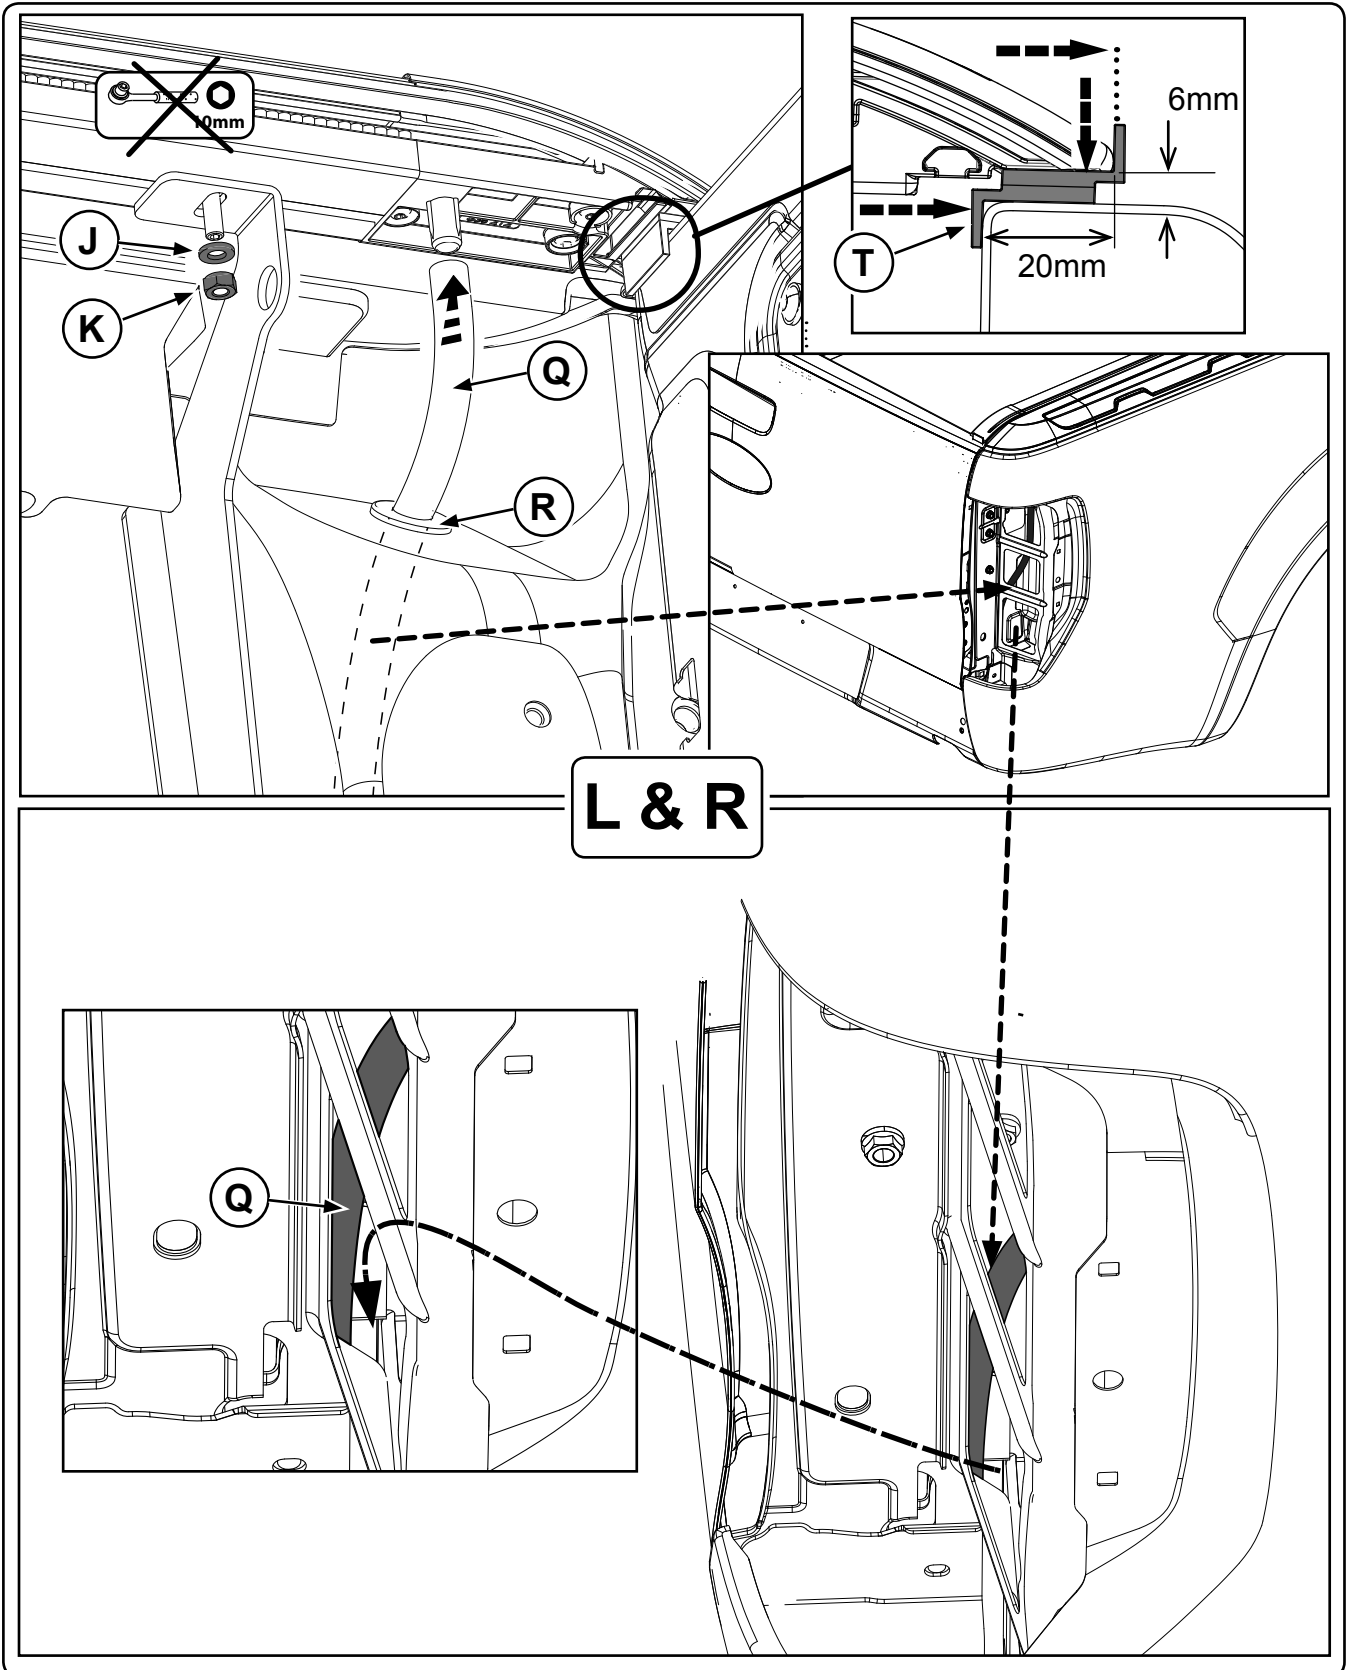


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 17/26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll

Installation Instructions

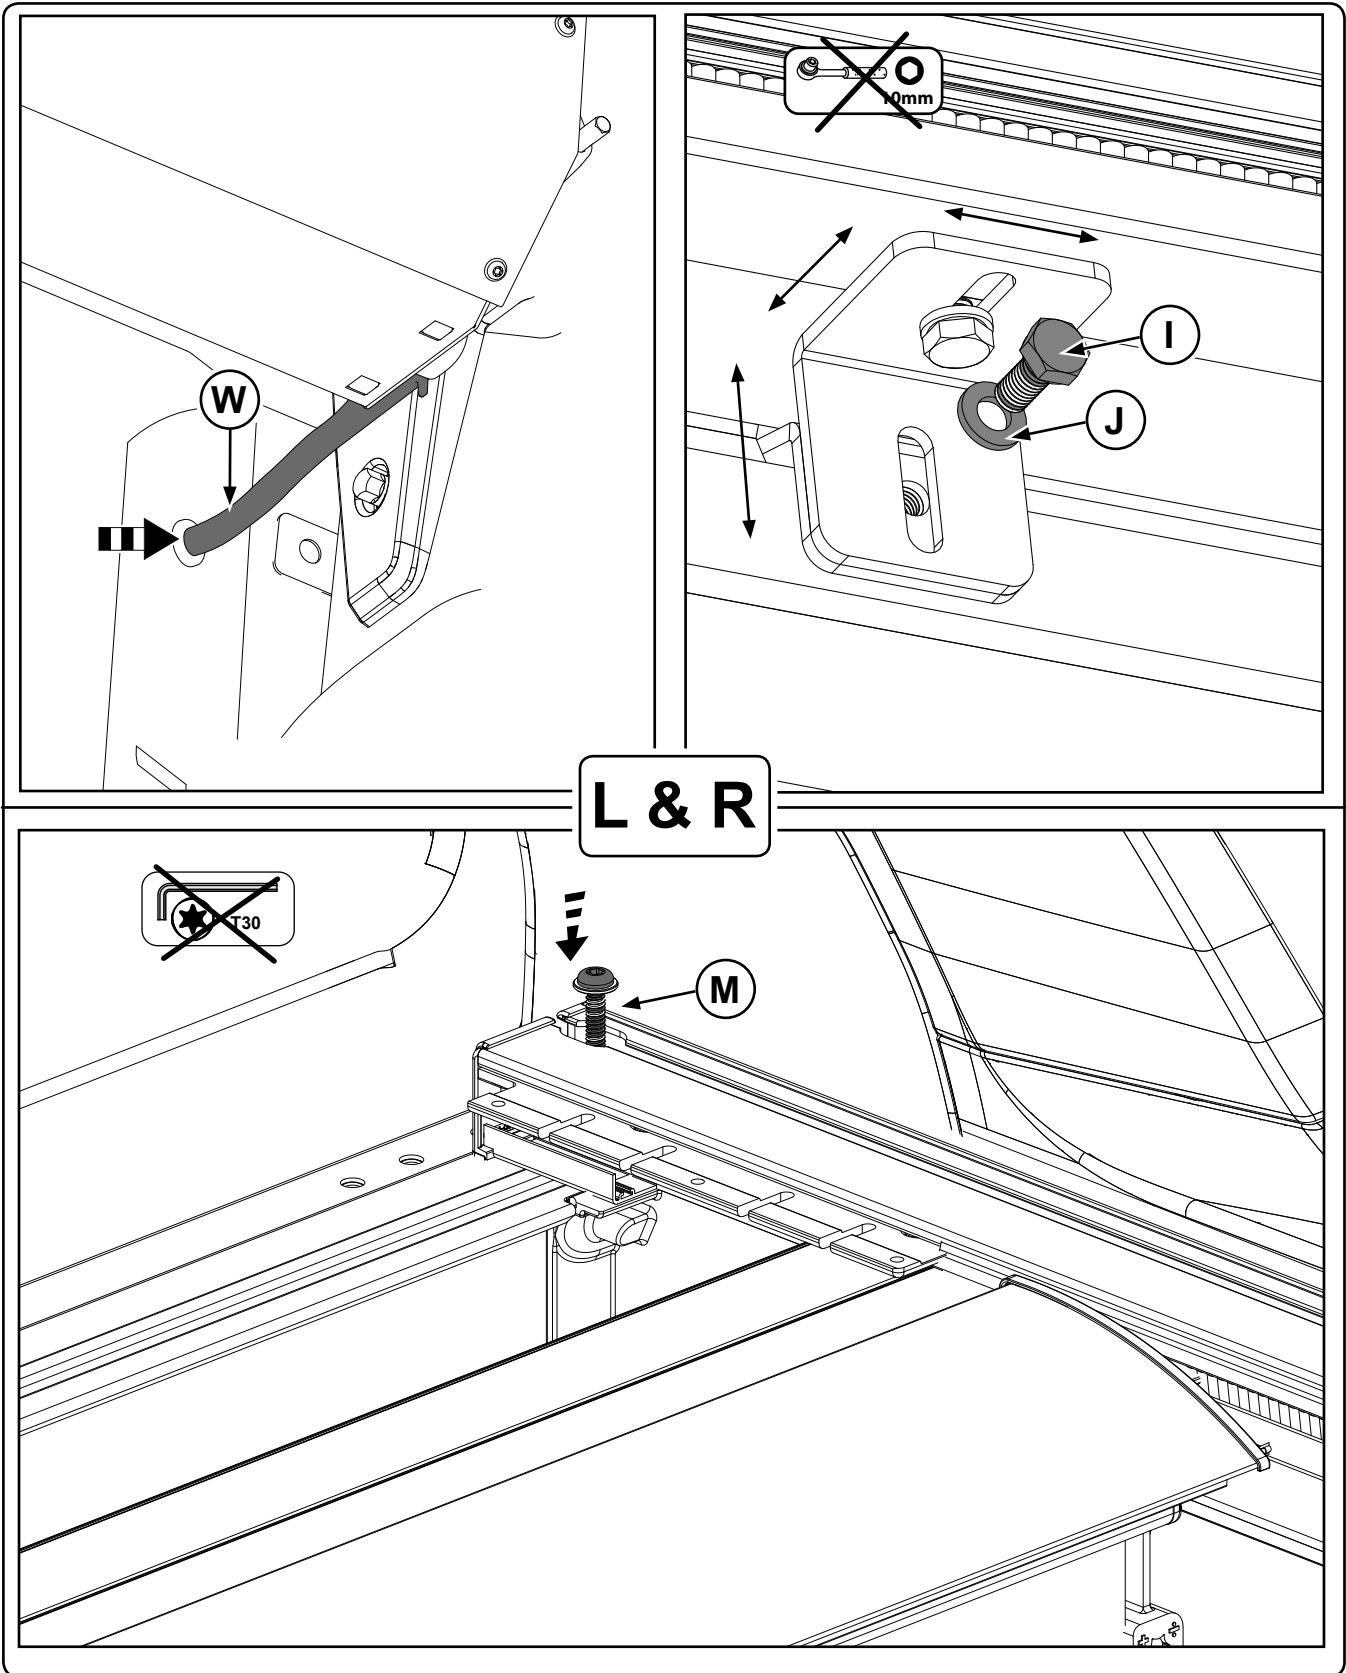


MTI-number 886 017	Issue 02	Date 21/10/2016	MTR FO90 H03	Page 18/26
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk				

Ford Wildtrak

Mountain Top Roll


Installation Instructions

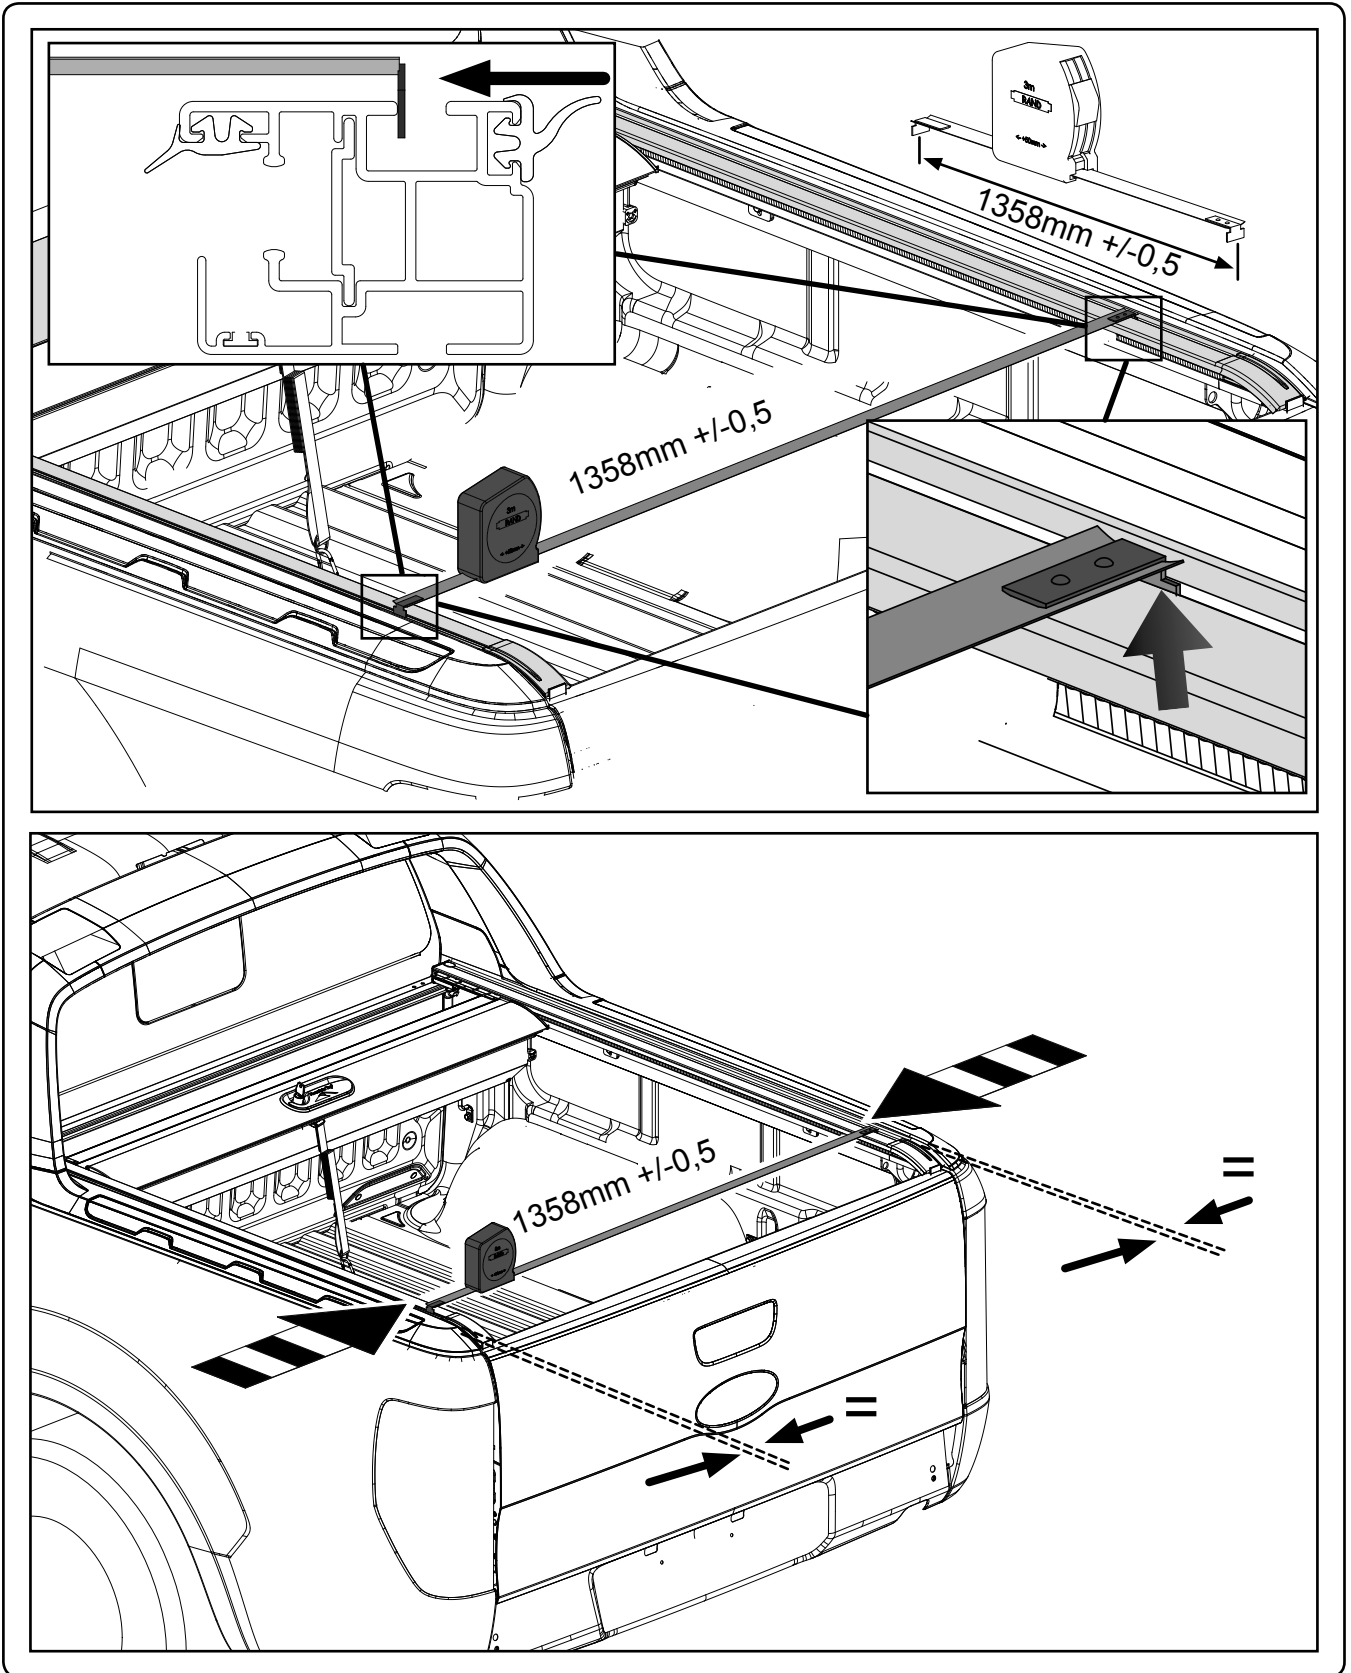

Ford Wildtrak

Mountain Top Roll



Installation Instructions

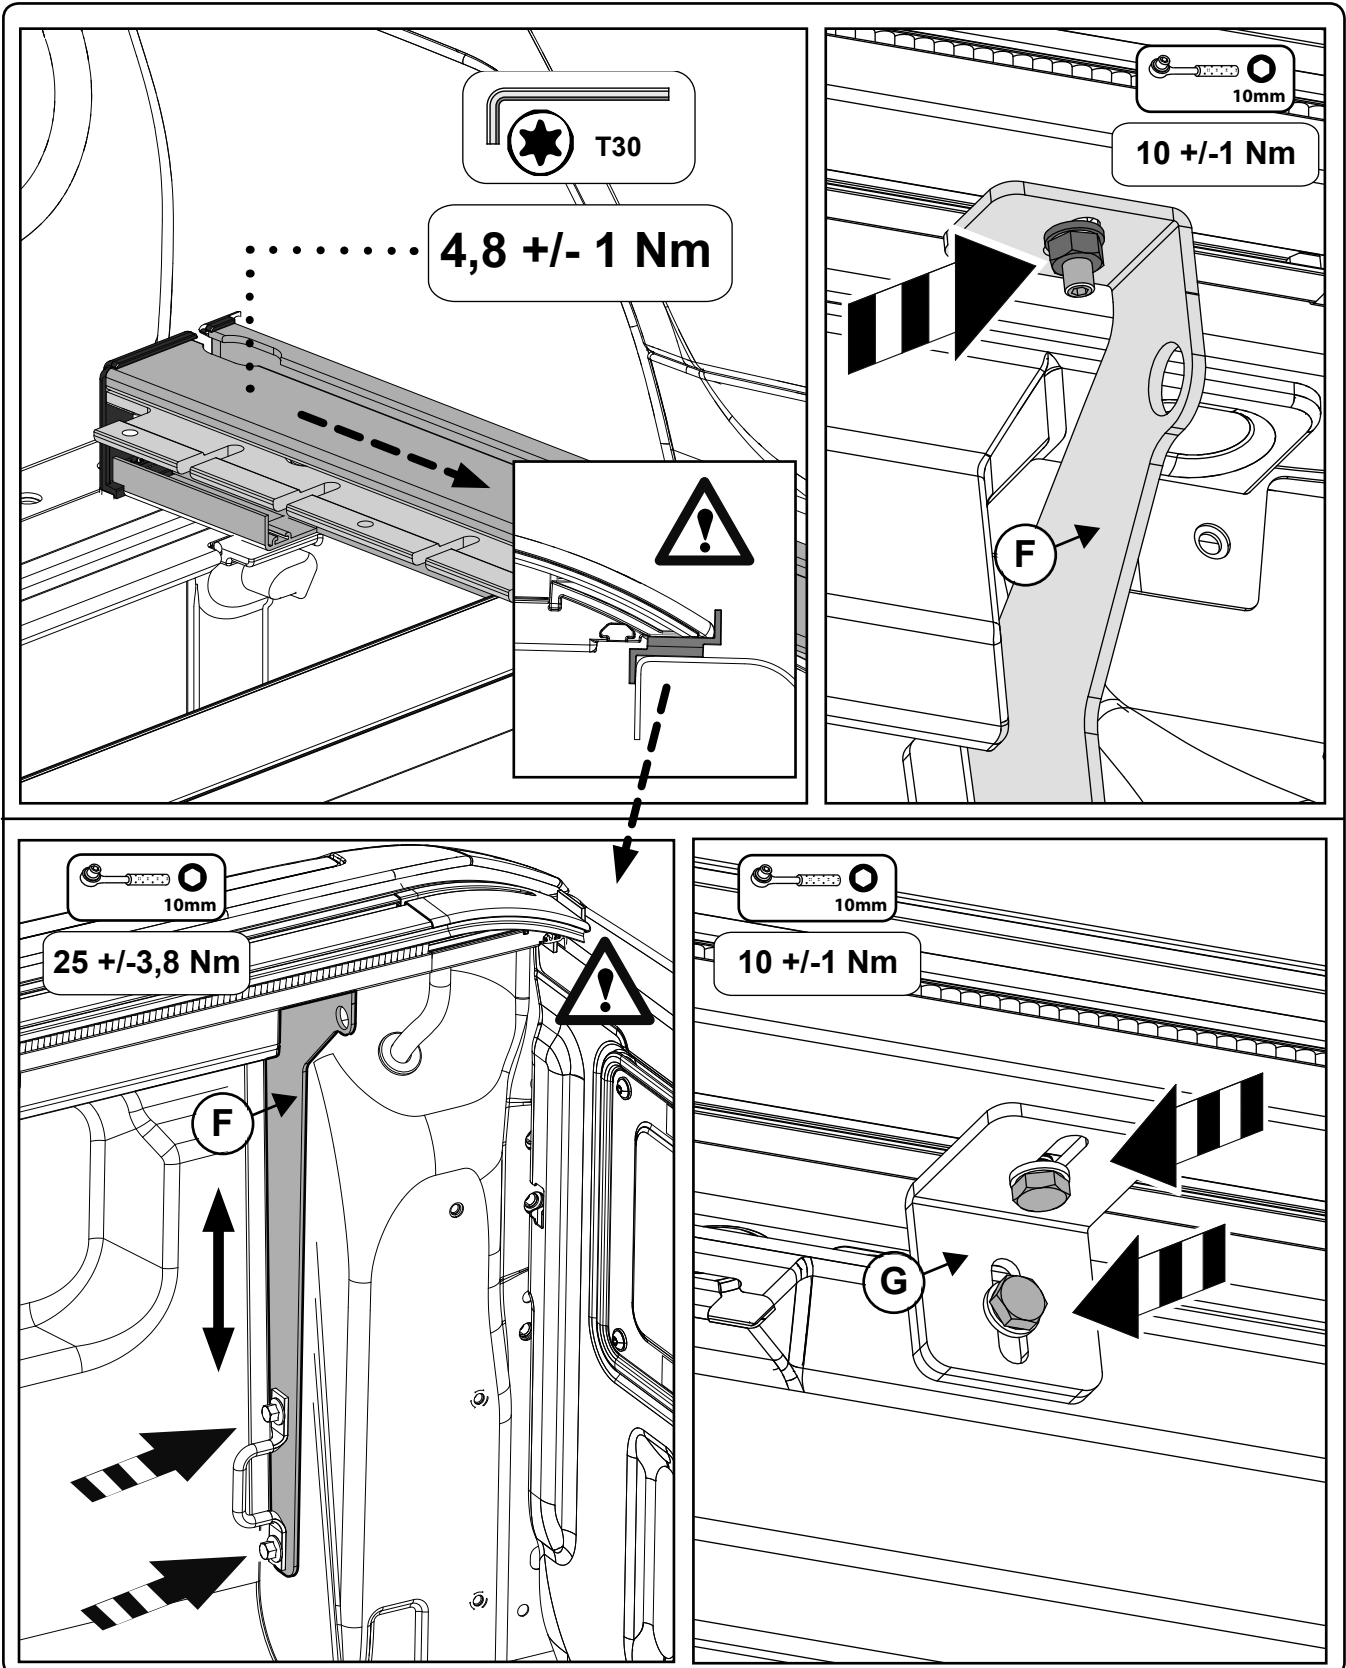

Ford Wildtrak

Mountain Top Roll



Installation Instructions

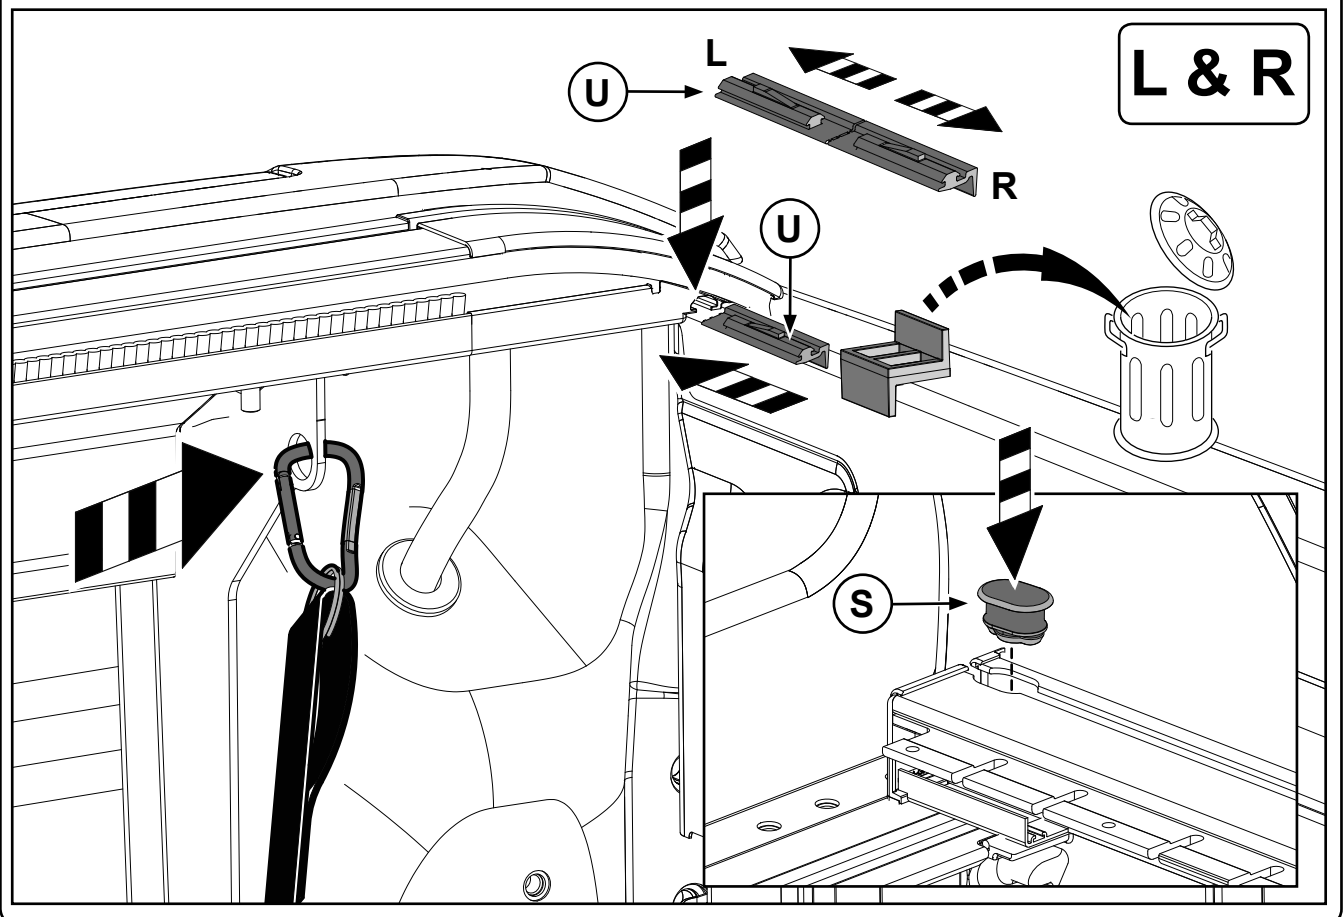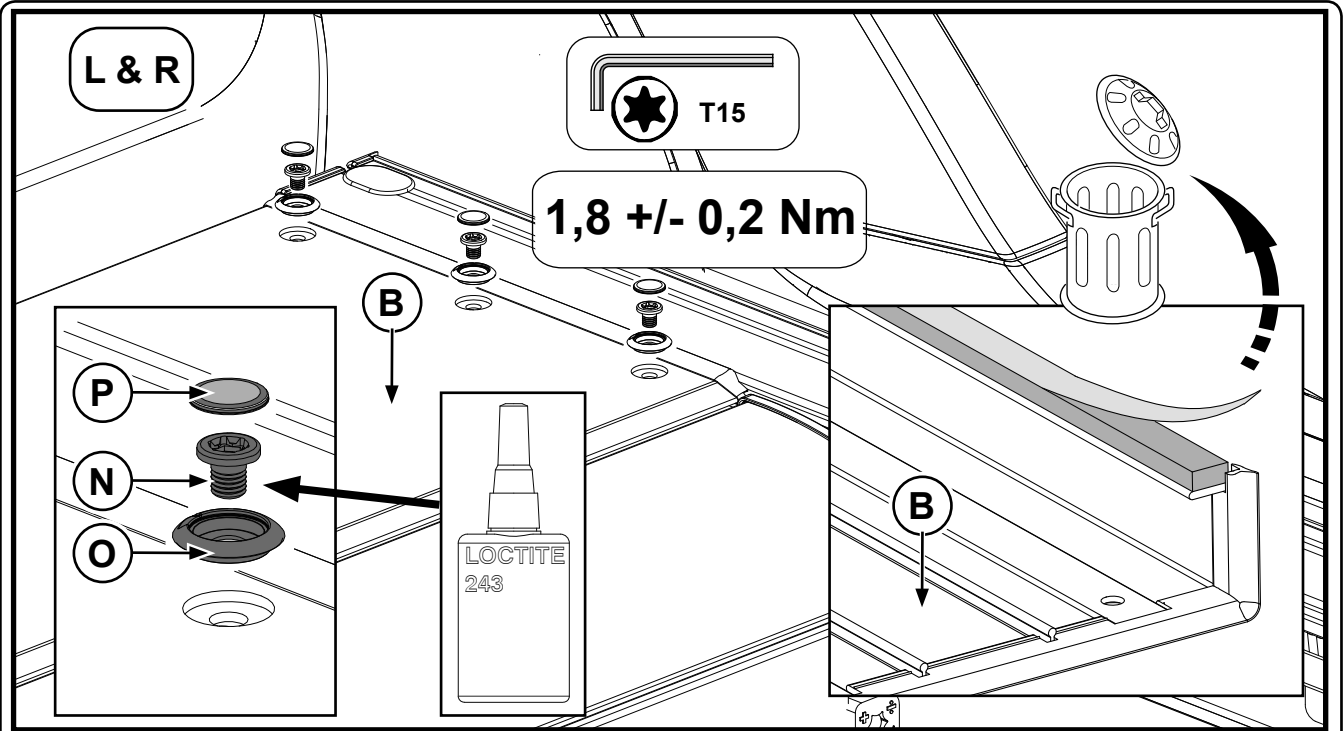

Ford Wildtrak

Mountain Top Roll


Installation Instructions

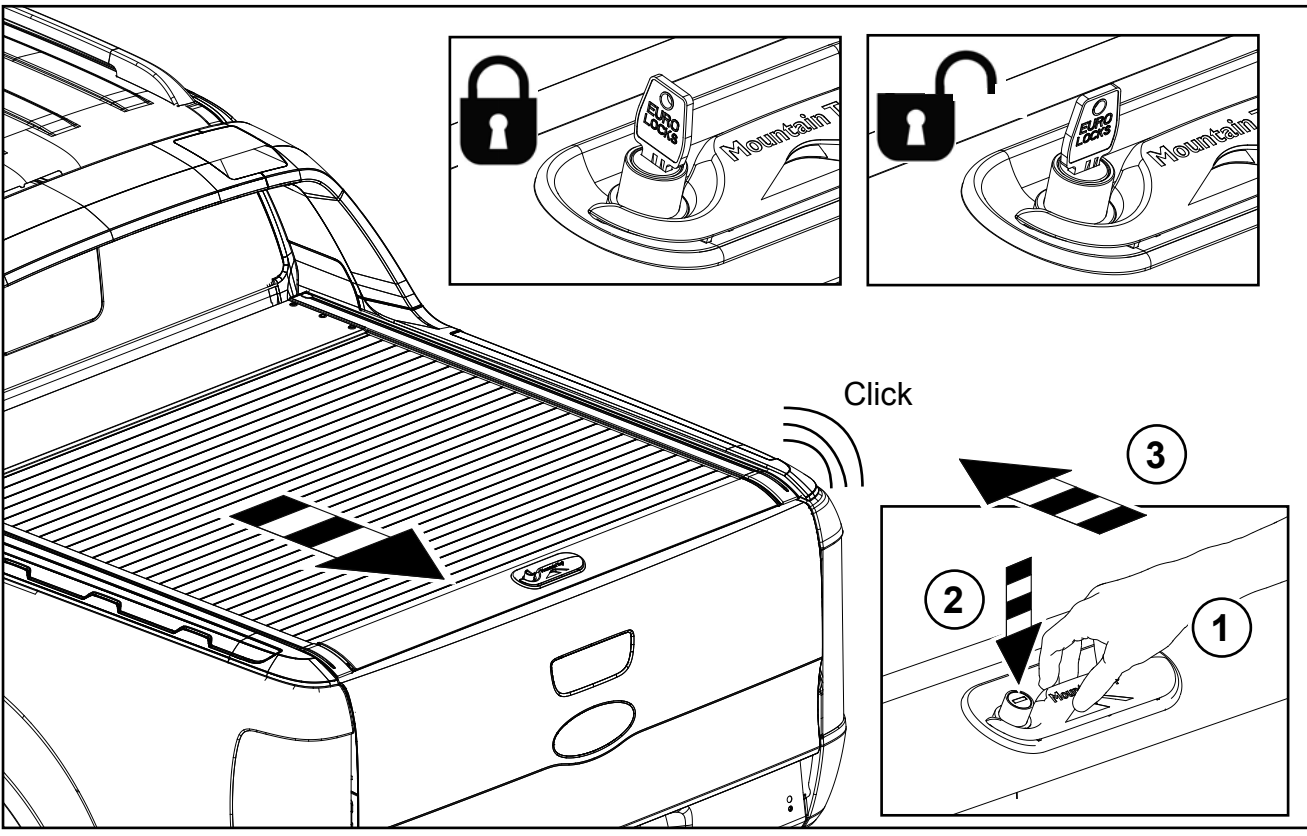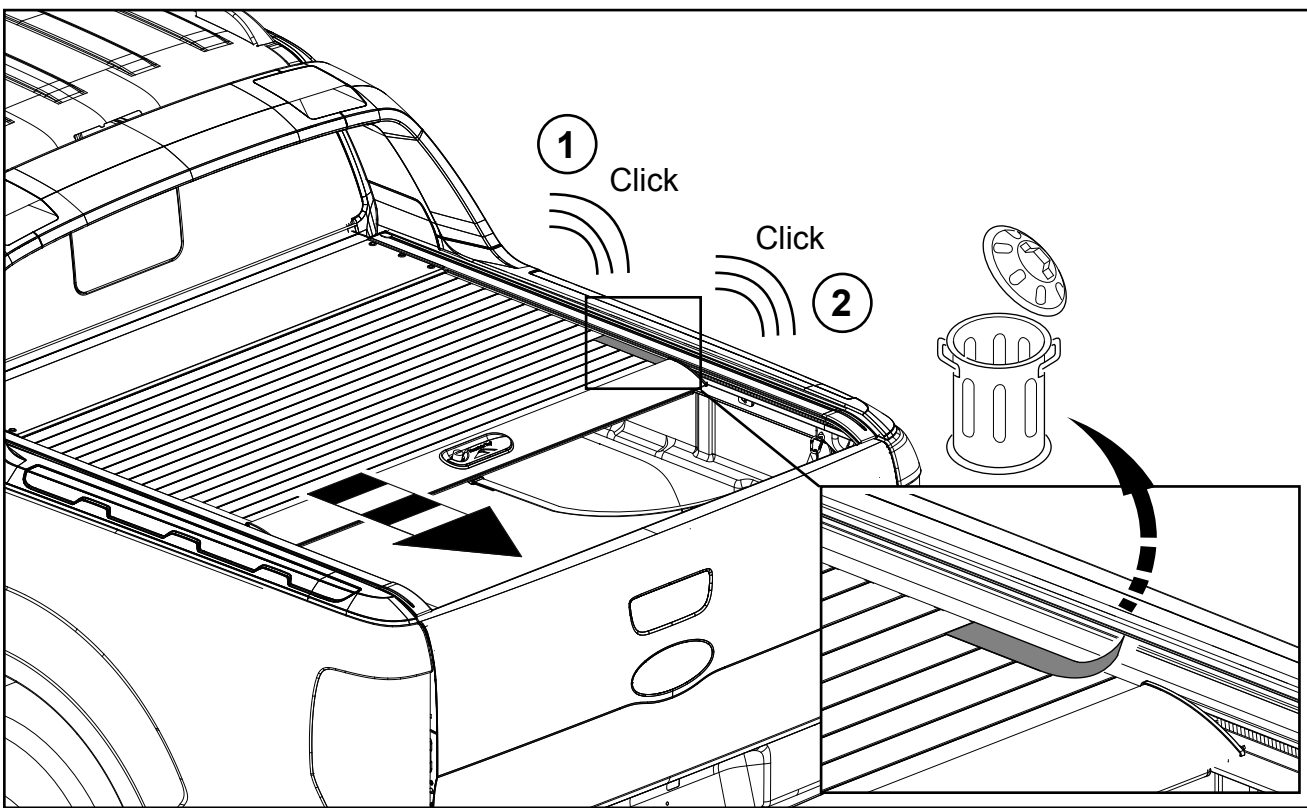

Ford Wildtrak

Mountain Top Roll

Installation Instructions



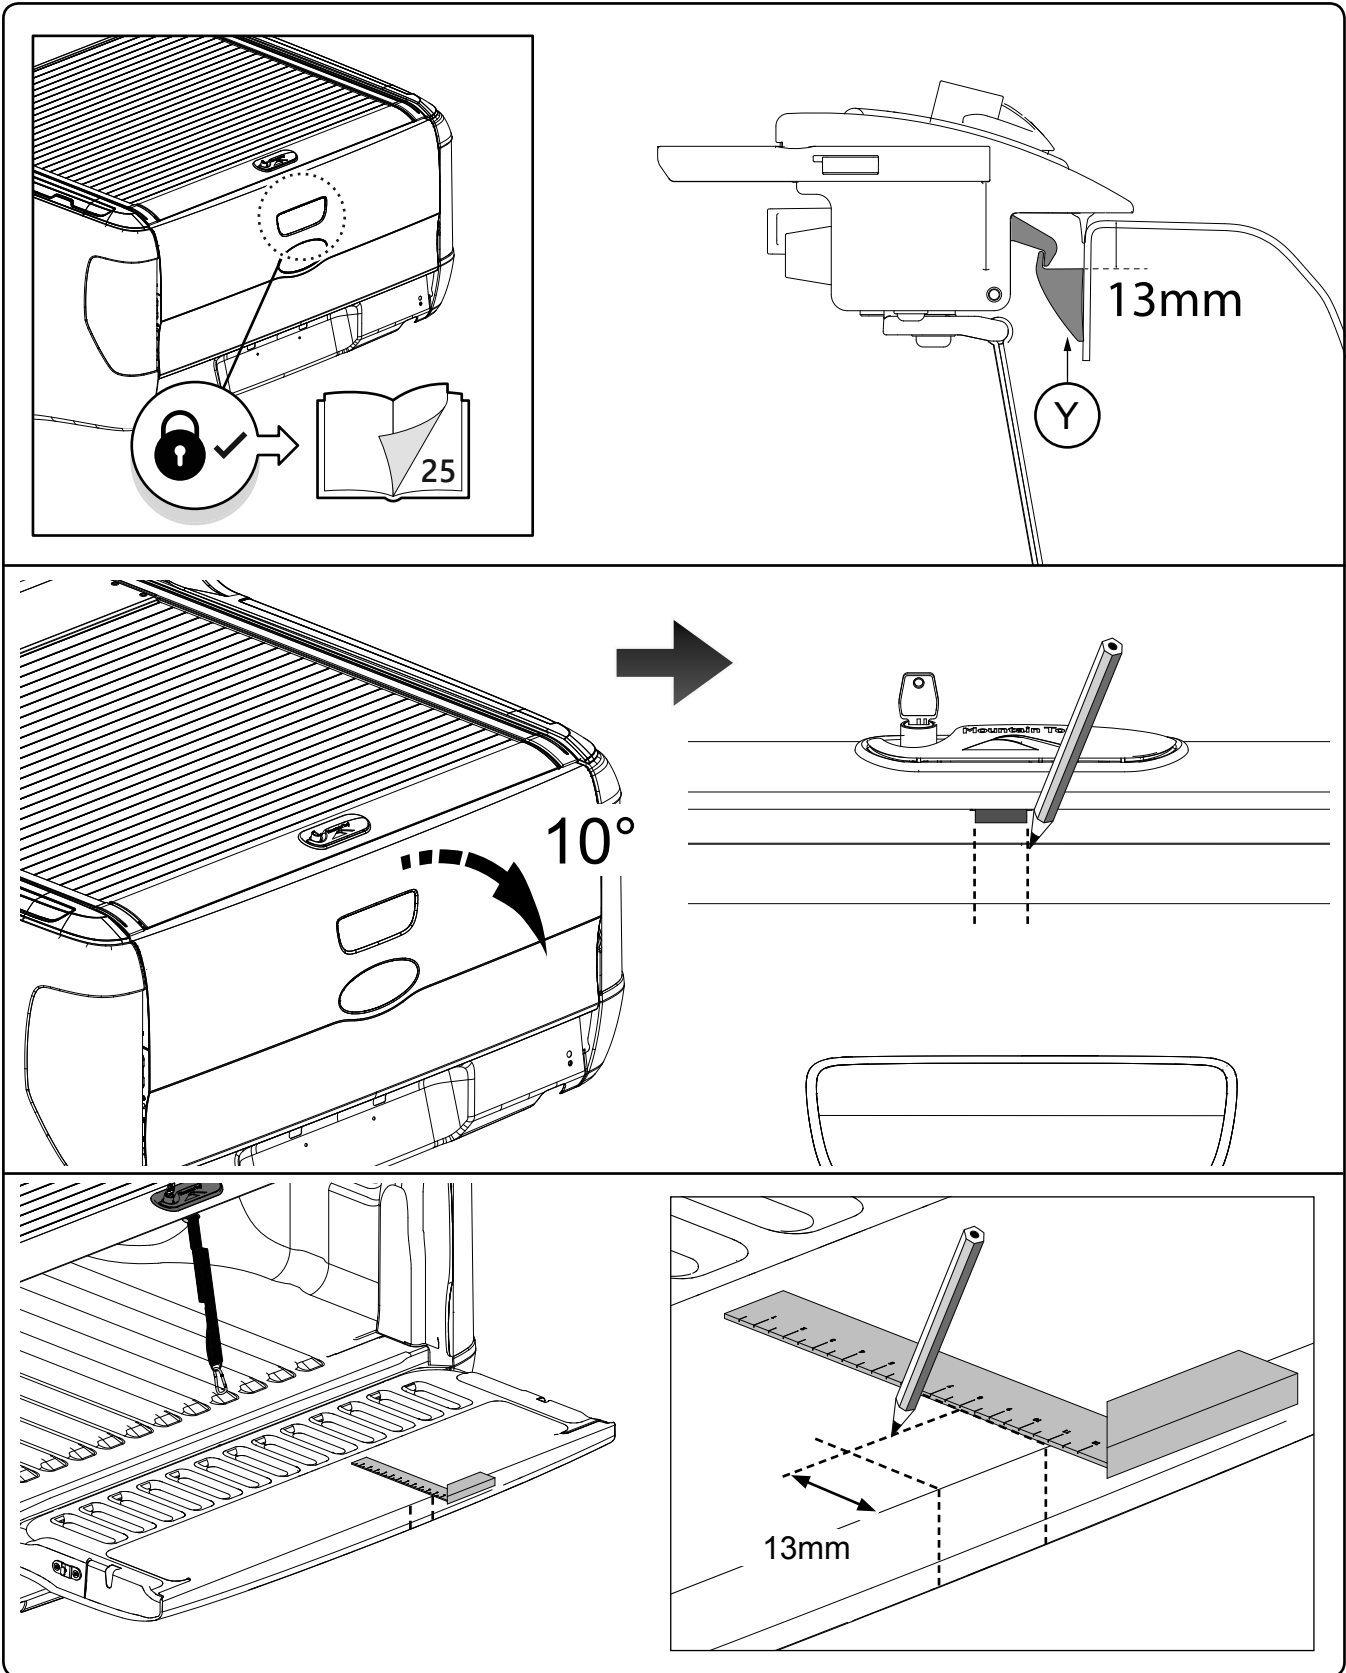


Ford Wildtrak

Mountain Top Roll

Installation Instructions





Mountain Top[®]
INDUSTRIES A P S

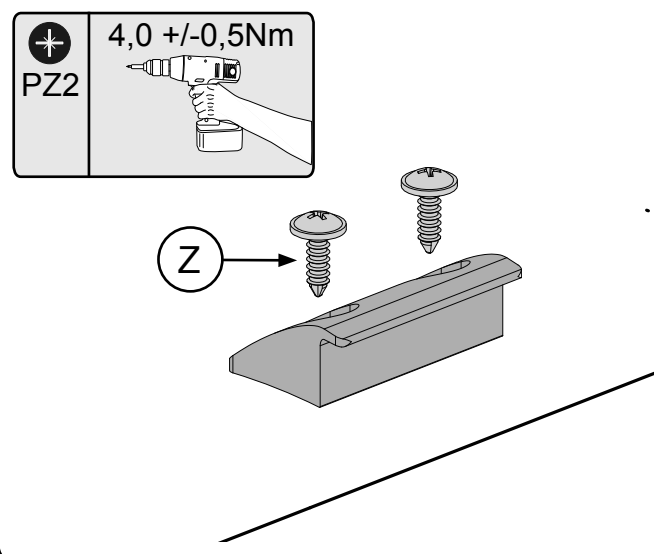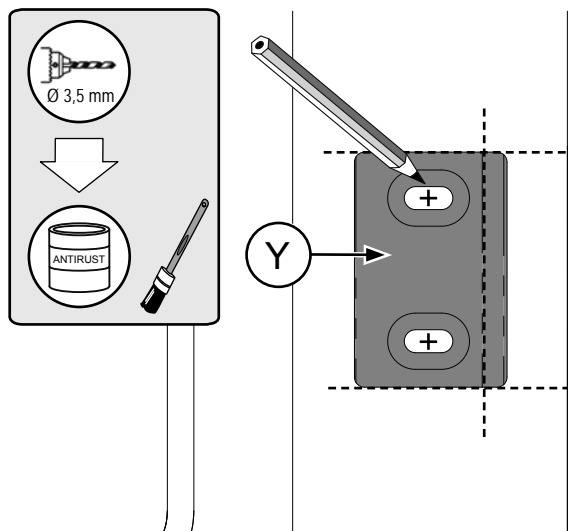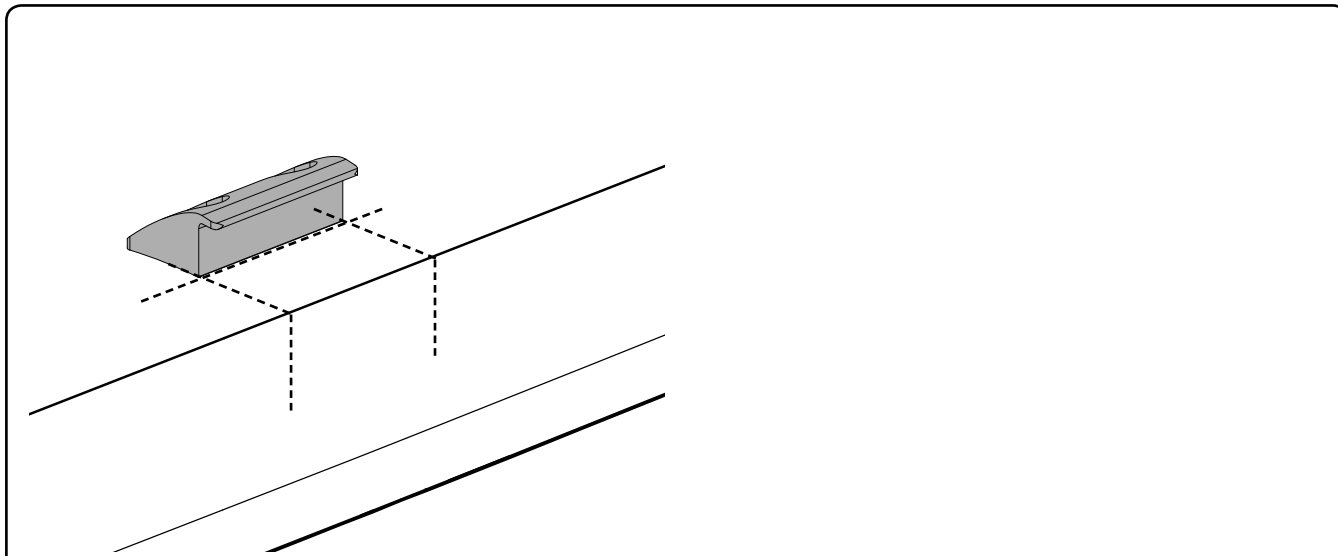

Ford Wildtrak

Mountain Top Roll

Installation Instructions

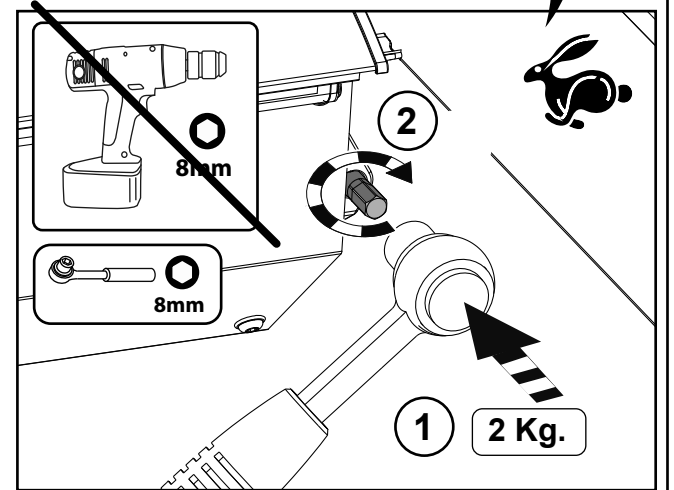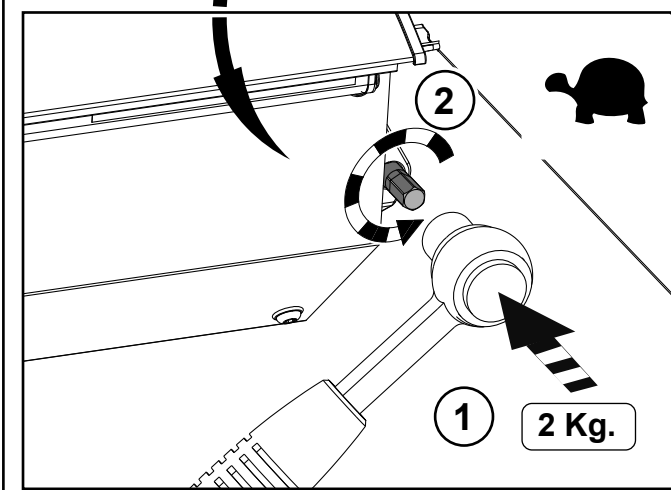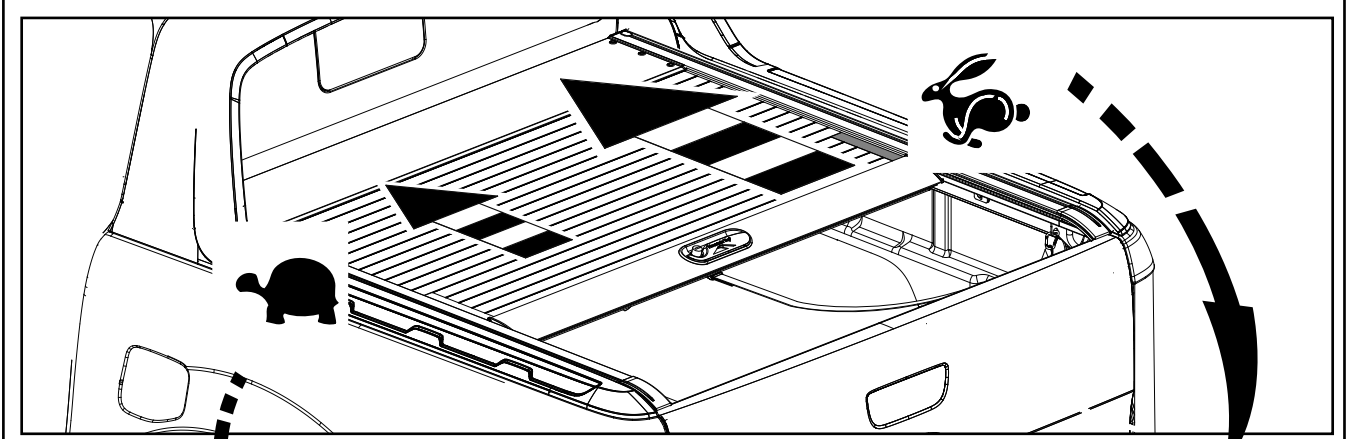
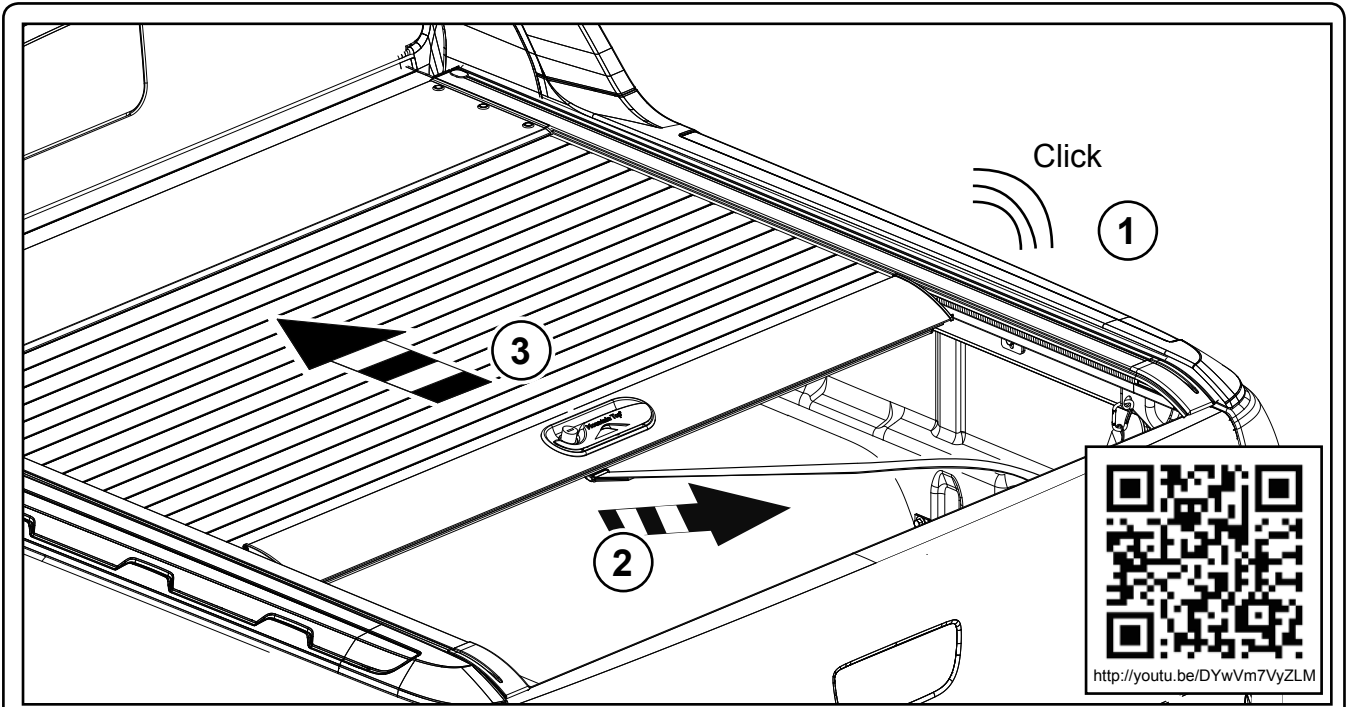


Ford Wildtrak

Mountain Top Roll

Installation Instructions

Mountain Top[®]
INDUSTRIES A P S

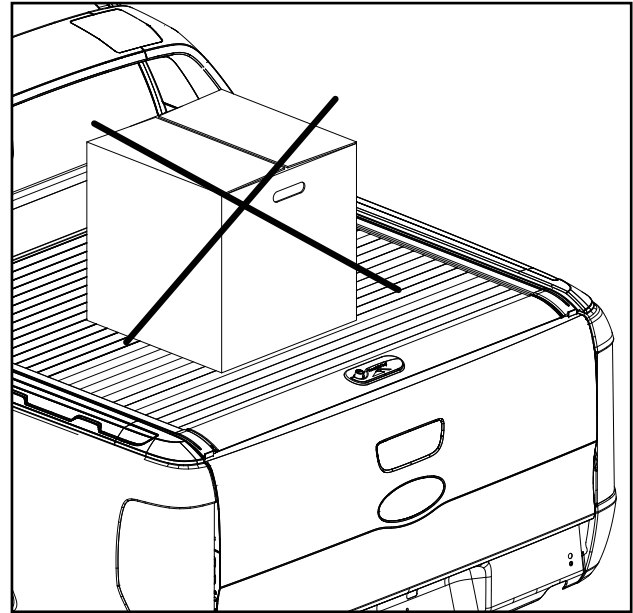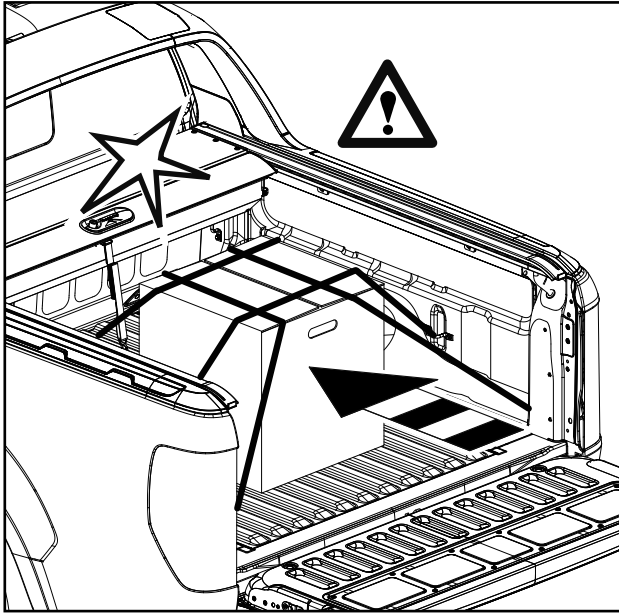

MTI-number
886 017

Issue
02

Date
21/10/2016

MTR FO90 H03

Page
26/26

Pedersholmparken 10 3600 Frederikssund Denmark

ph: +45 4810 2950

Fax +45 4810 2960

www.mountaintop.dk