

## WR19-FITTINGKIT

### Step 1

Use fitting kit diagram to check you have all components & familiarise yourself with how the integration kit goes together. – 4mm Allen key required (not supplied)



### Step 2

Remove grille from vehicle and place on a flat, protected surface with the front facing down.

### Step 3

Slide basket brackets over plastic moulding, brackets are not handed & can be used either side by rotating.





**Step 4**

Feed light bar wires through correct opening within basket bracket, it is important that the light bar is the correct way up (OSRAM logo to the top) Off side shown, it is a different opening for near side.




### **Step 5**

Screw bolt, spring washer & washer through bracket and into lightbar on the sides closest to the centre of grille first, do not tighten this fitting yet, screw in around half way.



### **Step 6**

Repeat step 5 on the sides furthest away from centre of grille, again not fully tightening.

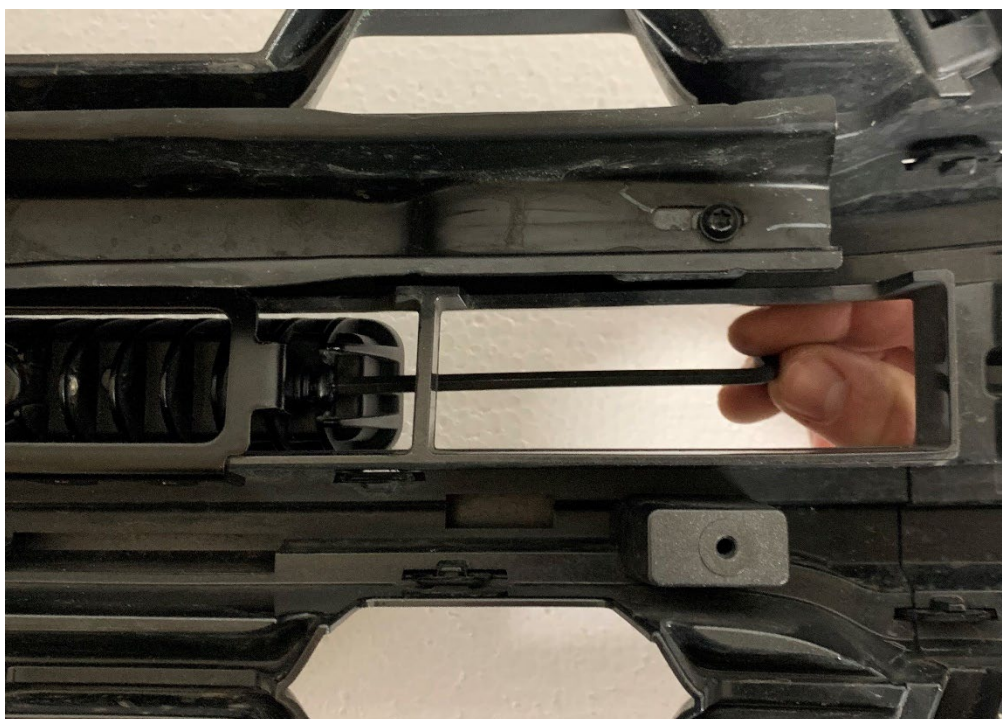

For ease, access this fitting from the outside of grille;



**Step 7**

At the ends furthest away from the centre of the grille, pull the light bar, and push the basket bracket towards each other to sandwich the grille firmly between them, and then fully tighten this side.



Once you have sandwiched the grille and tightened fitting as much as can be done from the outside of the grille, check fully tight from inside of grille.



**Step 8**

Tighten fitting on other side (centre of grille).



### Step 9

It is recommended to fit at least one of the provided self-drilling screws through any of the outside's holes on basket bracket and into the grille for extra security.



Check light bar is firmly in place and cannot move, install wiring and re fit grille to vehicle.

