


AUTOMOTIVE ACCESSORY MANUFACTURERS "fine acrylic products"
21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND
P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND
PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836
Email info@airplex.com www.airplex.com

BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

1. Clean and open bonnet.
2. Apply 3 flat bumpons in 3 places ON TOP of bonnet 3mm above chrome strip. Use supplied alcohol wipes to clean the area first.
3. Place middle of bonnet guard ON TOP of the bumpons.
4. Test Bonnet Guard on the bonnet and note the 4x holes underside of bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
5. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins".

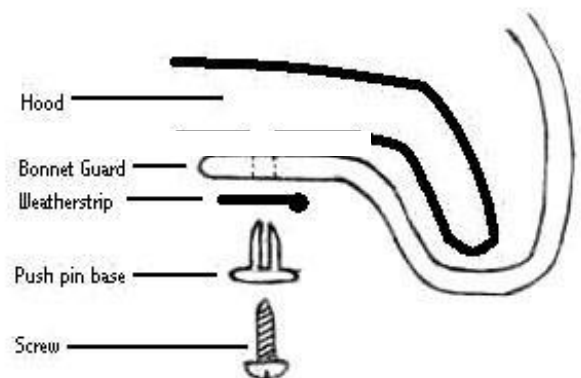

Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet.
If so, insert the bonnet guard between the bonnet and the weather-strip

**CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.
NEVER PRESS ON THE HOOD PROTECTOR.**

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.